

HT-BD6200

2.1CH Blu-ray  
Home Cinema System  
user manual

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service,  
please register your product at  
[www.samsung.com/register](http://www.samsung.com/register)



# Key features of your new Blu-ray Home Cinema

---

## PLAYER FEATURES

---

### Playback of many disc types, plus an FM Tuner

The HT-BD6200 allows you to play various discs, including BD-ROM, DVD-VIDEO, DVD-RW/-R(V mode), CD, MP3-CD, DivX and CD-R/RW, with a sophisticated FM tuner, all in a single player.

### Full HD Audio Decoding Support (DD,DD+,DOLBY TRUE-HD,DTS,DTS-HD HRA, DTS-HD MA Essential)

Please refer to [www.DOLBY.COM](http://www.DOLBY.COM) and [DTS.COM](http://DTS.COM) for more detail.

### TV Screen Saver Function

If the main unit remains in stop mode for 10 minutes, the logo appears on TV screen. The HT-BD6200 automatically switches itself into the power saving mode after 30 minutes in the Screen Saver mode.

### Power Saving Function

The HT-BD6200 automatically shuts itself off after 40 minutes in Stop mode.

### USB Host support

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Home Cinema's USB HOST function.

### HDMI

HDMI transmits Blu-Ray/DVD video and audio signals simultaneously, and provides a clearer picture. The 1080p(Full HD) resolution provides even clearer pictures.

### AV SYNC Function

Video may lag behind the audio if the unit is connected to a digital TV. To compensate for this, you can adjust the audio delay time to sync up with the video.

### Anynet+(HDMI-CEC) Function

Anynet+ is a function that can be used to operate the main unit of this system using a Samsung TV remote control, by connecting the Blu-ray Home Cinema to a SAMSUNG TV using an HDMI Cable. (This is only available with SAMSUNG TVs that support Anynet+.)

### Bluetooth Function

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!



### iPod & iPhone support

You can enjoy music files by connecting your iPod to the home cinema with the supplied iPod dock.

### BD Wise

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them. This feature is enabled only if BD Wise-compliant Samsung products are connected to each other using an HDMI cable.

## BLU-RAY DISC FEATURES

Blu-ray Discs support the highest quality HD video available in the industry - Large capacity means no compromise on video quality. Furthermore, a Blu-ray Disc has the same familiar size and look as a DVD.

\* The following Blu-ray Disc features are disc dependant and will vary. Appearance and navigation of features will also vary from disc to disc. Not all discs will have the features described below.

### Video highlights

The BD-ROM format for movie distribution supports three highly advanced video codecs, including AVC, VC-1, and MPEG-2.

HD video resolutions are also available:

- 1920 x 1080 HD
- 1280 x 720 HD

### For High-Definition Playback


To view high-definition contents on a Blu-ray disc, an HDTV (High Definition Television) is required. Some discs may require using the player's HDMI OUT to view high-definition content. The ability to view high-definition content on Blu-ray disc may be limited depending on the resolution of your TV.

### Subtitles

You may be able to select different font styles, sizes and colours for the subtitles, Subtitles may also be animated, scrolled or faded in and out, depending on what is contained on the Blu-ray Disc.

### BD-LIVE


You can use a Blu-ray Disc supporting BD-LIVE through network connection to enjoy various contents provided by the disc manufacturer.

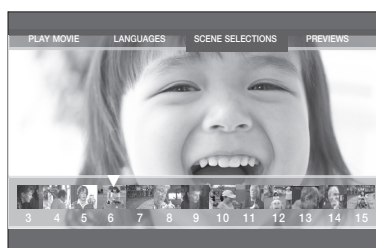


# Key features of your new Blu-ray Home Cinema

## WHAT'S INCLUDED


Check for the supplied accessories below.

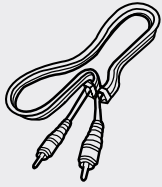


Video Cable

 


FM Antenna

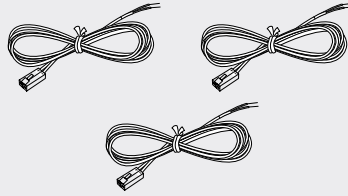

Speaker Wire (3 EA)

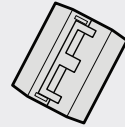

Toroidal Ferrite Core

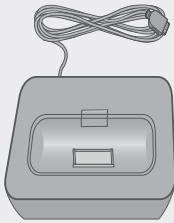

iPod Dock



User's Manual




Remote Control  
/ Batteries (AAA size)

# Safety information

## SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).  
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

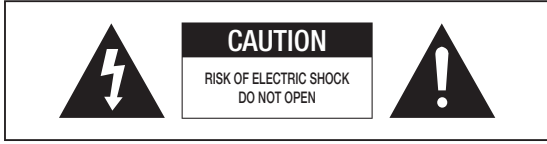

This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

**CLASS 1 LASER PRODUCT**  
**KLASSE 1 LASER PRODUKT**  
**LUOKAN 1 LASER LAITE**  
**KLASS 1 LASER APPARAT**  
**PRODUCTO LASER CLASE 1**

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION** : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

**WARNING** : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION** : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

### CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

## Wiring the Main Power Supply Plug (UK Only)

### IMPORTANT NOTICE


The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used. Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer. If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance. However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord. Never attempt to insert bare wires directly into a mains socket. A plug and fuse must be used at all times.

### IMPORTANT



The wires in the mains lead are coloured in accordance with the following code:- BLUE = NEUTRAL BROWN = LIVE  
As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:-  
The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.  
The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

**WARNING** : DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.


# PRECAUTIONS

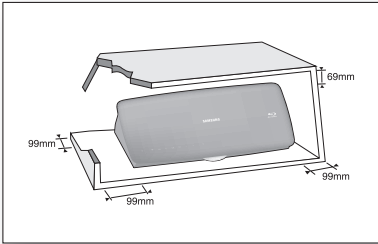


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10cm). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the Disc Insert slot is empty. This player is designed for continuous use. Switching off the Blu-ray Home Cinema to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

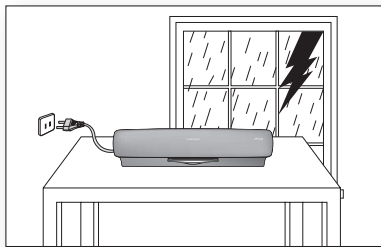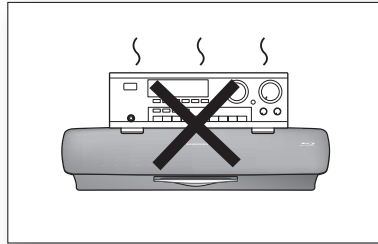

During thunderstorms, disconnect the AC main plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

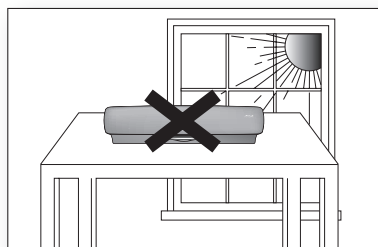


Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

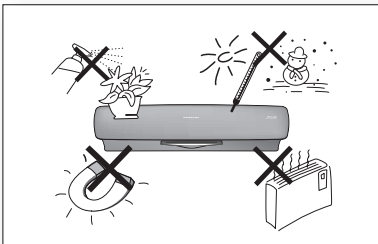

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

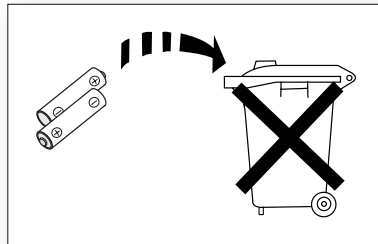

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

**"This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited."**

# Contents

---

## KEY FEATURES OF YOUR NEW BLU-RAY HOME CINEMA

2

- 2 Player Features
- 3 Blu-ray Disc Features
- 4 What's Included

## SAFETY INFORMATION

5

- 5 Safety Warnings
- 6 Precautions

## GETTING STARTED

10

- 10 Before Reading the User's Manual
- 11 Disc Type and Characteristics

## DESCRIPTION

14

- 14 Front Panel
- 15 Rear Panel

## REMOTE CONTROL

16

- 16 Tour of the Remote Control
- 18 Setting the Remote Control

## CONNECTIONS

20

- 20 Connecting the Speakers
- 22 Connecting the Video Out to Your TV
- 24 Connecting an iPod
- 26 Connecting Audio from External Components
- 28 Connecting to the Network
- 30 Connecting the FM Antenna
- 30 Cooling Fan
- 30 Attaching the Toroidal Ferrite Core to the Power Cord of the Main Unit

## BASIC FUNCTIONS OF YOUR BLU-RAY HOME CINEMA

31

- 31 Before Playing
- 32 On-Screen Menu Navigation
- 32 Playing a Disc
- 33 Setting the Sound
- 33 Using the Search and Skip Functions
- 34 Slow Motion Play/Step Motion Play

## SYSTEM SETUP

35

- 35 Setting the Clock

## LANGUAGE SETUP

36

- 36 Setting up the Language Options

# Contents

---

<b>AUDIO SETUP</b>	37	Setting up the Speaker Options
37		
<b>DISPLAY SETUP</b>	40	Setting up the Display Options
40		Setting up the Video Display/Output Options
<b>HDMI SETUP</b>	44	Setting up the HDMI Setup Options
44		
<b>PARENTAL SETUP</b>	47	Setting up the Parental Lock
47		
<b>NETWORK SETUP</b>	49	Setting up the Network Setup Options
49		
<b>BD DATA MANAGEMENT</b>	54	System Device Management
54		
<b>SYSTEM UPGRADE</b>	55	Firmware Upgrade
55		System Information
		Firmware Upgrade Notification
		DivX (R) Registration
<b>WATCHING A MOVIE</b>	58	Using the Display Function
58		Using the Disc Menu & Popup/Title Menu
		Repeat Play
		Selecting the Audio Language
		Selecting the Subtitle Language
		Changing the Camera Angle
		PIP (Picture In Picture) Settings
		BD-LIVE™
		DivX Playback

**LISTENING TO MUSIC**

66

- 66 Buttons on the Remote Control Used for Audio CD(CD-DA)/ MP3 Disc Playback
- 66 Repeat Audio CD(CD-DA) & MP3
- 67 Playing an Audio CD(CD-DA)/MP3

**VIEWING A PICTURE**

69

- 69 Viewing a Picture
- 69 Slide Show/Speed
- 69 Rotate
- 70 Zoom
- 70 Go To Photo List

**USING THE USB FUNCTION**

71

- 71 Playing Media Files Using the USB Host Feature

**RADIO**

73

- 73 Listening to Radio
- 73 Presetting Stations
- 74 About RDS Broadcasting

**USING BLUETOOTH**

76

- 76 What is Bluetooth?
- 76 To connect the Blu-ray Home Cinema to a Bluetooth device

**USING AN iPod**

78

- 78 Listening to Music
- 80 Watching a Movie

**PC STREAMING FUNCTION**

81

- 81 Connecting to a Pc and Playing Mp3, Jpeg or Divx Content

**CONVENIENT FUNCTION**

83

- 83 Sleep Timer Function
- 83 Adjusting Display Brightness
- 83 Mute Function

**TROUBLESHOOTING**

84

**APPENDIX**

86














- 86 Cautions on Handling and Storing Discs
- 87 Specifications

# Getting started

## BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

### Icons that will be used in manual

Icon	Term	Definition
	BD-ROM	This involves a function available on a BD-ROM.
	BD-RE	This involves a function available on the BD-RE.
	BD-R	This involves a function available on the BD-R.
	DVD-VIDEO	This involves a function available on DVD-Video or DVD-RW/-R discs that have been recorded and finalised in Video Mode.
	DVD-RW	This involves a function available on DVD-RW. (V mode and finalised only)
	DVD-R	This involves a function available on DVD-R. (V mode and finalised only)
	Audio CD	This involves a function available on an audio CD-RW/CD-R (CD-DA format).
	MP3	This involves a function available on DVD-RW/-R, CD-RW/CD-R discs and USB storage devices.
	JPEG	This involves a function available on DVD-RW/-R, CD-RW/CD-R discs and USB storage devices.
	DivX	This involves a function available with MPEG4 discs. (DVD-R/RW, CD-R/RW)
	USB storage device	This involves a function available on USB storage device.
	Caution	This involves a case where a function does not operate or settings may be cancelled.
	Note	This involves tips or instructions on the page that help each function operate.

### About the use of this user's manual

- 1) Be sure to be familiar with Safety Information before using this product. (See pages 5~6)
- 2) If a problem occurs, check the Troubleshooting. (See pages 84 ~85)







### Copyright

©2009 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.












## DISC TYPE AND CHARACTERISTICS

### Disc types that can be played

Disc Types	Disc Logo	Recorded content	Disc Shape	Max. Playing minute
BD-ROM BD-RE/BD-R		AUDIO + VIDEO	Single sided	Playing time depends on the Title
DVD-VIDEO		AUDIO + VIDEO	Single sided(12 cm)	240
			Double sided(12 cm)	480
			Single sided(8 cm)	80
			Double sided(8 cm)	160
AUDIO-CD		AUDIO	Single sided(12 cm)	74
			Single sided(8 cm)	20
DivX		AUDIO + VIDEO	12 cm	—
			8 cm	—
DVD-RW (V mode and finalised only)		AUDIO + VIDEO	12 cm (4.7GB)	480 (EX : Extended Play)
DVD-R (V mode and finalised only)		AUDIO + VIDEO	12 cm (4.7GB)	480 (EX : Extended Play)

- This player is compatible with the PAL colour system only.
- NTSC discs will not play.

### Logos of Discs that can be played

				
Blu-ray Disc	Dolby Digital Plus	DTS-HD High Resolution Audio		
				
PAL broadcast system in U.K, France, Germany, etc.	Dolby TrueHD	DTS-HD Master Audio   Essential		
				
Digital Audio	MP3	Stereo	Java	BD-LIVE



- Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Getting started

## Discs that cannot be played

- HD DVD Disc
- DVD-RAM
- 3.9 GB DVD-R Disc for Authoring.
- DVD-RW(VR mode)
- DVD-ROM/PD/MV-Disc, etc
- CVD/CD-ROM/CDV/CD-G/CD-I/LD
- 8cm MD (mini disc)



- Some commercial discs and DVD discs purchased outside your region may not be playable with this product. When these discs are played, either “No disc.” or “Please check the regional code of the disc.” will be displayed.
- If a DVD-R/-RW disc has not been recorded properly in DVD video format, it will not be playable.

## Region code

Both the Blu-ray Home Cinema and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play. The Region Number for this Blu-ray Home Cinema is described on the rear panel of the Blu-ray Home Cinema.

BD Region Code	Area
A	North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and Southeast Asia.
B	Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.
C	India, China, Russia, Central and South Asia.

DVD-Video Region Code	Area	DVD-Video Region Code	Area
1	USA, Canada	6	China
2	Japan, Europe, South Africa, Middle East, Greenland	7	Unspecified Special Use
3	Korea, Taiwan, Hong Kong, parts of South East Asia	8	Airlines/Cruise Ships (including Mexico)
4	Australia, New Zealand, Latin America (including Mexico)	9	Region free
5	Eastern Europe, Russia, India, Africa		

## Blu-ray Disc Compatibility

Blu-ray Disc is a new and evolving format. Accordingly, disc compatibility issues are possible. Not all discs are compatible and not every disc will play back. For additional information, refer to the Disc Types section of this Manual. If you encounter compatibility problems, please contact the SAMSUNG customer care centre.



- Playback may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched. Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for playback.
- Discs with NTSC programs recorded on them cannot be played using this product.
- When a BD-Java title is played, loading may take longer than a normal title, or some functions may perform slowly.

## Disc Types

---

### ❖ BD-RE/BD-R

Blu-ray Disc Rewritable/Blu-ray Disc Recordable. BD-RE/BD-R is the ideal format for making backups, or recording personal video.

### ❖ BD-ROM

Blu-ray Disc Read Only Memory. A BD-ROM disc contains pre-recorded data. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format, for playback on Blu-ray Home Cinemas. This unit can play back pre-recorded commercial BD-ROM discs.

### ❖ DVD-Video

- A digital versatile disc (DVD) can contain up to 135-minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby Digital surround, allowing you to enjoy vivid and clear theatre quality images.
- When switching from the first layer to the second layer of a dual-layered DVD Video disc, there may be momentary distortion in the image and sound. This is not a malfunction of the unit.
- Once a DVD-RW/-R recorded in Video Mode is finalised, it becomes DVD-Video. Pre-recorded (pre-stamped) commercial DVDs with movies are also referred to as DVD-Videos. This unit can play back pre-recorded commercial DVD discs (DVD-Video discs) with movies.

### ❖ Audio CD

- An audio disc on which 44.1kHz PCM Audio is recorded.
- This unit can play back CD-DA format audio CD-R and CD-RW discs.
- The unit may not be able to play some CD-R or CD-RW discs due to the condition of the recording.

### ❖ CD-R/-RW

- Use a 700MB(80 minutes) CD-R/-RW disc. If possible, do not use a 800MB(90 minutes) or above disc, as the disc may not play back.
- If the CD-R/-RW disc was not recorded as a closed session, you may experience delays when playing back the beginning of the disc or all recorded files may not play.
- Some CD-R/-RW discs may not be playable with this unit, depending on the device which was used to burn them. For contents recorded on CD-R/-RW media from CDs for your personal use, playability may vary depending on contents and discs.

### ❖ DVD-R Disc Playback

- Once a DVD-R recorded in Video Mode is finalised, it becomes DVD-Video.
- This unit can play back DVD-R discs recorded and finalised with a Samsung DVD video recorder. It may not be able to play some DVD-R discs depending on the disc and the condition of the recording.

### ❖ DVD-RW Disc Playback

- Playback can be performed with DVD-RW discs in the Video Mode and finalised only.
- Once a DVD-RW recorded in Video Mode is finalised, it becomes DVD-Video. Ability to play back may depend on recording conditions.

## Disc Format

---

### ❖ Using MP3 disc

- CD-R/-RW, DVD-RW/-R recorded with UDF, ISO9660 or JOLIET format can be played back.
- Only MP3 files with the ".mp3" or ".MP3" extension can be played.
- Playable bit rate range is from 56 Kbps to 320 Kbps.
- Playable sample-rate is 32KHz to 48KHz.
- The unit can handle a maximum of 1500 files and folders under a parent folder. For MP3 files recorded with a VBR(Variable Bit Rates), the sound may cut in and out.

### ❖ Using JPEG disc


- CD-R/-RW, DVD-RW/-R recorded with UDF, ISO9660 or JOLIET format can be played back.
- Only JPEG files with the ".jpg", ".JPG", ".jpeg" or "JPEG" extension can be displayed.
- Progressive JPEG is supported.

### ❖ DVD-RW/-R (V)

- This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by this Blu-ray Home Cinema once it has been finalised.
- If a disc that has been recorded in Video Mode by a different maker's recorder but has not been finalised, it cannot be played by this Blu-ray Home Cinema.


# Description

## FRONT PANEL

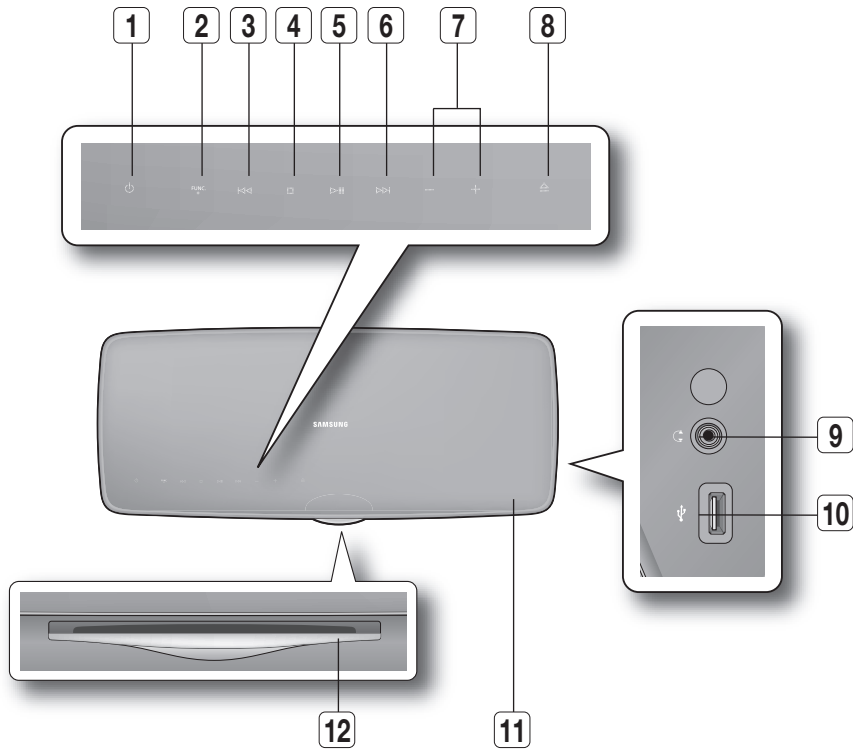

<b>1</b>	<b>POWER BUTTON</b>	Turns the Blu-ray Home Cinema on and off.
<b>2</b>	<b>FUNCTION BUTTON</b>	The mode switches as follows : BD/DVD → D.IN → AUX → BT AUDIO → FM.
<b>3</b>	<b>TUNING DOWN &amp; SKIP (◀◀) BUTTON</b>	Goes back to the previous title/chapter/track. Tunes down the FM frequency band.
<b>4</b>	<b>STOP BUTTON</b>	Stops disc playback.
<b>5</b>	<b>PLAY/PAUSE BUTTON</b>	Plays a disc or pauses playback.
<b>6</b>	<b>TUNING UP &amp; SKIP (▶▶) BUTTON</b>	Goes to the next title/chapter/track. Tunes up the FM frequency band.
<b>7</b>	<b>Volume Control BUTTON</b>	Volume adjustment.
<b>8</b>	<b>EJECT BUTTON</b>	Eject a disc.
<b>9</b>	<b>HEADPHONE JACK</b>	Connect a headphone.
<b>10</b>	<b>USB HOST</b>	A USB storage device can be connected here and used as storage when connected to BD-LIVE. It can also be used for firmware upgrades and MP3/JPEG/DivX playback.
<b>11</b>	<b>DISPLAY</b>	Displays the playing status, time, etc.
<b>12</b>	<b>DISC SLOT</b>	Accept a disc.


# REAR PANEL

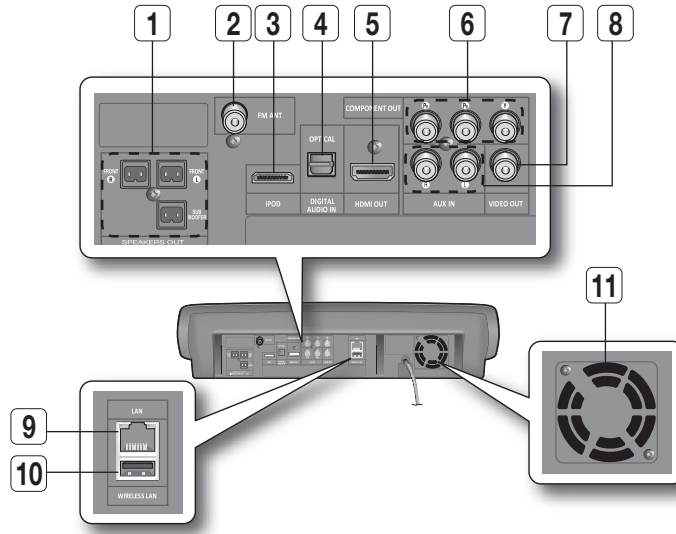

<b>1</b>	<b>2.1 CHANNEL SPEAKER OUTPUT CONNECTORS</b>	Connect the front, subwoofer speakers.
<b>2</b>	<b>FM 75Ω COAXIAL JACK</b>	Connect the FM antenna.
<b>3</b>	<b>iPod JACK</b>	Connect the iPod dock connector here.
<b>4</b>	<b>EXTERNAL DIGITAL OPTICAL IN JACK</b>	Use this to connect external equipment capable of digital output.
<b>5</b>	<b>HDMI OUT JACK</b>	Using an HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.
<b>6</b>	<b>COMPONENT VIDEO OUT JACKS</b>	Connect a TV with Component video inputs to these jacks.
<b>7</b>	<b>VIDEO OUT JACK</b>	Connect your TV's Video Input jack (VIDEO IN) to the VIDEO OUT Jack on this unit.
<b>8</b>	<b>AUX IN JACKS</b>	Connect to the 2CH analogue output of an external device (such as a VCR).
<b>9</b>	<b>LAN TERMINAL</b>	Can be used for connection to BD-LIVE. It can be also used for firmware upgrades.
<b>10</b>	<b>WIRELESS LAN JACK</b>	A USB storage device can be connected here and used as storage when connected to BD-LIVE. It can also be used for firmware upgrades and MP3/JPEG/DivX playback, as well as for connecting to BD-Live with a wireless LAN adapter.
<b>11</b>	<b>COOLING FAN</b>	The fan always revolves when the power is on. Ensure a minimum of 10cm of clear space on all sides of the fan when installing the product.


# Remote control

## TOUR OF THE REMOTE CONTROL

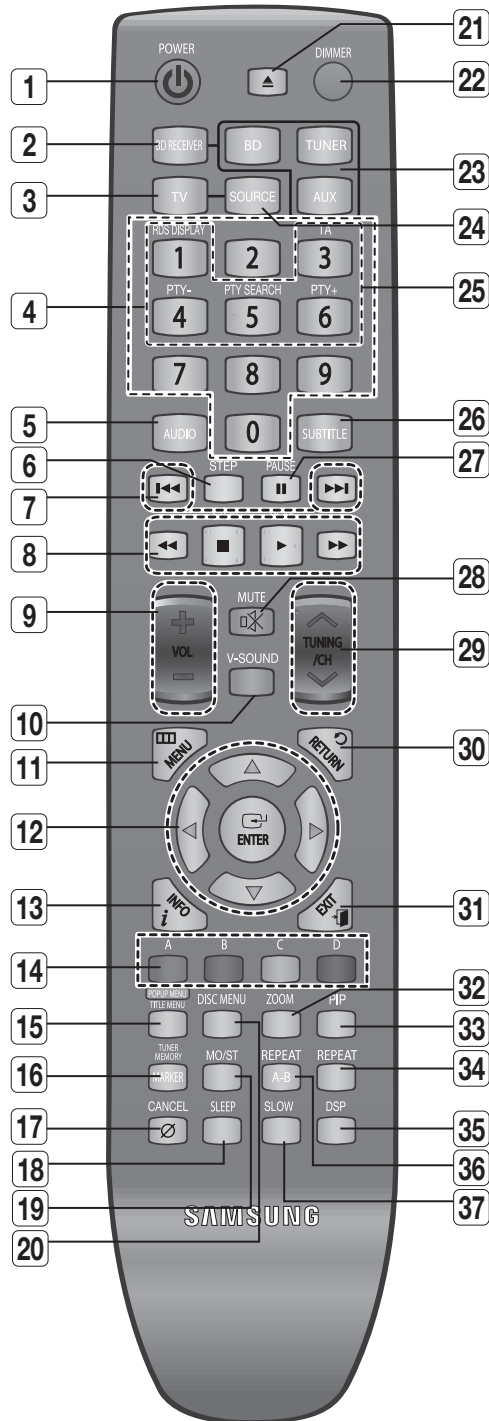

<b>1</b>	POWER button	<b>19</b>	MO/ST button
<b>2</b>	BD RECEIVER button	<b>20</b>	DISC MENU button
<b>3</b>	TV button	<b>21</b>	EJECT button
<b>4</b>	Number (0~9) buttons	<b>22</b>	DIMMER button
<b>5</b>	AUDIO button	<b>23</b>	BD button TUNER button AUX button
<b>6</b>	STEP button	<b>24</b>	SOURCE button
<b>7</b>	Tuning Preset/CD Skip buttons	<b>25</b>	RDS Selection buttons
<b>8</b>	PLAY button STOP button SEARCH buttons	<b>26</b>	SUBTITLE button
<b>9</b>	VOLUME button	<b>27</b>	PAUSE button
<b>10</b>	V-SOUND button	<b>28</b>	MUTE button
<b>11</b>	MENU button	<b>29</b>	TUNING/CH button
<b>12</b>	Cursor/ENTER button	<b>30</b>	RETURN button
<b>13</b>	INFO button	<b>31</b>	EXIT button
<b>14</b>	COLOUR Buttons : RED(A), GREEN (B), YELLOW(C), BLUE(D)	<b>32</b>	ZOOM button
<b>15</b>	POPOP MENU, TITLE MENU button	<b>33</b>	PIP button
<b>16</b>	TUNER MEMORY, MARKER button	<b>34</b>	REPEAT button
<b>17</b>	CANCEL button	<b>35</b>	DSP button
<b>18</b>	SLEEP button	<b>36</b>	REPEAT A-B button
		<b>37</b>	SLOW button

### Installing batteries in the Remote Control

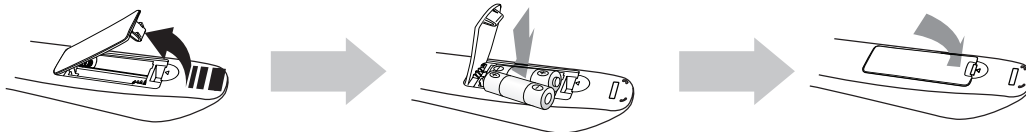

**1. Lift the cover at the back of the remote control upward as shown.**

**2. Install two AAA size batteries.**  
Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

**3. Replace the cover.**  
Assuming typical TV usage, the batteries last for about one year.

# Remote control

## SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.


### When operating a TV with the remote control

1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.
  - If there is more than one code listed for your TV in the able, enter one at a time to determine which code works.

#### Example : For a Samsung TV

While holding down the **POWER** button, use the number buttons to enter 00, 15, 16, 17 and 40.


4. If the TV turns off, the setting is complete.
  - You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0~9).

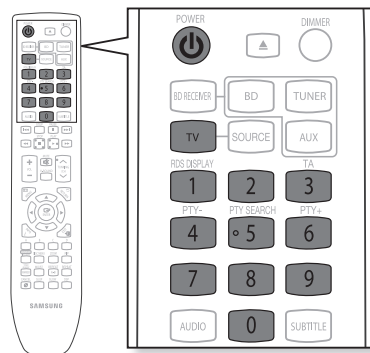

- The remote control may not work on some brands of TVs. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.

## Operation Range of the Remote Control

The remote control can be used up to approximately 7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

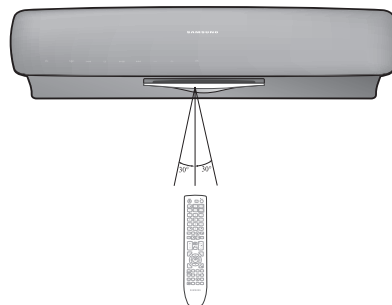

## TV Brand Code List

No.	Brand	Code	No.	Brand	Code
1	Admiral (M.Wards)	56, 57, 58	44	MTC	18
2	A Mark	01, 15	45	NEC	18, 19, 20, 40, 59, 60
3	Anam	01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14	46	Nikei	03
4	AOC	01, 18, 40, 48	47	Onking	03
5	Bell & Howell (M.Wards)	57, 58, 81	48	Onwa	03
6	Brocsonic	59, 60	49	Panasonic	06, 07, 08, 09, 54, 66, 67, 73, 74
7	Candle	18	50	Penney	18
8	Cetronic	03	51	Philco	03, 15, 17, 18, 48, 54, 59, 62, 69, 90
9	Citizen	03, 18, 25	52	Philips	15, 17, 18, 40, 48, 54, 62, 72
10	Cinema	97	53	Pioneer	63, 66, 80, 91
11	Classic	03	54	Portland	15, 18, 59
12	Concerto	18	55	Proton	40
13	Contec	46	56	Quasar	06, 66, 67
14	Coronado	15	57	Radio Shack	17, 48, 56, 60, 61, 75
15	Craig	03, 05, 61, 82, 83, 84	58	RCA/Proscan	18, 59, 67, 76, 77, 78, 92, 93, 94
16	Croslex	62	59	Realistic	03, 19
17	Crown	03	60	Sampo	40
18	Curtis Mates	59, 61, 63	61	Samsung	00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98
19	CXC	03	62	Sanyo	19, 61, 65
20	Daewoo	02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90	63	Scott	03, 40, 60, 61
21	Daytron	40	64	Sears	15, 18, 19
22	Dynasty	03	65	Sharp	15, 57, 64
23	Emerson	03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85	66	Signature 2000 (M.Wards)	57, 58
24	Fisher	19, 65	67	Sony	50, 51, 52, 53, 55
25	Funai	03	68	Soundesign	03, 40
26	Futuretech	03	69	Spectricon	01
27	General Electric (GE)	06, 40, 56, 59, 66, 67, 68	70	SSS	18
28	Hall Mark	40	71	Sylvania	18, 40, 48, 54, 59, 60, 62
29	Hitachi	15, 18, 50, 59, 69	72	Symphonic	61, 95, 96
30	Inkel	45	73	Tatung	06
31	JC Penny	56, 59, 67, 86	74	Techwood	18
32	JVC	70	75	Teknika	03, 15, 18, 25
33	KTV	59, 61, 87, 88	76	TMK	18, 40
34	KEC	03, 15, 40	77	Toshiba	19, 57, 63, 71
35	KMC	15	78	Vidtech	18
36	LG (Goldstar)	01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44	79	Videch	59, 60, 69
37	Luxman	18	80	Wards	15, 17, 18, 40, 48, 54, 60, 64
38	LXI (Sears)	19, 54, 56, 59, 60, 62, 63, 65, 71	81	Yamaha	18
39	Magnavox	15, 17, 18, 48, 54, 59, 60, 62, 72, 89	82	York	40
40	Marantz	40, 54	83	Yupiteru	03
41	Matsui	54	84	Zenith	58, 79
42	MGA	18, 40	85	Zonda	01
43	Mitsubishi/MGA	18, 40, 59, 60, 75	86	Dongyang	03, 54


# Connections

---

This section involves various methods of connecting the Blu-ray Home Cinema to other external components. Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

## CONNECTING THE SPEAKERS

---

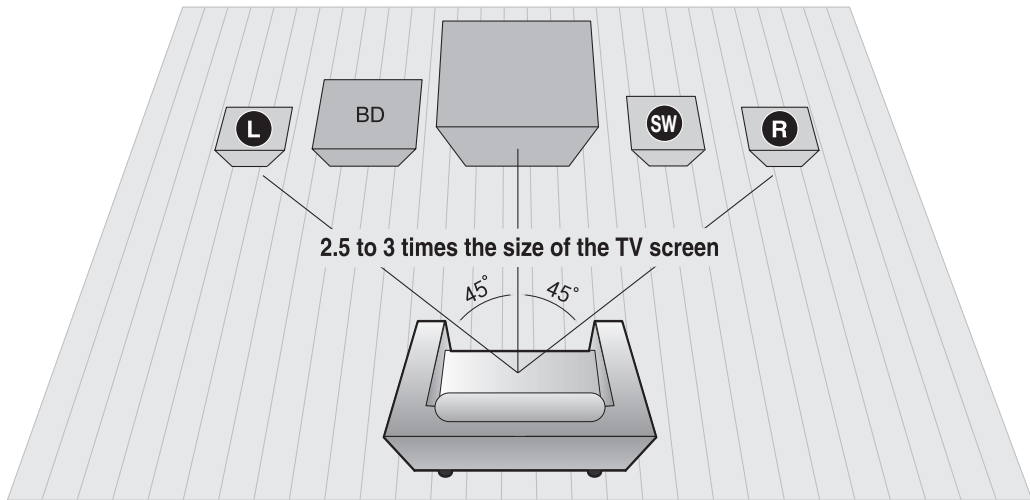

### Position of the Blu-ray Home Cinema

Place it on a stand or cabinet shelf, or under the TV stand.

### Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TVs 6~8feet (2~2.4m)

For 55" TVs 11~13feet (3.5~4m))

### Front Speakers **L** **R**

Place these speakers in front of your listening position, facing inwards (about 45°) toward you.



Place the speakers so that their tweeters will be at the same height as your ear.

### Subwoofer **SW**

The position of the subwoofer is not so critical. Place it anywhere you like.

## Connecting The Speakers

1. Press down the terminal tab on the back of the speaker.
2. Insert the black wire into the black terminal (-) and the red wire into the red terminal (+), and then release the tab.
3. Connect the connecting plugs to the back of the Blu-ray Home Cinema by matching the colours of the speaker plugs to the speaker jacks.

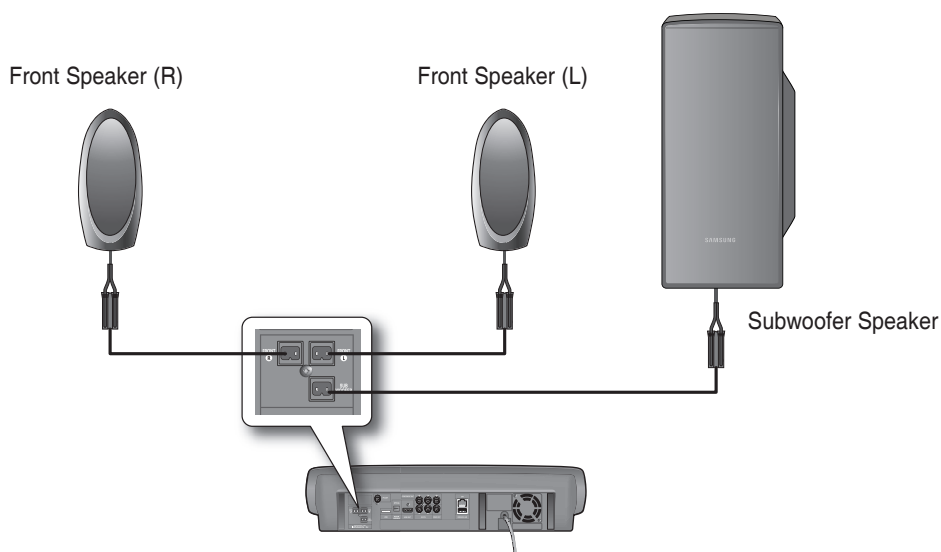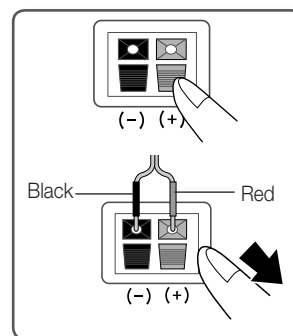


- ! Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
- Keep the subwoofer speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).

- ✍ If you place a speaker near your TV set, screen colour may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

# Connections

## CONNECTING THE VIDEO OUT TO YOUR TV

Choose one of the three methods for connecting to a TV.

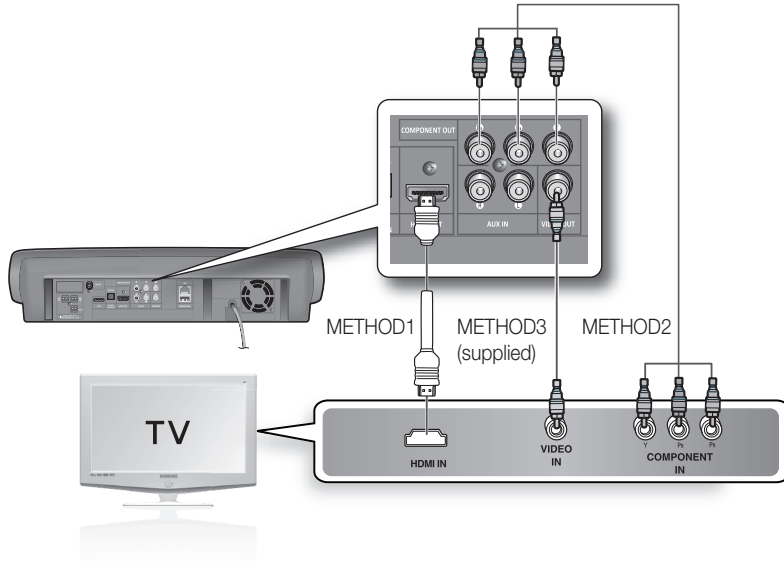

### METHOD 1 : HDMI (BEST)

Connect an HDMI cable (not supplied) from the HDMI OUT jack on the back of the Blu-ray Home Cinema to the HDMI IN jack on your TV.



- Certain HDMI output resolutions may not work, depending on your TV.
- If an HDMI cable is connected from the player to a TV, the Blu-ray Home Cinema's output is set to HDMI automatically within 10 seconds.
- If you are using the Anynet+ feature (see page 44) and Component and HDMI are both connected, HDMI mode is automatically selected.
- When you connect the player to the TV using an HDMI cable for the first time or to a new TV, the HDMI output resolution will automatically be set to the highest provided by the TV.
- If you connect a Samsung TV to the Blu-ray Home Cinema using an HDMI cable, the player can be easily operated using the TV remote control. (This is only available with Samsung TVs that support the Anynet+ feature.) (See page 44)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Blu-ray Home Cinema. See your TV owner's manual for more information on how to select the TV's Video Input source.

### HDMI Auto Detection Function

The player's video output will automatically change to HDMI mode when connecting an HDMI cable while power is on. For possible HDMI resolutions, see page 41.

#### • HDMI (High Definition Multimedia Interface)

HDMI is an interface that enables the digital transmission of video and audio data with just a single connector. Using HDMI, the Blu-ray Home Cinema transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.

- **HDMI connection description**  
HDMI connector - Supports video and digital audio data.
  - HDMI outputs only a pure digital signal to the TV.
  - If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.
- **Why does Samsung use HDMI?**  
Analogue TVs require an analogue video/audio signal. However, when playing a BD/DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analogue converter (in the Blu-ray Home Cinema) or an analogue-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.
- **What is the HDCP?**  
HDCP (High-band width Digital Content Protection) is a system for protecting BD/DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD, etc) and a display device (TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.
- **What is Anynet+?**  
Anynet+ is a convenient function that offers linked operation of this unit through Samsung TVs with the Anynet+ feature.
  - If your Samsung TV has an *Anynet+* logo, then it supports the Anynet+ function.
  - If you turn on the player and insert a disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.
  - If you turn on the player and press the **PLAY** button with a disc already inserted, the TV will immediately turn on and switch to HDMI mode.
- **What is BD Wise?**  
BD Wise is Samsung's latest inter-connectivity feature.
  - When you connect Samsung products with BD-Wise to each other via HDMI, the optimum resolution will be set automatically.

## METHOD 2 : Component Video (BETTER)

If your television is equipped with Component Video inputs, connect a Component video cable (not supplied) from the Component Video Output (Pr, Pb and Y) Jacks on the back of the Blu-ray Home Cinema to the Component Video Input Jacks on your TV.



- You can select from a variety of resolution settings such as 1080i, 720p, 576p/480p and 576i/480i, depending on the disc type. (See page 42)
- The actual resolution may differ from the setting in the Setup menu if both Component and HDMI cables are connected. The resolution may also be different depending on the disc. (See page 42)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Blu-ray Home Cinema. See your TV owner's manual for more information on how to select the TV's Video Input source.
- In DVD playback, if both HDMI and Component jacks are connected and you select the Component 1080p, 1080i, 720p or 576p/480p mode, the Display Setup menu will show the output resolution as 1080p, 1080i, 720p or 576p/480p in the menu. The resolution is actually 576i/480i.

## METHOD 3 : Composite Video (GOOD)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the Blu-ray Home Cinema to the VIDEO IN jack on your TV.



- The VIDEO source is always output in 576i/480i resolution regardless of the resolution set in the Setup menu. (See page 42)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your Blu-ray Home Cinema. See your TV owner's manual for more information on how to select the TV's Video Input source.
- Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.


# Connections

---

## CONNECTING AN iPod

---

You can enjoy music, video files from an iPod through the main unit. For iPod operation with this Blu-ray home cinema, see pages 24 and 78 ~ 80.

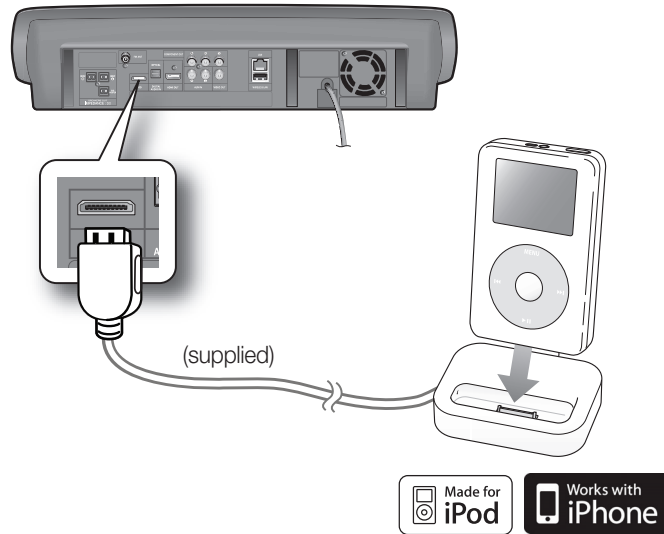

1. Connect the iPod Dock to the iPod Jack on the rear side of the main unit.
2. Place the iPod in the dock.
  - “iPod Connected” message appears on the TV screen.



- You must have the VIDEO output connected to your TV to view iPod video (See page 23).
- Adjust the volume to a moderate level before you connect your iPod and Blu-ray home cinema.
- When the unit is powered on and you connect an iPod, the unit will charge your iPod's battery.
- Make sure to connect the dock connector so that the label “**SAMSUNG**” faces upward.
- “Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

## iPod models that can be used with the HT-BD6200

 <p><b>iPod nano</b> 3rd generation (video) 4GB 8GB</p>	 <p><b>iPod</b> 5th generation (video) 30GB 60GB 80GB</p>	 <p><b>iPod classic</b> 80GB 120GB 160GB</p>
 <p><b>iPod touch</b> 1st generation 4GB 16GB 32GB</p>	 <p><b>iPod nano</b> 4th generation(video) 8GB 16GB</p>	 <p><b>iPhone 3G</b> 8GB 16GB</p>
 <p><b>iPod touch</b> 2nd generation 8GB 16GB 32GB</p>	 <p><b>iPhone</b> 4GB 8GB 16GB</p>	



- “Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- “Works with iPhone” means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.


# Connections

## CONNECTING AUDIO FROM EXTERNAL COMPONENTS

### OPTICAL : Connecting an External Digital Component

Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).

1. Connect the Digital Input (OPTICAL) on the main unit to the Digital Output of the external digital component.
2. Press the **FUNCTION** button on the main unit to select **D.IN** input.
  - The mode switches as follows : **BD/DVD** → **D.IN** → **AUX** → **BT AUDIO** → **FM**.

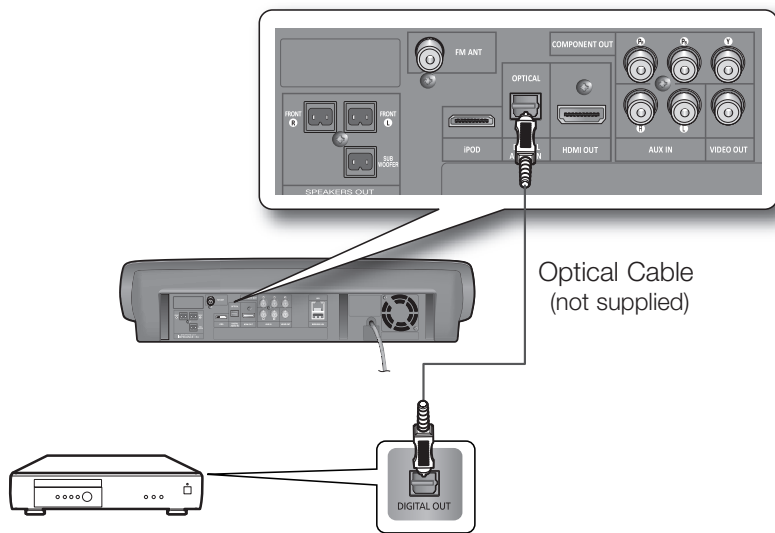


- To see video from your Cable Box/Satellite receiver, you must connect its video output to a TV.
- This system supports Digital sampling frequencies of 32 kHz or higher from external digital components.
- This system supports only DTS and Dolby Digital audio, MPEG audio which is bitstream cannot be supported.

## AUX : Connecting an External Analogue Component

Analogue signal components such as a VCR.

1. Connect AUX IN (Audio) on the main unit to the Audio Out of the external analogue component.
  - Be sure to match connector colours.
2. Press the **AUX** button on the remote control to select **AUX** input.
  - You can also use the **FUNCTION** button on the main unit.  
The mode switches as follows : **BD/DVD** → **D.IN** → **AUX** → **BT AUDIO** → **FM**.

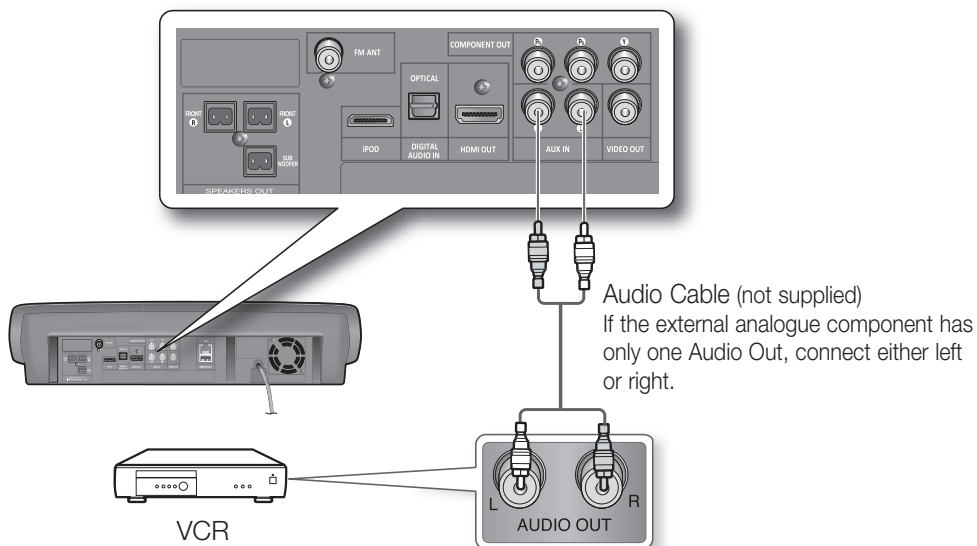

- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.


# Connections

## CONNECTING TO THE NETWORK

To access network service or upgrade the current firmware, you must make one of the following connections. By connecting to a network, you can access the BD-LIVE service and software upgrades from Samsung's update server.

### Case 1 : Connecting a Direct LAN Cable to your Modem


1. Using the Direct LAN Cable (UTP cable, not supplied), connect the LAN terminal of the Blu-ray Home Cinema to the LAN terminal of your modem.

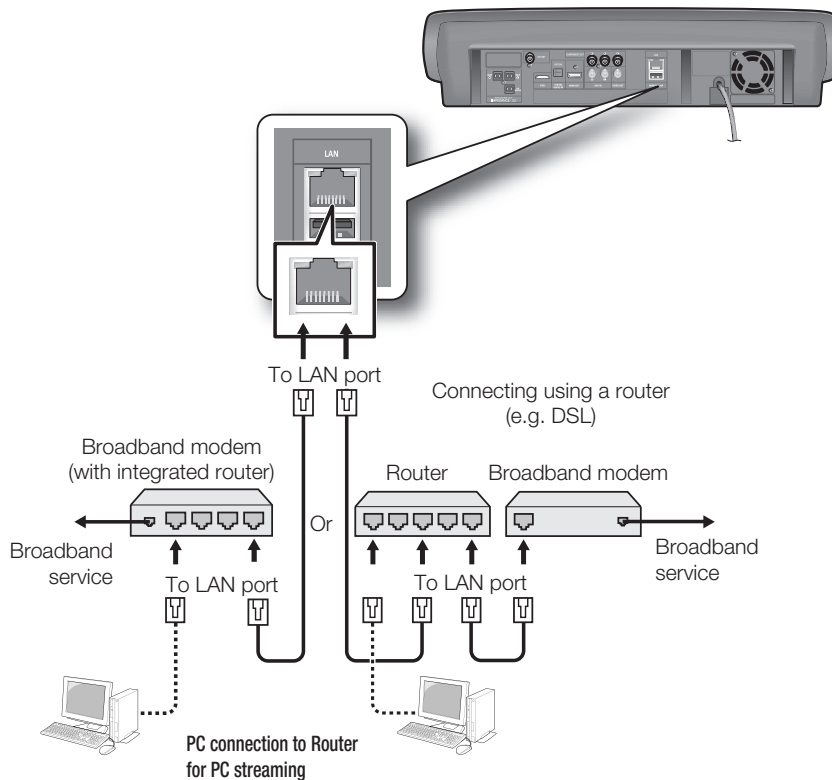

- To use the **PC streaming** function (see pages 81~82), please make a network between your PC and router.
- Internet access to Samsung's update server may not be allowed, depending on the router you use or the ISP's policy.  
For more information, contact your ISP (Internet Service Provider).
- For DSL users, please use a router to make a network connection.

## Case 2 : Connecting to a Wireless IP sharer

You can connect to network with a Wireless IP sharer. See page 49 for Wireless Network Setup.

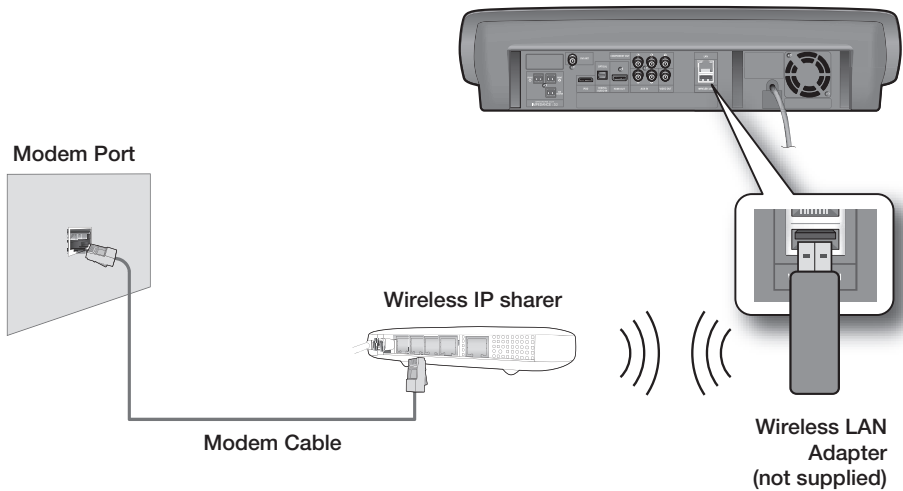

- This unit is compatible with only Samsung Wireless LAN Adapter. (not supplied) (Model name: WIS09ABGN).
  - The Samsung Wireless LAN Adapter is sold separately.
  - Contact a Samsung Electronics agent or service centre for purchasing.
- You must use a wireless IP sharer that supports IEEE 802.11 a/b/g/n. (n is recommended for stable operation of the wireless network.)
- Wireless LAN, in its nature, may cause interference, depending on the use condition (AP performance, distance, obstacle, interference by other radio devices, etc).
- Set the wireless IP sharer to Infrastructure mode. Ad-hoc mode is not supported.
- When applying the security key for the AP (wireless IP sharer), only the following is supported.
  - 1) Authentication Mode : WEP, WPAPSK, WPA2PSK
  - 2) Encryption Type : WEP, TKIP, AES
- Connect the Wireless LAN Adapter to only the Wireless LAN Jack on the back of the main unit.


# Connections


---

## CONNECTING THE FM ANTENNA

---

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

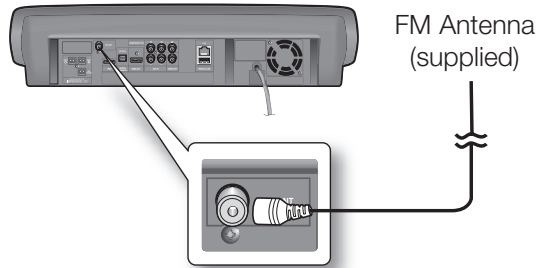

- 
-  This unit does not receive AM broadcasts.

## COOLING FAN

---

The cooling fan supplies cool air to the unit to prevent overheating. Please observe the following cautions for your safety.


- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit may rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)

## ATTACHING THE TOROIDAL FERRITE CORE TO THE POWER CORD OF THE MAIN UNIT

---

If you attach a Toroidal ferrite core to the power cord of the main unit, it will prevent help to prevent RF interference from radio signals.

1. Pull the fixing tab of the Toroidal ferrite core to open it.
2. Make a loop twice in the main unit power cord.
3. Attach the Toroidal ferrite core to the main unit power cord as the figure shows and press it until it clicks.

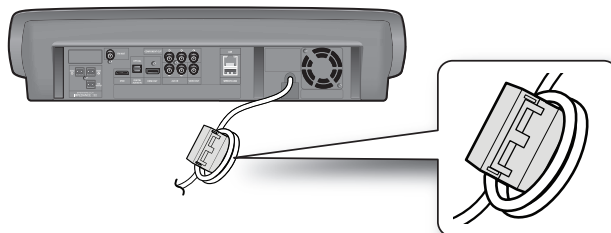

# Basic functions of your Blu-ray Home Cinema


This section introduces basic playback functions and playback by disc type.

## BEFORE PLAYING

- Turn on your TV and set it to the correct Video Input (the input the Blu-ray Home Cinema is connected to).

After plugging in the Blu-ray Home Cinema, the first time you press the **POWER** button, this screen comes up:


If you want to select a language, press a **NUMBER** button. (This screen will only appear when you plug in the Blu-ray Home Cinema for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **STOP** (■) button on the main unit for more than 5 seconds with no disc in the unit. Then the MENU LANGUAGE SELECTION window appears again where you can reset your preferred language.

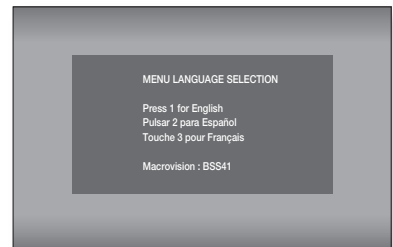

- Discs which can be played on this player (For the following discs, the ability to play back may depend on recording conditions.)
  - BD-ROM
  - BD-RE
  - BD-R
  - DVD-R
  - DVD-RW (V mode)
  - CD-RW/CD-R
  - The unit may not play certain CD-RW/CD-R and DVD-R due to the disc type or recording conditions.
- Discs which cannot be played on this player.
  - HD DVD
  - DVD+RW
  - DVD+R
  - DVD-ROM
  - DVD-RAM
  - CDV
  - CD-ROM
  - CVD
  - CD-I
  - Super Audio CD(except CD layer)
  - CDGs play audio only, not graphics.
- Blu-ray is a new and evolving format. Accordingly, disc compatibility issues with new and existing format discs are possible. Not all discs are compatible and not every disc will playback.  
For additional information, refer to the Disc Types section of this Manual. If you encounter compatibility problems, please contact SAMSUNG customer care centre.

# Basic functions of your Blu-ray Home Cinema

## ON-SCREEN MENU NAVIGATION

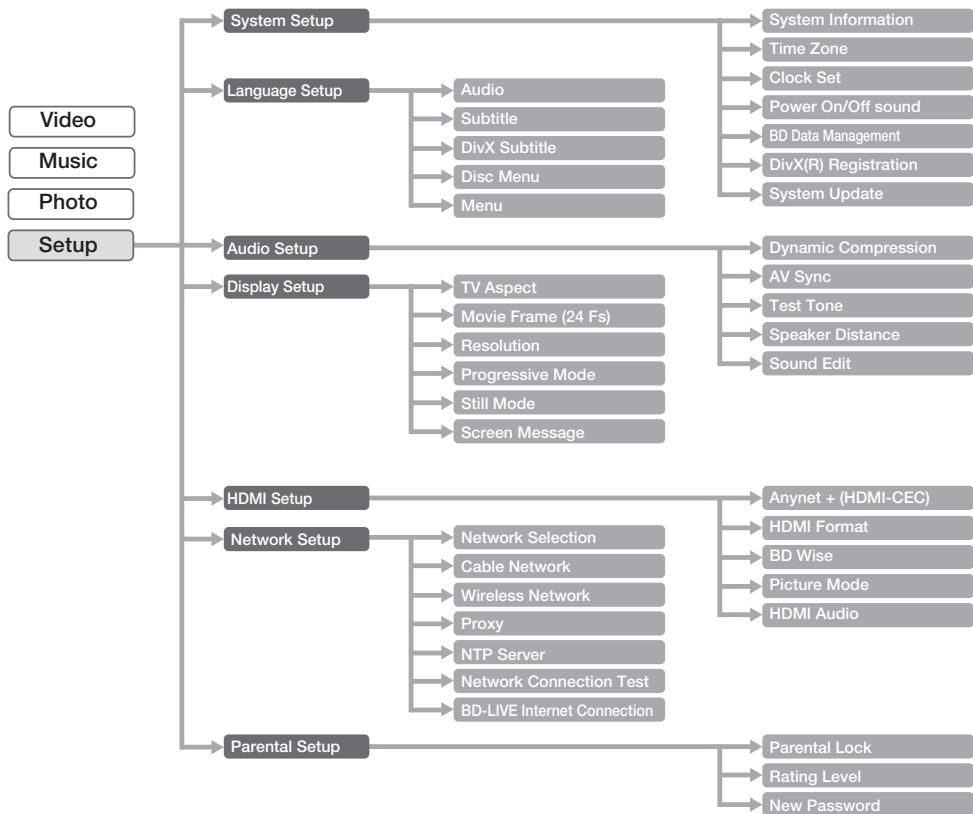

## PLAYING A DISC

1. Load a disc.
  - Place a disc gently into the tray with the disc's label facing up.
2. Close the compartment by pressing the **PLAY** button.
  - Playback starts automatically.




- When you stop disc play, the player remembers where you stopped, so when you press **PLAY** button again, it will pick up where you left off. This is called the "Resume" function. With some Blu-ray discs(BD-J), this function may not work.
- Press the **STOP** button twice during playback to disable the Resume function.
- To pause the playback, press the **PAUSE** button during playback. To resume, press the **PLAY** button.
- If the player is left in the stop mode more than 5 minutes without any user interface, a screen saver will appear on your TV. If the player is left in the screen saver mode for more than 30 minutes, the power will automatically turn off except during playback of an CD-DA (Automatic Power-Off Function).
- If no buttons are pressed on the unit or remote control for more than 5 minutes when the unit is in Pause mode, operation will stop (except for some Blu-ray Discs).

## SETTING THE SOUND

### Setting the Power On / Off Melody Sound

A Melody sound can be set so it is heard each time you turn the player on or off.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Power On/Off sound**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select **On** or **Off**, then press the **ENTER** or **▶** button.
6. Press the **MENU** button to exit the setup menu.

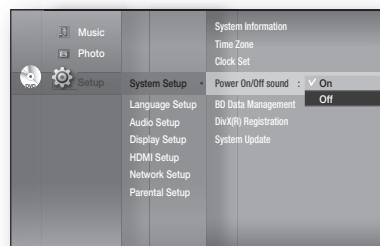

## USING THE SEARCH AND SKIP FUNCTIONS

During playback, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

### Searching through a Chapter or Track



During playback, press the **SEARCH** (**◀▶**) button.

Each time you press the **SEARCH** button, the playback speed will change as follows.

BD-ROM, BD-RE, BD-R, DVD-VIDEO, DVD-RW, DVD-R	<b>▶▶ X 2 → ▶▶ X 4 → ▶▶ X 8 → ▶▶ X 16 → ▶▶ X 32 → ▶▶ X 128</b> <b>◀◀ X 2 → ◀◀ X 4 → ◀◀ X 8 → ◀◀ X 16 → ◀◀ X 32 → ◀◀ X 128</b>
--	--

- You can scan the program in reverse.
- To return to normal speed playback, press the **PLAY** button.



■ No sound is heard during search mode.

### Skipping Tracks



During playback, press the **SKIP** (**◀▶**) button.

When playing a Blu-ray Disc/DVD, if you press the **SKIP** (**▶▶**) button, it moves to the next chapter.

If you press the **SKIP** (**◀◀**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.

# Basic functions of your Blu-ray Home Cinema


## SLOW MOTION PLAY/STEP MOTION PLAY

### Slow Motion Play



In pause or step mode, press the **SLOW** button on the remote control for Slow Motion play.

- If you press the **SLOW** button, **1/8** **1/4** **1/2**
- To return to normal speed playback, press the **PLAY** (⏪) button.

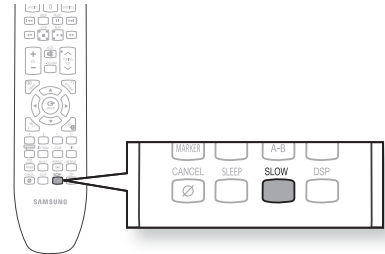


- This (⊗) icon indicates when an invalid button is pressed.
- No sound is heard during slow mode.
- Slow motion operates only in the forward direction.

### Step Motion Play



Press the **STEP** button on the remote control during playback for Step Motion play.

- Each time the button is pressed a new frame will appear.
- When the **STEP** button is pressed, the next frame will be activated.
- Press the **PLAY** (⏪) button to resume normal play.

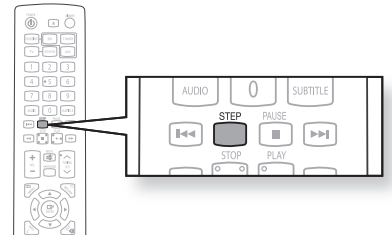


- No sound is heard during Step mode.
- Step motion operates only in the forward direction.

# System setup

## SETTING THE CLOCK

### Choose your time zone

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **Time Zone**, then press the **ENTER** or **▶** button.
5. Use the **◀▶** button to place the cursor to the appropriate time zone for your area and press the **ENTER** button.


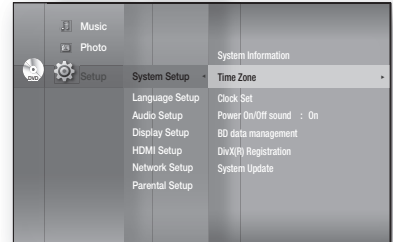


- To set the time zone automatically, set the NTP server to **On** (see page 53).

### Set the clock

To setup, follow steps 1 through 3 above.

4. Press the **▲▼** buttons to select **Clock Set**, then press the **ENTER** or **▶** button.
5. Press the **◀▶** buttons to move to “**da.**”(date), “**hr**” (hour), “**min**” (minute). Set the date and time by pressing the **▲▼** buttons, then press the **ENTER** button.

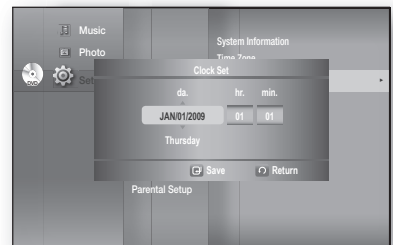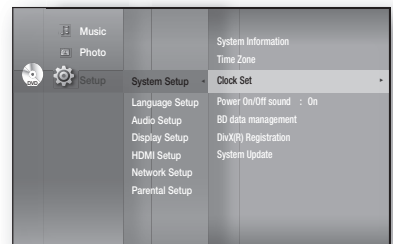


# Language setup

## SETTING UP THE LANGUAGE OPTIONS


Once you set the audio, subtitle, disc menu and player menu language options, they will be applied automatically every time you watch a movie.

- ✎ If you want to choose a different audio and subtitle language while playing a disc, you can also use the disc menu to make the selection.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.

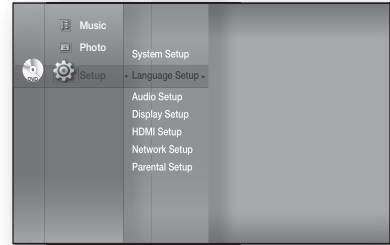


3. Press the **▲▼** buttons to select **Language Setup**, then press the **ENTER** or **▶** button.  
Language setup menu will be displayed.

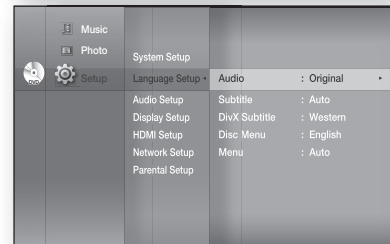

4. Press the **▲▼** buttons to select the desired language option, press the **ENTER** or **▶** button.

- **Audio** : For the disc audio language.
- **Subtitle** : For the disc subtitles.
- **DivX Subtitle** : For the DivX subtitles.
- **Disc Menu** : For the disc menu contained on the disc.
- **Menu** : For the on-screen menu of your Blu-ray Home Cinema.

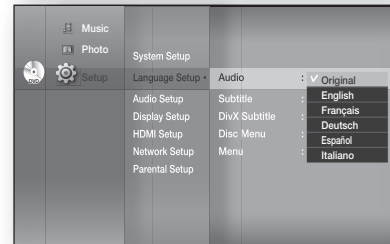

5. Press the **▲▼** buttons to select the desired language, then press the **ENTER** button.

- ✎ Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.
- The selected language will only appear if it is supported on the disc.


# Audio setup

## SETTING UP THE SPEAKER OPTIONS

### Dynamic Compression

This is only active when a Dolby Digital signal is detected.


- **On** : When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.
- **Off** : You can enjoy the movie with the standard Dynamic Range.

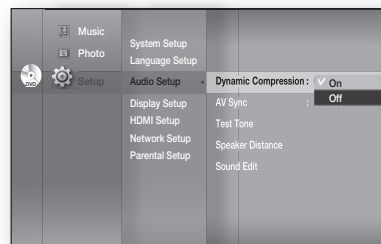

### AV Sync

Video may look slower than the audio when the player is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.



- You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

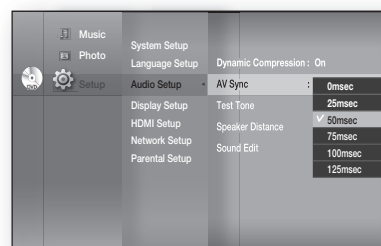

### Setting the Test Tone

Use the Test Tone feature to check the speaker connections.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.
4. Press the **▲▼** buttons to select **Test Tone**, then press the **ENTER** or **▶** button.
5. Press the **RED(A)** button
  - A test tone will be sent to **L → R → SW** in order so you can make sure the speakers are set up correctly.
6. To end the test tone, press the **RED (A)** button again.

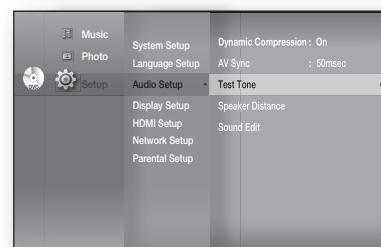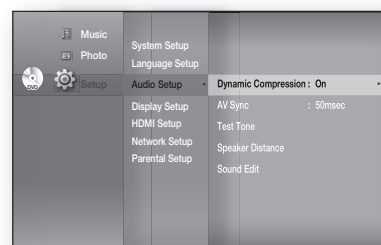

- Press the **RETURN** button to return to the previous menu.
- When playing a BD/DVD or CD, this will work only in Stop mode.
- Use this function to check that each speaker is correctly connected and that there is no problem.
- When HDMI Audio is on (audio is produced through TV speakers), the Test Tone function is not available.


# Audio setup

## SETTING UP THE SPEAKER OPTIONS


### Setting the Speaker Distance

If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the front, subwoofer speakers.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.

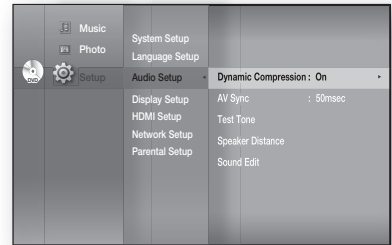

4. Press the **▲▼** buttons to select **Speaker Distance**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select the desired Speaker, then press the **◀▶** buttons to set the Speaker Distance.
  - You can set the Speaker Distance between 0.3m and 9m.
6. When done, use the **▲▼◀▶** buttons to select **Save**, then press the **ENTER** button.
  - If you don't want to save your settings, use the **▲▼◀▶** buttons to select **Cancel**, then press the **ENTER** button.

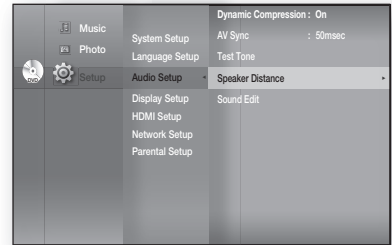


 Press the **RETURN** button to return to the previous menu.

### Setting the Sound Edit


You can adjust the balance and level for each speaker.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Audio Setup**, then press the **ENTER** or **▶** button.
  - Audio setup menu will be displayed.

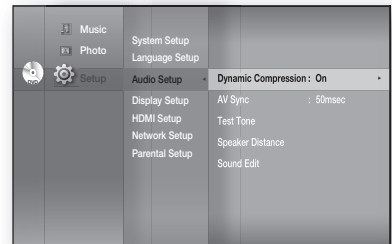

## Setting the Sound Edit

- Press the ▲▼ buttons to select **Sound Edit**, then press the **ENTER** or ► button.
- Press the ▲▼ buttons to select the desired Speaker, then press the ◀▶ button to adjust the settings.
- When done, use the ▲▼◀▶ buttons to select **Save**, then press the **ENTER** button.  
If you don't want to save your settings, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.

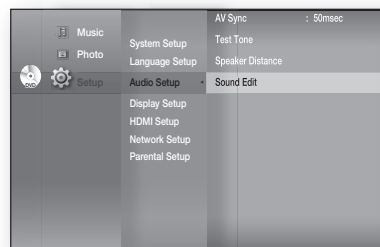

- Press the **RETURN** button to return to the previous menu.

### Adjusting Front Speaker Balance

- You can select between 0, -6, and OFF.
- The volume decreases as you move closer to -6.

### Adjusting Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.


## V-SOUND (Virtual Sound)

Produces realistic sound through 2.1 channel audio system with the aid of virtual effects, this gives you the feeling you are listening to 5.1 channel audio system.

Press the **V-SOUND** button.

- Each time the button is pressed, the selection changes as follows :

**V.SOUND ON** → **V.SOUND OFF**

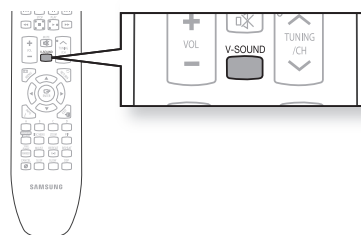

- Only the multi-channel is supported.

## DSP Function


Press the **DSP** button.

- Each time the button is pressed, the selection changes as follows:

**SMART SOUND** → **AUDIO UPSCALING**

→ **POWER BASS** → **DSP MODE OFF**

- SMART SOUND** : This will regulate and stabilize the volume level against a drastic volume change when changing channels or during a scene transition.
- AUDIO UPSCALING** : This also helps enhance your sound experience (ex. mp3 music). You can upscale your MP3 level sound(24 kHz, 8bit) to CD level sound(44.1 kHz, 16bit).
- POWER BASS** : POWER BASS function stresses low tones providing thudding sound effects.

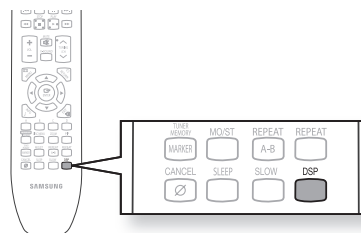

# Display setup



## SETTING UP THE DISPLAY OPTIONS

This function allows you to setup the TV screen settings. This function depends on the disc or TV type. It may not work with some discs or TVs.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Display Setup**, then press the **ENTER** or **▶** button.  
Display setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option from the options on the following pages.
5. Press the **▲▼** buttons to select the desired sub-menu item from a display option, then press the **ENTER** button.
6. Each display option is described in detail below.



- Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

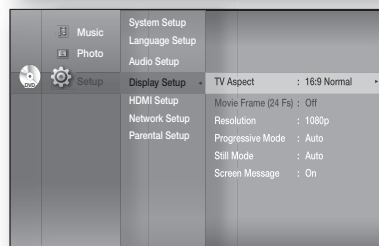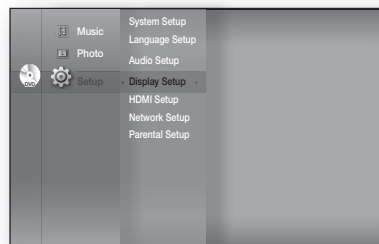

### TV Aspect

You may want to adjust the screen setting, depending on the type of television you have. (aspect ratio)



#### • 4:3 Letter Box :

Select when you want to see the total 16:9 ratio screen a Blu-ray Disc/DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.



#### • 4:3 Pan-Scan :

Select when you want to see the 16:9 video supplied by the Blu-ray Disc/DVD without the black bars on top and bottom, even though you have a TV with a 4:3 ratio screen (extreme left and right portion of the movie picture will be cut off).




#### • 16:9 Wide :

You can view the full 16:9 picture on your widescreen TV.



#### • 16:9 Normal :

Certain movies (4:3 source) will be displayed in 4:3 Pillarbox (black bars on sides of picture) if 16:9 normal is selected.

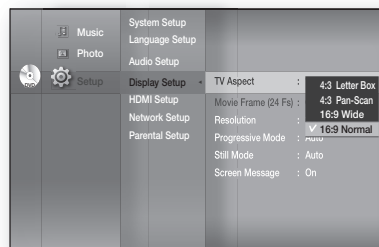

- Some aspect ratios may not be available, depending on the disc type.
- If you select an aspect ratio which is different than the aspect ratio of your TV screen, then the picture might appear to be distorted.


## Movie Frame (24 Fs)

Movies are usually filmed at 24 frames per second. Some Blu-ray Discs have the capability of playing back at this frame rate. Setting the Movie Frame (24Fs) feature to ON allows you to adjust the Blu-ray Home Cinema's HDMI output to 24 frames per second for improved picture quality.

You can enjoy the Movie Frame (24Fs) feature only on a TV supporting this frame rate.

This menu can only be selected in 1080i or 1080p HDMI output resolution modes.


Two types of frame rates may be included, depending on the disc: Movie material (24 frame) and Video material (30 frame). When the setting switches between Movie (24 frame) and Video (30 frame), the screen may blink for a few seconds.

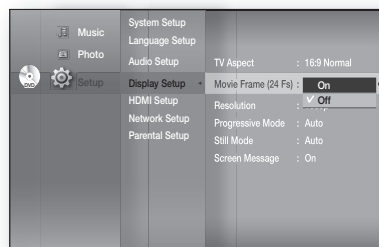

## Resolution


Sets the output resolution of the HDMI and Component video signal.

- The number in 576i/480i, 576p/480p, 720p, 1080p and 1080i indicates the number of lines of video. The i and p indicate interlace and progressive scan, respectively.
  - BD Wise : Automatically sets the optimal resolution when connected via HDMI to a TV with the BD Wise feature. (The BD Wise menu item appears only if BD Wise is set to On.)
  - 1080p : Outputs 1080 lines of progressive video (HDMI only).
  - 1080i : Outputs 1080 lines of interlaced video.
  - 720p : Outputs 720 lines of progressive video.
  - 576p/480p : Outputs 576/480 lines of progressive video.
  - 576i/480i : Outputs 576/480 lines of interlaced video (Composite only).

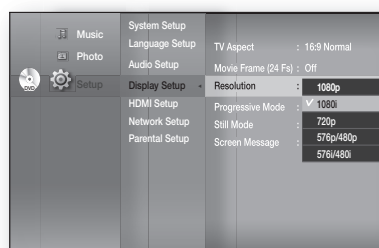

If the connected TV does not support Movie Frame or the selected resolution, you will see the following message:

If you select **Yes** and the resolution is not supported, the TV's screen will be blank. Please wait for 15 seconds and the resolution will revert to the previous value automatically.

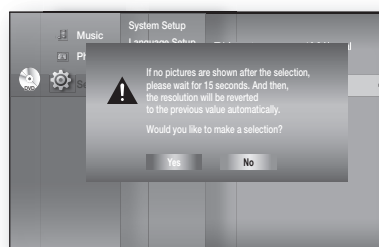

- If the screen is blank, press and hold the **STOP** (■) button on the front panel of the Blu-ray Home Cinema for more than 5 seconds (no disc inserted). All settings are restored to the factory default. Follow the steps on the previous page to access each mode and select the Display Setup that your TV will support.
- When the factory default settings are restored, all the user data stored in the BD data will be deleted.

# Display setup

## SETTING UP THE VIDEO DISPLAY/OUTPUT OPTIONS

### Resolution according to the output mode

- Blu-ray Disc playback

Setup \ Output	HDMI	Component (HDMI&Comp. connected / Comp. connected only)	COMPOSITE
1080p, Movie Frame(24Fs) off	1080p@60F	1080i	576i/480i
1080p/1080i, Movie Frame (24Fs) on	1080p@24F	576i(480i) / 1080i	576i/480i
1080i, Movie Frame (24Fs) off	1080i	1080i	576i/480i
720p	720p	720p	576i/480i
576p/480p	576p/480p	576p/480p	576i/480i
576i/480i	576p/480p	576i/480i	576i/480i

- DVD playback

Setup \ Output	HDMI	Component (HDMI&Comp. connected / Comp. connected only)	COMPOSITE
1080p	1080p@60F	576i(480i) / 576p(480p)	576i/480i
1080i	1080i	576i(480i) / 576p(480p)	576i/480i
720p	720p	576i(480i) / 576p(480p)	576i/480i
576p/480p	576p/480p	576i(480i) / 576p(480p)	576i/480i
576i/480i	576p/480p	576i/480i	576i/480i




- In DVD playback, if both HDMI and Component jacks are connected and you select the Component 1080p, 1080i, 720p or 576p/480p mode, the Display Setup menu will show the output resolution as 1080p, 1080i, 720p or 576p/480p in the menu. The resolution is actually 576i/480i.
- This player has the HDMI Auto Detection Feature. When the player is first connected to a TV via HDMI, the player's output will be set automatically to HDMI.
- If the HDMI Auto Detection feature does not work, you can't select the 1080p resolution or Movie Frame (24Fs).
- The Blu-ray Disc must have the 24 frame feature in order to use the Movie Frame (24Fs) mode.

## Progressive Mode

The Progressive Mode helps to improve picture quality when viewing 576i/480i resolution DVD discs.

- **Auto** : Select this to have the player automatically set the best picture for the DVD you're watching.
- **Video** : Select this for the best picture from Concert or TV show DVDs.

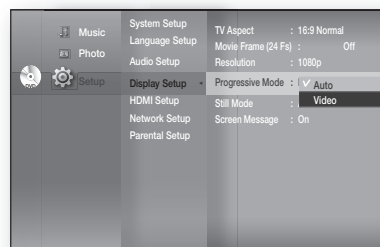


## Frame & Field bar

### Still Mode


Set the Auto, Field or Frame setting for the best possible still picture (pause mode) from a DVD.

- **Auto**: Select this setting to have the player automatically display the best Still picture depending on the content.
- **Field** : Select this when pausing a scene with a lot of action.
- **Frame** : Select this to increase the resolution of the Still picture.

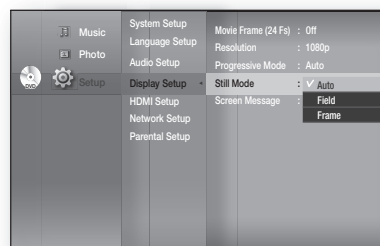

## Screen Message


- **On** : Displays messages related to operation mode.
- **Off** : Does not display messages related to operation mode.

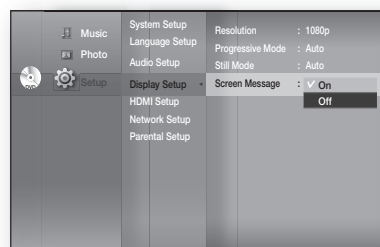

# HDMI setup

## SETTING UP THE HDMI SETUP OPTIONS

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **HDMI Setup**, then press the **ENTER** or **▶** button.  
HDMI setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired display option, then press the **ENTER** or **▶** button.

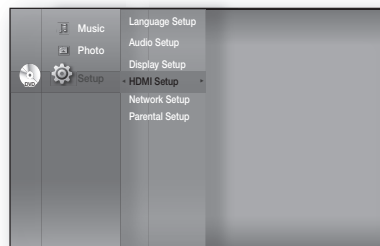

-  ■ Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.


## Anynet+ (HDMI-CEC)

**Samsung products only**

### What is Anynet+?

Anynet+ is a convenient function that offers linked operations with other Samsung products with the Anynet+ feature.




You can operate this unit using a Samsung TV remote control or power on your Samsung TV and Home Cinema and start disc playback simply by pressing the **PLAY** button on the TV's remote.

-  ■ This function is not available if an HDMI cable does not support CEC.

### To use Anynet+

1. Connect the Blu-ray Home Cinema to a Samsung TV with an HDMI cable. (See pages 22~23)
2. Set the Anynet+ function on your TV. (See the TV instruction manual for more information.)

### Anynet+ Functions

- One touch play  
You can power on your Samsung TV and Home Cinema, and play the disc in this unit simply by pressing the **PLAY** button on the TV's remote.
- One touch watching  
Select "Watching Blu-ray Home Theater" or "Connected to Blu-ray Home Theater" (depending on your TV's menu) in the Anynet+ menu on the TV. The Blu-ray Home Cinema will automatically turn on and the TV will be switched to HDMI mode.
- Remote control Link  
You can operate this player with your Samsung TV remote control.
- Available buttons on the Samsung TV remote: These buttons work the same as this Blu-ray Home Cinema's remote control.
  - Playback control buttons : 
  - Menu operation button : 
  - Numeric buttons : 

## TV Anynet+ Menu

When you press the Anynet+ button on your Samsung TV's remote control, the following On-Screen Display (OSD) will be shown.

- Blu-ray Home Cinema Menu

- When playing a movie : brings up the disc's menu (same as the **DISC MENU** button on the Blu-ray Home Cinema's remote control)
- In Stop mode : brings up the Setup menu (same as the **MENU** button on the Blu-ray Home Cinema's remote control.)



- Blu-ray Home Cinema Operation Menu

- When playing a DVD VIDEO, DVD-RW/-R, BD-ROM, BD-RE : shows INFO OSD (same as the **INFO** button on the Blu-ray Home Cinema's remote control)




- These menus may look different depending on your Samsung TV.

## HDMI Format

You can optimize the HDMI output for connection to a TV or Monitor.

- **TV** : Select if connected to a TV via HDMI.
- **Monitor** : Select if connected to a Monitor via HDMI.  
If the player is connected to a TV, the Monitor option is unavailable.

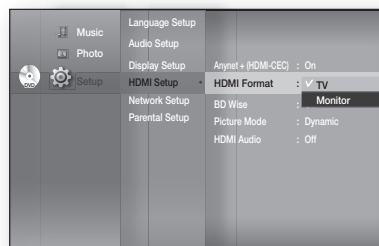


- A TV or monitor has to be connected to the player before you select this option.

## BD Wise

## Samsung products only

BD Wise is Samsung's latest inter-connectivity feature. When you connect Samsung products with BD-Wise to each other via HDMI, the optimum resolution will be set automatically.

- **On** : The original resolution of the BD/DVD disc will be output to the TV direct.
- **Off** : The output resolution will be fixed according to the Resolution previously set, regardless of the resolution of the disc.

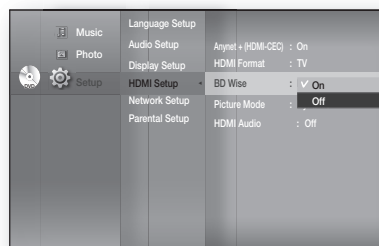

- If you want to change the resolution when you set BD Wise to On, you must set BD Wise to Off in advance.
- If you set BD Wise to off, the resolution of the connected TV will be automatically adjusted to its maximum resolution.
- If the player is connected to a device that does not support BD Wise, you can not use the BD wise function.
- For a proper operation of BD Wise, set BD Wise to On in the menus of the player and the TV.


# HDMI setup

## SETTING UP THE HDMI SETUP OPTIONS

### Picture Mode

This function enables you to adjust video quality when you are connected to a TV via HDMI.


- **Dynamic** : Choose this setting to increase Sharpness.
- **Normal** : Choose this setting for most viewing applications.
- **Movie** : This is the best setting for watching movies.

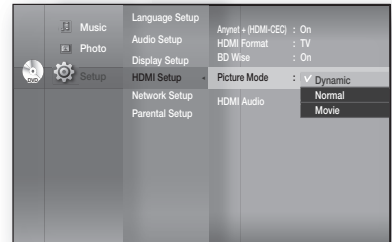

### HDMI Audio

The audio signals transmitted over an HDMI cable can be toggled On/Off.

- **On** : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
- **Off** : Video is transmitted over the HDMI connection cable only, and audio is output through the Blu-ray Home Cinema speakers only.

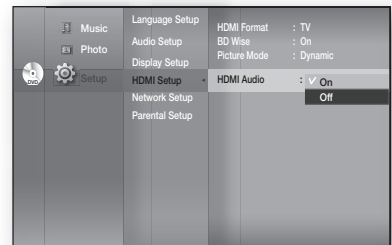

- The default setting of this function is HDMI Audio Off.
- HDMI Audio is automatically down-mixed to 2ch for TV speakers.


# Parental setup

## SETTING UP THE PARENTAL LOCK


The Parental Lock function works in conjunction with Blu-ray Disc/DVDs that have been assigned a rating which helps you control the types of Blu-ray Disc/DVDs that your family watches. There are up to 8 rating levels on a disc.




1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.

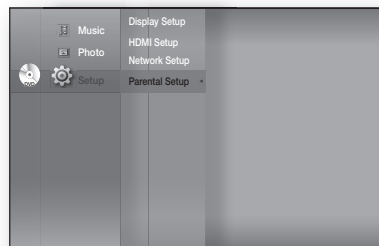


3. Press the **▲▼** buttons to select **Parental Setup**, then press the **ENTER** or **▶** button.  
When you operate your Blu-ray Home Cinema for the first time, the “Enter New password.” message will be displayed.

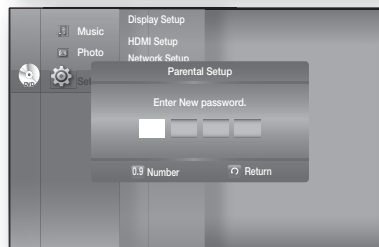

4. Enter the 4-digit password using the number buttons on the remote control.  
The “Confirm the password.” message will be displayed.  
Enter your password again.

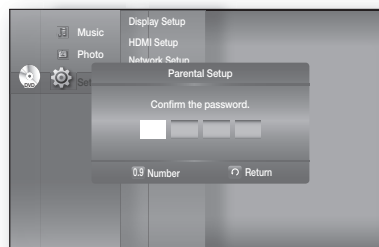

5. Press the **ENTER** or **▶** button to select Parental Lock.
6. Press the **▲▼** buttons to select **On** or **Off**, then press the **ENTER** button.

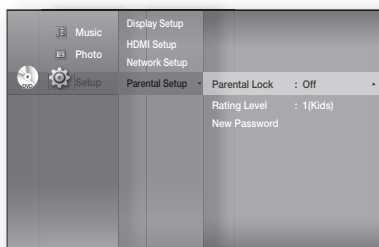

-  Press the **RETURN** or **◀** button to return to the previous menu. Press the **MENU** button to exit the menu.

# Parental setup

## SETTING UP THE PARENTAL LOCK

### If you forgot your password


1. Remove the disc.
2. Press and hold the **STOP** (■) button on the front panel for 5 seconds or more.
  - All settings will revert to the factory settings.



- When the factory default settings are restored, all the user data stored in the BD data will be deleted.




### Setting the Rating Level

1. Press the ▲▼ buttons to select **Rating Level**, then press the **ENTER** or ► button.
2. Press the ▲▼ buttons to select the rating level you want, then press the **ENTER** button. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play. A larger number indicates that the program is intended for adult use only. Level 8 is the most restrictive and Level 1 is the least.

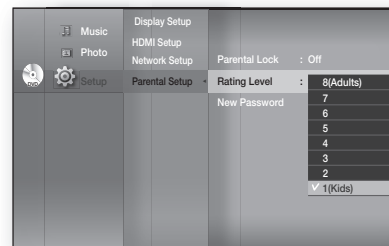

### Changing the Password

1. Press the ▲▼ buttons to select **New Password**, then press the **ENTER** or ► button.
2. Enter the 4-digit password using the number buttons on the remote control. The “Enter New password.” message will be displayed.
3. Enter your password again using the number buttons on the remote control.

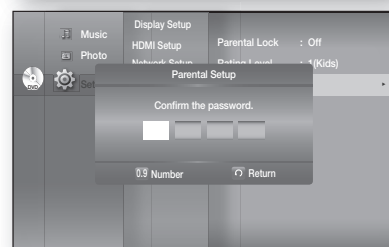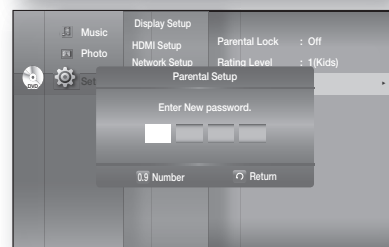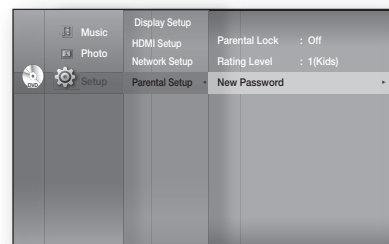


# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS

To obtain information on the proper settings, check the network settings on your computer or contact your Internet provider.

To set the network of your Blu-ray Home Cinema, follow the steps below.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **Network Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select the desired network option from the options described below, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select the desired item, then press the **ENTER** button.  
Each network option is described in detail below.

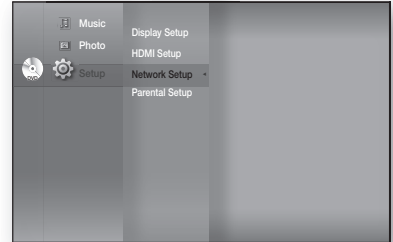


### Network Selection

Select Cable or Wireless as the method to connect to network.

To setup, follow steps 1~3 above.

4. Press the **▲▼** buttons to select **Network Selection**, then press the **ENTER** or **▶** button.
  - **Cable** : Select this to connect to the network using a cable. (see page 28)
  - **Wireless** : Select this to connect to the network wirelessly. (see page 29)

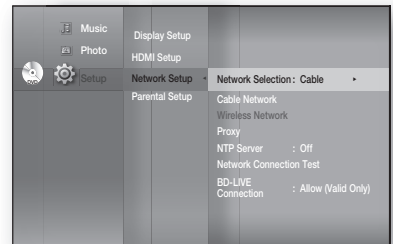



### Cable Network

To setup, follow steps 1~3 above.

4. Press the **▲▼** buttons to select **Cable Network**, then press the **ENTER** or **▶** button.
5. Press the **▲▼** buttons to select **DHCP**, then press the **ENTER** button.



- If DHCP is set to **On**, you can't select IP Address, Subnet Mask or Gateway.
- If DNS is set to **Auto**, you can't select Primary/Secondary DNS.

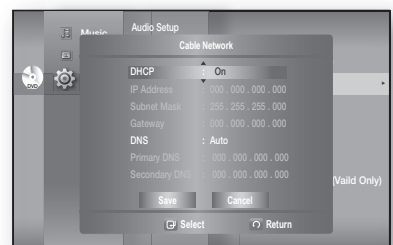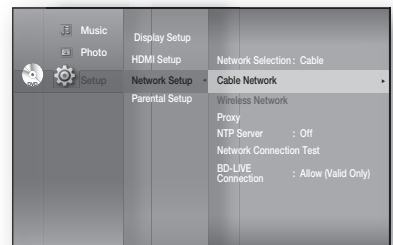


# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS


6. Press the ▲▼ buttons to select a desired item, then press the **ENTER** button.

- If DHCP is set to **Off** and DNS to **Manual**, enter your IP Address, Subnet Mask, Gateway and Primary DNS settings (Secondary DNS is optional).

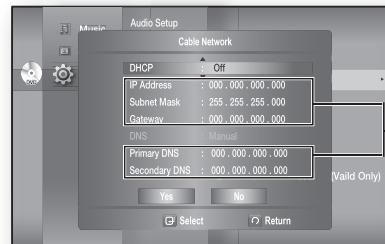


Setup available

- If DHCP is set to **On** and DNS to **Manual**, enter your Primary DNS setting (Secondary DNS is optional).

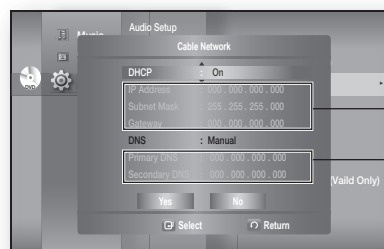

Setup available  
Setup not available

- If DHCP is set to **On** and DNS to **Auto**, you don't need further or additional settings.

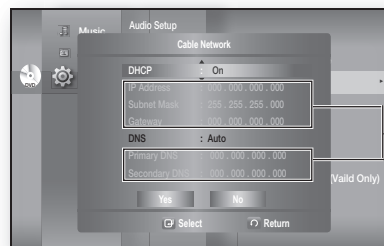

Setup not available

- When you select an item, use the number and ▲▼◀▶ buttons.
- If the automatic settings don't work, contact your ISP.

7. When done, use the ▲▼ buttons to select **Save**, then press the **ENTER** button.


8. If you don't want to save your work, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.

- The IP address used in this manual is for illustrative purposes only. You must refer to your network settings for the actual IP address.
- To obtain settings for IP Address, Subnet Mask, Gateway and Primary DNS, check the network settings in your computer or contact your internet service provider.

## Wireless Network

To setup, follow steps 1~3 on page 49.


4. Press the ▲▼ buttons to select **Wireless Network**, then press the **ENTER** or ▶ button.

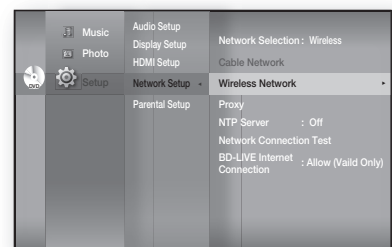

5. Press the ▲▼ buttons to select **DHCP**, then press the **ENTER** button.




- If DHCP is set to **On**, you can't select IP Address, Subnet Mask or Gateway.
- If DNS is set to **Auto**, you can't select DNS Server.

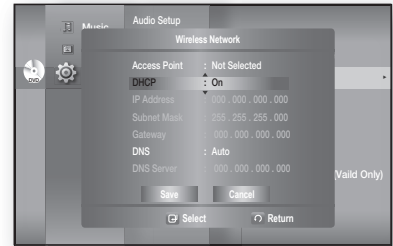


6. Press the ▲▼ buttons to select a desired item, then press the **ENTER** button.

- Select an Access Point, and then press the **ENTER** button to display available list of APs.  
(It may take several seconds to search.)

- When you select an AP and press the **ENTER** button, it tries to connect to the designated AP.
- If successful, a notification appears.  
(If selected AP shows a Lock icon, you may need to provide security authentication.)

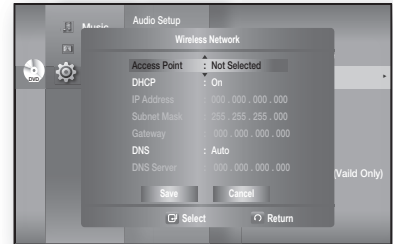

- Select your appropriate Security Access Point if it is known. If it is not, select WEP, WPAPSK or WPA2PSK from the list and enter in the password. Keep trying each Security Access Point and enter the Password until a connection is made.

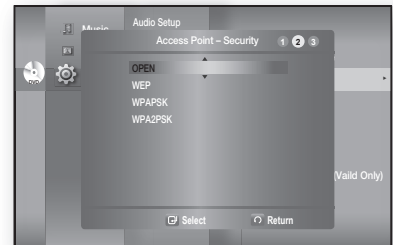


- Enter in the Password then press the **BLUE (D)** button to connect to your access point (Router).



For further details on AP security, refer to the AP's (Router) user manual.

- If DHCP is set to **Off** and, DNS to **Manual**, enter your IP Address, Subnet Mask, Gateway and DNS Server.

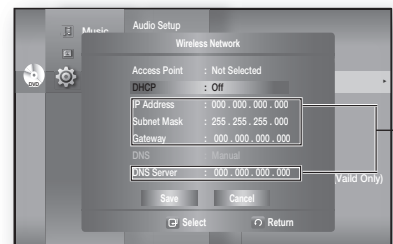


Setup available

# Network setup

## SETTING UP THE NETWORK SETUP OPTIONS

- If DHCP is set to **On** and, DNS to **Manual**, enter your DNS Server.

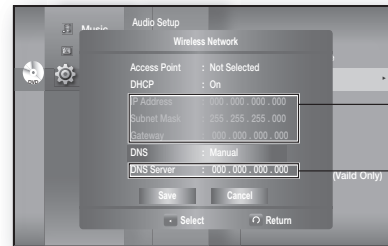

Setup available  
Setup not available

- If DHCP is set to **On** and, DNS to **Auto**, you don't need further or additional settings.



- When you select an item, use the number and ▲▼◀▶ buttons.
- If the automatic settings don't work, contact your ISP.



Setup not available

7. When done, use the ▲▼ buttons to select **Save**, then press the **ENTER** button.

8. If you don't want to save your work, use the ▲▼◀▶ buttons to select **Cancel**, then press the **ENTER** button.



- The IP address used in this manual is for illustrative purposes only. You must refer to the your network settings for the actual IP address.
- To obtain settings for IP Address, Subnet Mask, Gateway and DNS Server, check the network settings in your computer or contact your internet service provider.


## Proxy Setting

A proxy server services requests by forwarding them to other servers.

If you are required to configure the proxy setting, enter the settings specified by the ISP.

To setup, follow steps 1~3 on page 49.

4. Press the ▲▼ buttons to select **Proxy**, then press the **ENTER** or ▶ button.
  - **Server**
  - **Port**
  - **User**
  - **Password**

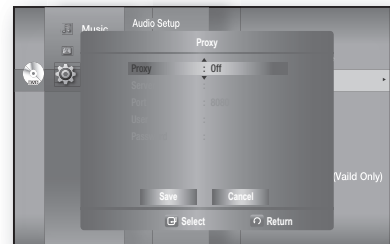


- For more information, contact your ISP (Internet Service Provider).

## NTP Server (Used to Retrieve Time Information from NTP Server)

To setup, follow steps 1~3 on page 49.

- Press the ▲▼ buttons to select **NTP Server**, then press the **ENTER** or ► button.
  - On** : The player automatically connects to the Internet server in order to adjust the time setting.
  - Off** : The player does not connect to the Internet server to adjust the time setting.

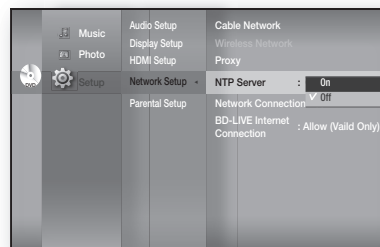


## Network Connection Test

Use this menu to check whether your network connection is working or not.

To setup, follow steps 1~3 on page 49.

- Press the ▲▼ buttons to select **Network Connection Test**, then press the **ENTER** or ► button.

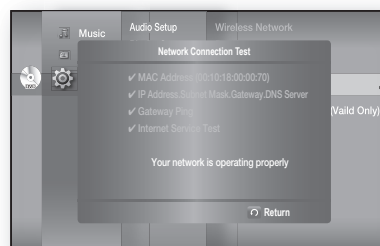


## BD-LIVE Internet Connection

The Blu-ray Home Cinema supports BD-LIVE which enables you to enjoy a variety of interactive service contents provided by the disc manufacturer through a network connection. To enjoy this feature, you must first perform the LAN connection (see page 28) or Wireless LAN adapter connection to the USB slot.

\* You must have a minimum 1 GB USB Memory device inserted in one of the USB slots in order to download content from BD-LIVE.

To setup, follow steps 1~3 on page 49.

- Press the ▲▼ buttons to select **BD-LIVE Internet Connection**, then press the **ENTER** or ► button.
  - Allow (All)** : The Internet connection will be allowed for all BD-LIVE contents.
  - Allow (Valid Only)** : The Internet connection will be allowed only for BD-LIVE contents containing a valid certificate.
  - Prohibit** : No Internet connection will be allowed for any BD-LIVE content.

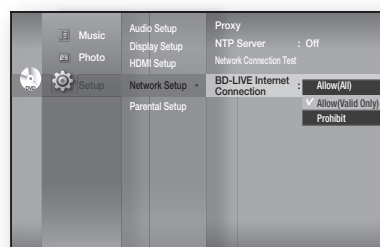

- **What is a valid certificate?** When the Blu-ray Home Cinema uses BD-LIVE to send the disc data and request to the server to certify the disc, the server uses the transferred data to check if the disc is valid and sends the certificate back to the player.
- The Internet connection may be restricted while you are using BD-LIVE contents.

# BD data management


BD Data (stored in external USB flash memory) is Blu-ray Disc content such as trailers and other special features downloaded from the BD-LIVE service or Blu-ray Discs.

\* You must have a minimum 1GB USB Memory device inserted in one of the USB slots in order to download content from BD-LIVE.

## SYSTEM DEVICE MANAGEMENT


You can manage user data stored in BD data.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **BD Data Management**, then press the **ENTER** or **▶** button.

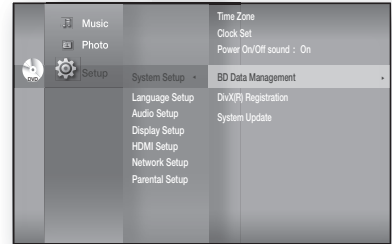

### - To delete the flash memory -

1. Press the **ENTER** button to select BD Data Delete. The message "All BD data will be deleted. Do you want to continue?" will be displayed.
2. Press the **◀▶** buttons to select Yes, then press the **ENTER** button.

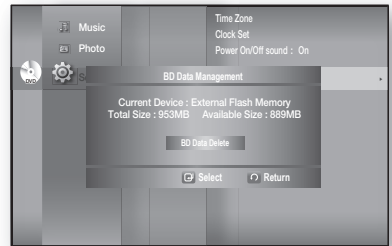

### Description of Device(Storage) Information on the Player

- Total Size : Total size of the Device(Storage).
- Available Size : Available size of the Device(Storage).



- Memory size information on the current device(storage) is located to the right of the BD Data Management menu.
- In the external memory mode, disc playback will be stopped if you disconnect the USB device in the middle of the playback.
- We recommend using an USB device that supports USB 2.0 protocols, FAT32 format and 4MB or more read /write speed.
- The Resume Play function may not work after formatting the storage device.

# System upgrade

Samsung may offer upgrades to your Blu-ray Home Cinema's firmware in the future. To upgrade this firmware you must :

1. Go to [samsung.com](http://samsung.com) and refer to the 'Support' page to download the latest firmware.  
You can use a CD-R or a USB flash drive to perform the firmware upgrade. For more information, see "Upgrade Manual" at the website mentioned above.

or

2. Connect the network (see pages 28~29) and follow the steps below.





## FIRMWARE UPGRADE

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Update**, then press the **ENTER** or **▶** button.
5. The player will check the cable or network connection status automatically. The connection checking window will be displayed.

- If the upgrade is possible : You will see information on the current and new versions of firmware in a message box.

- If the upgrade is not possible : You will see the following description in the message box.


- If the cable is not connected :  
"Ethernet cable is not connected. Please, check the Ethernet cable"
- If the network connection has failed :  
"This system can not connect to internet for update. Please, check the network setup"
- If no latest version is released (the latest version has been already installed) :  
"The latest version of the firmware is already installed. There is no need to update."
- If there is a disc in the player :  
"Please maintain "No Disc" state for network update."  
This indicates that you must remove all discs from the unit to perform the update.
- If the server service is not available :  
"Update Server is under maintenance. Please try again later."

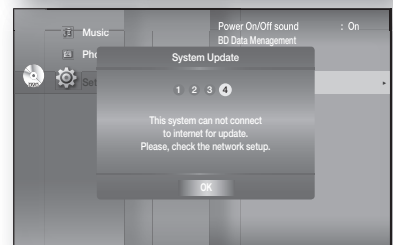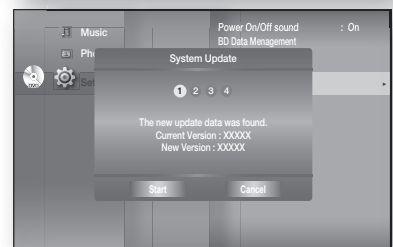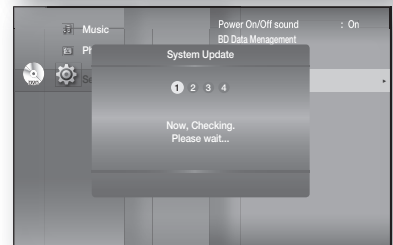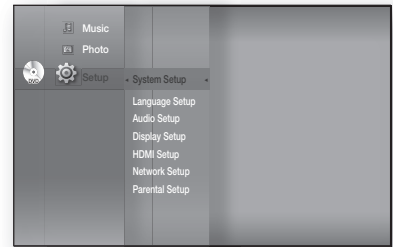


# System upgrade

## FIRMWARE UPGRADE


6. To perform the system upgrade, press the ◀ ▶ buttons to select **Start** and then press the **ENTER** button.

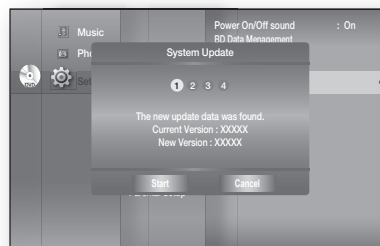


7. The system update gets started.

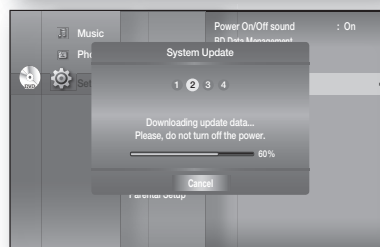

8. If you select **Cancel** during the download process, you are prompted to confirm your selection in a message box. If you want to cancel the download, select **Yes** and press the **ENTER** button.

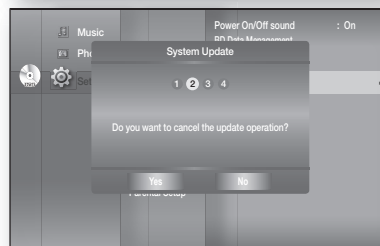

9. Verification will proceed. When download is done, the firmware update process will begin automatically.

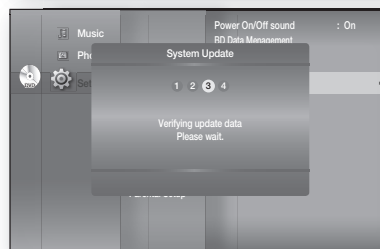

10. When the installation is done, the player will automatically turn off in 5 seconds.

All settings will revert to the factory settings. The next time you start the system and you will see the menu language selection window.





- If you want to cancel the upgrade in the process of downloading the upgrade data, press the **ENTER** button. You will see a confirmation message. Selecting **Yes** will end the upgrade process, and selecting **No** will continue the upgrade process.
- When the system upgrade is done, check the firmware details in the System Information menu.
- Do not turn off the player during the System Upgrade, as it may cause the player to not work properly.
- You must use a USB Flash Drive to do software upgrades using the USB Host jack. Other USB devices(ex. MP3 player) are not guaranteed to work.
- There should be only one firmware upgrade file in USB flash drive for the player to properly perform an upgrade.

## SYSTEM INFORMATION

When the firmware upgrade is done, check the firmware details by following the steps below.


1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **ENTER** or **▶** button.
3. Press the **▲▼** buttons to select **System Setup**, then press the **ENTER** or **▶** button.
4. Press the **▲▼** buttons to select **System Information**, then press the **ENTER** or **▶** button.  
You can see detailed information about the current firmware.
5. Press the **ENTER** button to select **OK**.

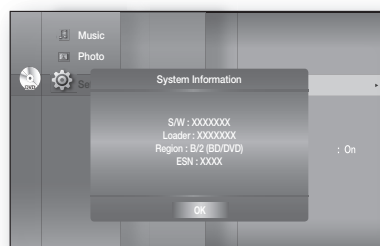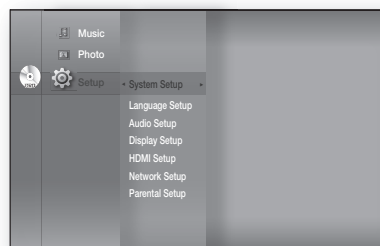

## FIRMWARE UPDATE NOTIFICATION

This popup menu appears when a newer firmware version is available from SAMSUNG's update server than what is currently on the Blu-ray Home Cinema.

- **Yes** : Select this to upgrade now.
- **No** : Select this if you plan to upgrade later.

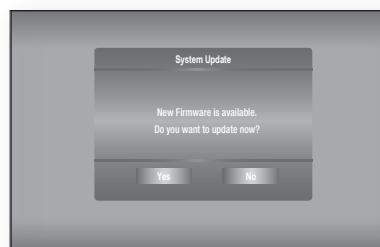

## DIVX (R) REGISTRATION


Please use the Registration code to register this Home Cinema System with the DivX(R) Video On Demand format. For more information, visit [www.divx.com/vod](http://www.divx.com/vod)

# Watching a movie


## USING THE DISPLAY FUNCTION



1. During playback, press the **INFO** button on the remote control.
  - If the Blu-ray Disc has the PIP feature, press the **INFO** button in the PIP section to display PIP-related information.
2. Press the **▲▼** buttons to select the desired item.
3. Press the **◀▶** buttons to make the desired setup change and then press the **ENTER** button.
  - You may use the number buttons of the remote control to directly access a title, chapter or to start the playback from a desired time.
4. To make the screen disappear, press the **INFO** button again.

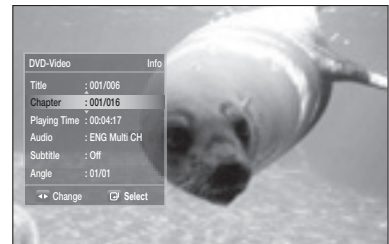

<INFO menu for the PIP section>

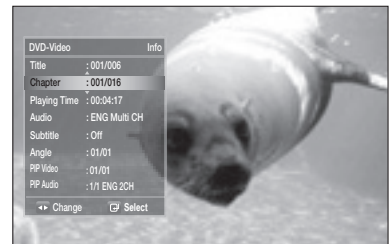

- If you are playing contents from the info menu, some functions may not be enabled depending on the disc.
- Title : To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a Blu-ray Disc/DVD, each movie will be identified as a Title.
- Chapter: Most Blu-ray Disc/DVD discs are recorded in chapters so that you can quickly find a specific chapter.
- Audio : Refers to the film's soundtrack language. A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- Playing Time : Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some discs.
- Subtitle : Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A Blu-ray Disc can contain up to 255 subtitle languages, and a DVD up to 32.
- Angle : When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.
- PIP Video/ PIP Audio : You can make PIP Video or PIP Audio settings if the current title of a Blu-ray Disc appears in the PIP section. The PIP Video / PIP Audio options, however, will be disabled with a Blu-ray Disc that does not support the PIP feature.

# USING THE DISC MENU & POPUP/TITLE MENU

## Using the Disc Menu



1. During playback, press the **DISC MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired selection, then press the **▶** or **ENTER** button.
  - The Disc menu setup items may vary from disc to disc.



■ The Disc Menu may not be available, depending on the disc.

## Using the Title Menu



1. During playback, press the **TITLE MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons to make the desired selection, then press the **ENTER** button.
  - The Title menu setup options may vary from disc to disc.


■ The Title Menu may not be available, depending on the disc.  
■ Title Menu will only be displayed if there are at least two titles on the disc.

## Playing the Title List



1. With the unit in Stop mode/Playback mode, press the **DISC MENU** or **TITLE MENU** button.
2. Press the **▲▼** buttons to select an entry you want to play from Title List, then press the **▶** or **ENTER** button. The selected entry (title) will be played back.


- Go to Playlist -  
To go to the Playlist, press the **RED(A)** button.

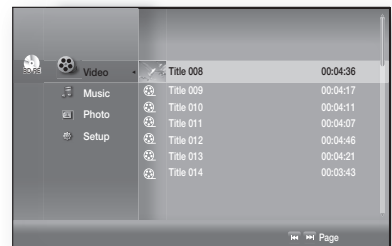

## Using the Popup Menu



1. During playback, press the **POPUP MENU** button on the remote control.
2. Press the **▲▼◀▶** buttons or **ENTER** button to select the desired menu.
  - The Popup menu setup options may vary from disc to disc.

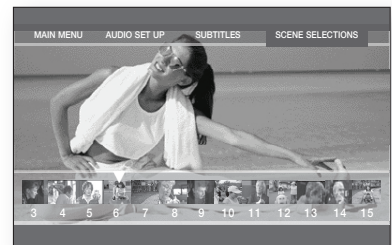

■ The Popup Menu may not be available, depending on the disc.

# Watching a movie


## REPEAT PLAY

Repeat the current chapter or title.

### Repeat playback



1. During playback, press the **REPEAT** button on the remote control. Repeat screen appears.
2. Press the **▲▼** buttons to select **Chapter** or **Title**.
  - Blu-ray Disc/DVD repeats play by chapter or title.
3. To return to normal play, press the **REPEAT** button again, then press the **▲▼** buttons to select **Off**.

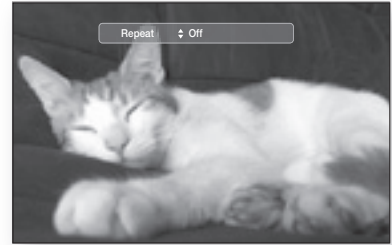


- The Repeat function may not be available, depending on the disc.

### Using the A-B Repeat function



1. Press the **REPEAT A-B** button on the remote control during playback.
2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
3. Press the **REPEAT A-B** button at the point where you want repeat play to stop (B).
4. To return to normal play, press the **REPEAT A-B** button again.

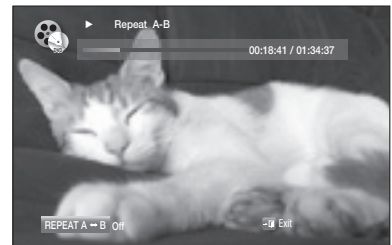

- Point B cannot be set until 5 seconds of playback has elapsed from point A.


## SELECTING THE AUDIO LANGUAGE



You can select a desired audio language quickly and easily with the **AUDIO** button.

### Using the AUDIO button

1. Press the **AUDIO** button during playback. The Audio changes when the button is pressed repeatedly.
  - The audio languages are represented by abbreviations.
2. To remove the **Audio** bar, press the **CANCEL** or **RETURN** button.

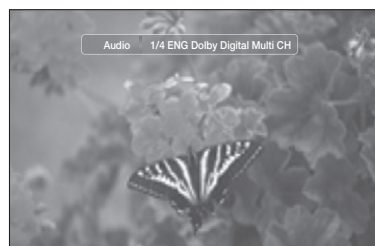

### Using the INFO button

1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select **Audio**.
3. Press the **◀▶** buttons on the remote control to select the desired audio language.



- This function depends on what audio languages are encoded on the disc and may not be available.
- A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- You can use the **AUDIO** button to change the audio soundtrack as well as the audio language, depending on the disc type. Some Blu-ray Discs may allow you to select either the multi-channel LPCM or Dolby Digital audio soundtrack in English.
- Information about the primary / secondary mode will be also displayed if the Blu-ray Disc has a PIP section. Use the **◀▶** button to switch between primary and secondary audio modes.
- The **◀▶** indicator will not be displayed on the screen if the PIP section does not contain any PIP audio settings.


## SELECTING THE SUBTITLE LANGUAGE

You can select a desired subtitle quickly and easily with the **SUBTITLE** button.

### Using the SUBTITLE button



1. Press the **SUBTITLE** button. The subtitle changes when the button is pressed repeatedly. The subtitle languages are represented by abbreviations.
2. To remove the **Subtitle** bar, press the **CANCEL** or **RETURN** button.

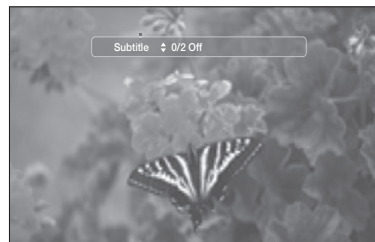

# Watching a movie

---

## SELECTING THE SUBTITLE LANGUAGE

---

### Using the INFO button

1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select **Subtitle**.
3. Press the **◀▶** buttons on the remote control to select the desired subtitle language.



- You may be able to change the desired subtitle in the Disc Menu, depending on the Blu-ray Disc / DVD. Press the **DISC MENU** button.
- This function depends on what subtitles are encoded on the disc and may not be available on all Blu-ray Discs/DVDs.
- A Blu-ray Disc can contain up to 255 subtitle languages and a DVD up to 32.
- Information about the primary / secondary mode will be also displayed if the Blu-ray Disc has a PIP section.
- This function changes both the primary and secondary subtitles at the same time.
- The total number of subtitles is the sum of the primary and secondary ones.

## CHANGING THE CAMERA ANGLE


---

When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

### Using the ANGLE function



1. During playback, press the **INFO** button on the remote control.
2. Press the **▲▼** buttons to select **Angle**.
3. Press the **◀▶** buttons or you can use the number buttons on the remote control to select the desired angle.

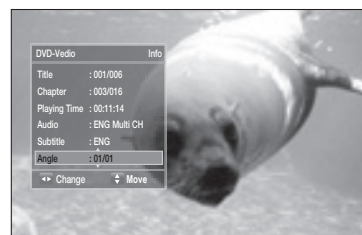

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- These functions may not work, depending on the disc.

## PIP (PICTURE IN PICTURE) SETTINGS

The PIP feature allows you to view additional content (such as commentaries) in a small screen window while the movie is playing.

### Using the PIP button




1. If the current Blu-ray Disc features the PIP function, you can use the **PIP** button to turn **PIP On** or **Off**.



2. Each time you press the **PIP** button, you can toggle between **PIP On** and **PIP Off**.




- 
  - You can change detailed settings of the PIP feature in the INFO menu (see page 58: selection of secondary audio, video stream and subtitle etc.).
  - If you switch from PIP Video, PIP Audio will change automatically in accordance with PIP Video.
  - If the Blu-ray Disc supports only PIP Audio, you can just press the PIP button to turn the secondary audio on or off.

## BD-LIVE™

The Blu-ray Home Cinema supports BD-LIVE which enables you to enjoy a variety of interactive service contents provided by the disc manufacturer through network connection.

### Using the BD-LIVE Disc

1. Connect the network (see pages 28~29) and check the network setup (see pages 49~53).
2. Insert a Blu-ray disc that supports BD-LIVE.
3. Select the contents provided by the disc manufacturer to enjoy the BD-LIVE.

- 
  - The way you use BD-LIVE and the features may differ, depending on the disc.
  - To use BD-LIVE, you must insert a minimum 1GB USB memory device into one of the USB slots.

# Watching a movie

## DIVX PLAYBACK


The functions discussed on this page apply to DivX disc playback only.

### Skip Forward/Back



During playback, press the **⏮**, **⏭** button.

- Goes to the next file whenever you press the **⏭** button, if there are over 2 files on the disc.
- Goes to the previous file whenever you press the **⏮** button, if there are over 2 files on the disc.

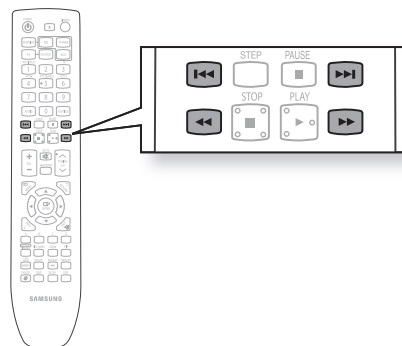

### Fast Playback



During playback, press the **⏮**, **⏭** button.

To play back the disc at a faster speed, press the **⏮** or **⏭** button during playback.


- Each time you press either button, the playback speed will change as follows:  
**x2 → x4 → x8.**

### Audio Display



Press the **AUDIO** button.

- If there are multiple audio languages on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between **AUDIO (1/N, 2/N ...)**.

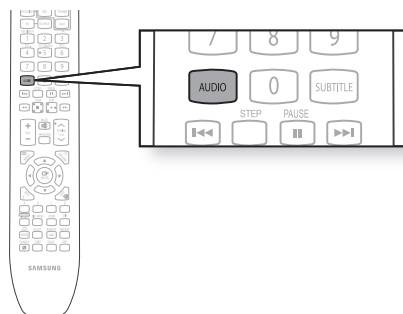


### Subtitle Display



Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between **SUBTITLE (1/N, 2/N ...)** and **SUBTITLE OFF**.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DivX discs.

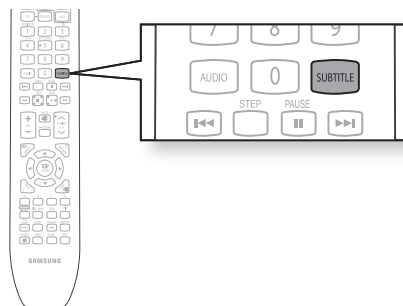

## DivX(Digital internet video express)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

### 1. Supported Formats

This product only supports the following media formats.If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

#### Supported Video Formats

Format	AVI
Supported Versions	DivX3.11 ~ DivX5.X, XviD

#### Supported Audio Formats

Format	MP3	AC3
Bit Rate	56 ~ 320 kbps	128 ~384kbps
Sampling Frequency	32 ~ 48kHz	44.1/48kHz

- This product supports up to 720 x 480 pixels.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.
- Qpel and gmc is not supported.

### 2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (\*.smi) in the same file name as that of the DivX media file (\*.avi) within the same folder.  
Example. Root Samsung\_007CD1.avi  
Samsung\_007CD1.smi

- "ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX,Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.




ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

DivX Certified to play DivX video.

# Listening to music

## BUTTONS ON THE REMOTE CONTROL USED FOR AUDIO CD (CD-DA)/ MP3 DISC PLAYBACK

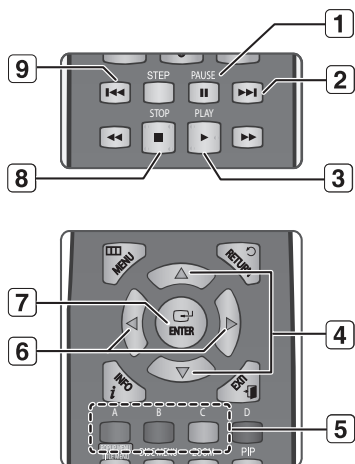

1. **PAUSE** button : Pauses playback.
2. **SKIP** ( ) button : During playback, moves to the next in the Music List or moves to the next track in the Playlist.
3. **PLAY** button : Plays the currently selected track.
4. **▲▼** buttons : Selects a track(song) in the Music List or Playlist.
5. **COLOUR** buttons
  - **RED(A)** button : Selects the Play Mode(Repeat) during playback.
  - **GREEN(B)** button : Go to Playlist from Music List.
  - **YELLOW(C)** button : Playlist play.
6. **◀▶** buttons
  - ◀ : Plays the applicable track, according to the current position.
  - ▶ : Moves to the menu.
7. **ENTER** button : Plays the selected track (song).
8. **STOP** button : Stops a track(song).
9. **SKIP** ( ) button : If you pressed this button after three seconds of playback, the current track will be replayed from the beginning. But, if you pressed this button within three seconds after playback starts, the previous track will be played. Used to move to the previous page in the Music List or Playlist.

## REPEAT AUDIO CD(CD-DA) & MP3

During playback, press the **REPEAT** or **RED(A)** button repeatedly to select the repeat mode you want.

When playing an Audio CD(CD-DA) : → → →

When playing an MP3 disc : → → →

- **Normal (Audio CD(CD-DA)/MP3)**: Tracks on a disc are played in the order in which they were recorded on the disc.
- **Repeat Track (Audio CD(CD-DA)/MP3)**
- **Repeat Folder (MP3)**
- **Random (Audio CD(CD-DA)/MP3)**
  - When playing an Audio CD(CD-DA): The random option plays a disc's tracks in random order.
  - When playing an MP3 disc : The random option plays a folder's file in random order.
- **Repeat All (Audio CD(CD-DA))**: All tracks are repeated.



- To return to normal playback -

Press the **REPEAT** or **RED(A)** button repeatedly to return to normal playback.


# PLAYING AN AUDIO CD(CD-DA)/MP3



1. Insert an Audio CD(CD-DA) or an MP3 Disc into the disc tray.
  - For an Audio CD, the first track will be played automatically.
  - For an MP3 disc, press the ▲▼ buttons to select **Music**, then press the **ENTER** button.  
(You can listen to mp3 files using a USB storage device)
2. To move to the Music List, press the **STOP** or **RETURN** button.  
The Music List screen is displayed on your TV.
3. Press the ▲▼ buttons to select the track you want to play, then press the **ENTER** button.

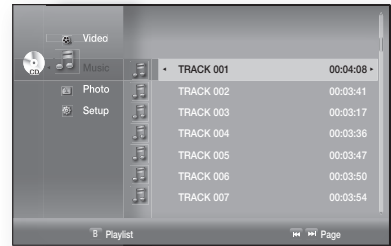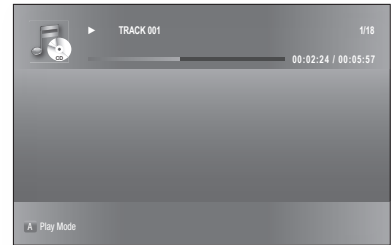

## ❖ Audio CD(CD-DA)/MP3 Screen Elements

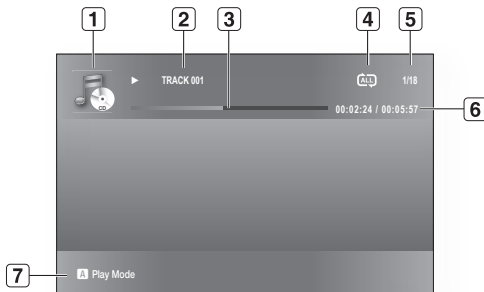

1	Displays the media type.
2	Current track (song)
3	Play Status Bar.
4	Displays the repeat status.
5	Displays the current play index, total track number.
6	Current /Total Play Time.
7	Displays available <b>COLOUR</b> buttons.




# Listening to music

## Playlist



You can create a playlist with up to 99 tracks.

1. Insert an Audio CD(CD-DA) or an MP3 Disc into the disc tray.
  - For an Audio CD, the first track will be played automatically.
  - For an MP3 disc, press the **▲▼** buttons to select **Music**, then press the **ENTER** button.  
(You can listen to mp3 files using a USB storage device)
2. To move to the Music List, press the **GREEN(B)** or **RETURN** button.  
The Music List screen is displayed.
3. Press the **GREEN(B)** button to go to the Playlist.
4. Press the **▲▼** buttons to select a track, then press the **ENTER** button to add it to the Playlist. Repeat this procedure to add additional tracks.
5. If there is an undesired track in the playlist, press the **▶▲▼** button to select that track, and then press the **ENTER** button.
  - The selected track will be deleted.
6. Press the **YELLOW(C)** button to play the selected tracks.  
When the track is finished, the next track will automatically play.
7. To edit the Playlist, press the **STOP** or **RETURN** button.
8. To go to the Music List, press the **RETURN** button.

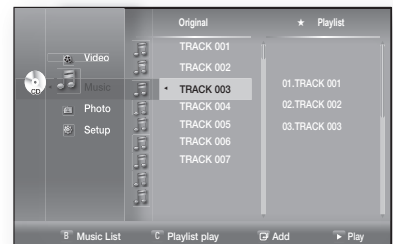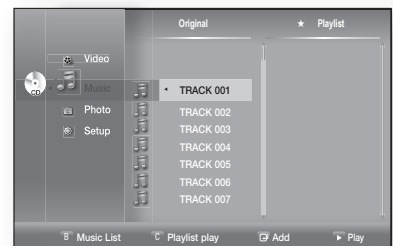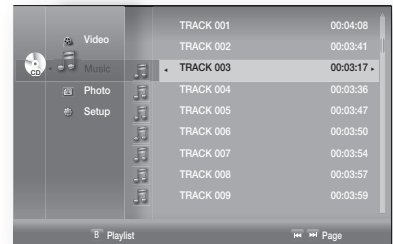

# Viewing a picture

## VIEWING A PICTURE

1. Insert a JPEG disc into the Disc Slot .
  - The Menu screen is displayed.
2. Press the ▲▼ buttons to select **Photo**, then press the **ENTER** button.
  - The Photo List is displayed.
3. Press the ▲▼ buttons to select a picture.
  - To see the next page, press the SKIP (▶▶) button.
  - To see the previous page, press the SKIP (◀◀) button.





## SLIDE SHOW/SPEED

To setup, follow steps 1 and 2 above.

3. Press the **BLUE(D)** button.
  - The slide show starts.
4. When the SlideShow starts, press the **BLUE(D)** button to adjust the play speed.
  - Each time you press the button, the play speed will increase accordingly.





- To stop the Slide Show -  
Press the **STOP** or **RETURN** button.

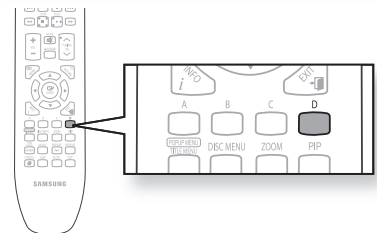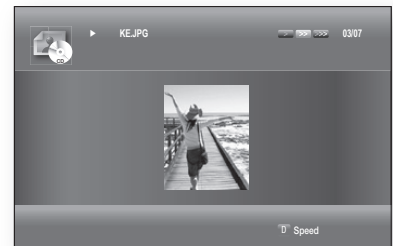

## ROTATE

To setup, follow steps 1 and 3 above.

4. Press the **ENTER** button.
5. Use the **RED(A)** and **GREEN(B)** buttons to rotate the image in a desired direction.

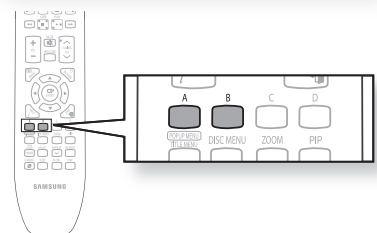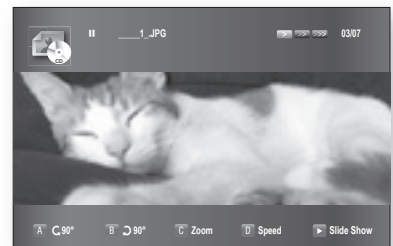

# Viewing a picture

## ZOOM

To setup, follow steps 1 to 3 in "Viewing a Picture" on page 69.

4. Press the **ENTER** button.

5. Press the **YELLOW(C)** button.




6. Use the **YELLOW(C)** or **ZOOM** button to zoom the image in/out.

- To move the area -

Press the **▲▼◀▶** buttons to the area you want to enlarge.

- To stop the Zoom -

Press the **YELLOW(C)** button.

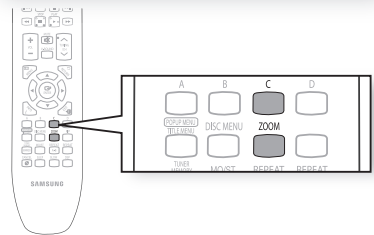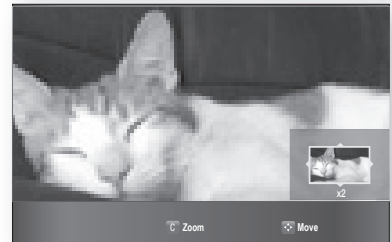
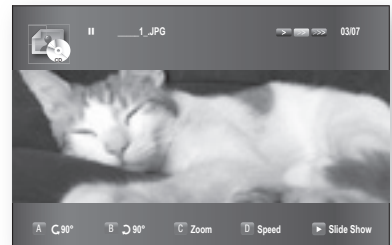


## GO TO PHOTO LIST

To setup, follow steps 1 to 3 in "Viewing a Picture" on page 69.

4. Press the **ENTER** button.

5. To go Photo List, press the **RETURN** or **STOP** button.

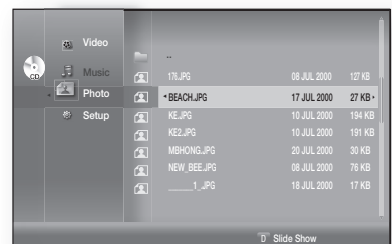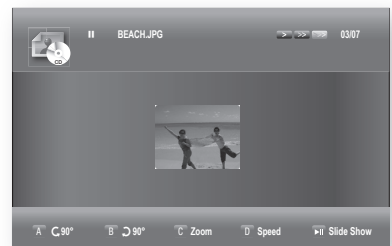


# Using the USB function

## PLAYING MEDIA FILES USING THE USB HOST FEATURE

You can enjoy media files such as pictures and music saved on an MP3 player, USB memory stick or digital camera.

1. Connect the USB device to the USB port on the side of the unit.
2. **USB Connected** appears on the display screen and then disappears.
3. USB icon is displayed on the Setup Menu.

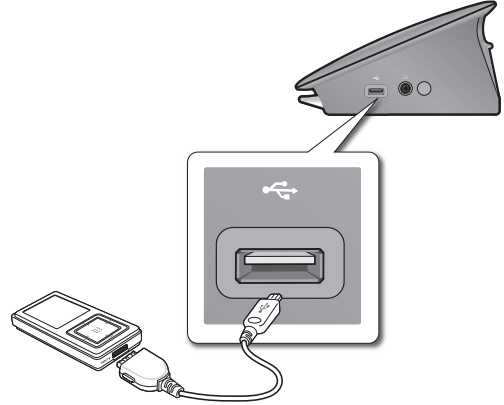

## Safe USB Removal


To prevent damage to the data stored in the USB device, perform safe removal before disconnecting the USB cable.

- Press the **YELLOW(C)** button. The display will show **Now**. You can remove USB safely.
- Remove the USB cable.

## Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- When there is more than one file and you press the **⏭** button, the next file is selected.
- When there is more than one file and you press the **⏮** button, the previous file is selected.

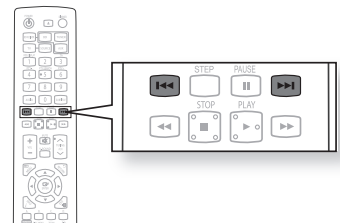

# Using the USB function

## USB Host Specification

<b>USB Host Specification</b>	<ul style="list-style-type: none"><li>• Supports USB 1.1 or USB 2.0 compliant devices.</li><li>• Supports devices connected using the USB A type cable.</li><li>• Supports UMS (USB Mass Storage Device) V1.0 compliant devices.</li><li>• Supports the device of which the connected drive is formatted in the FAT(FAT, FAT16, FAT32) file system.</li></ul>
<b>Non-compliance</b>	<ul style="list-style-type: none"><li>• Does not support a device that requires installing a separate driver on the PC (Windows).</li><li>• Does not support connection to a USB hub.</li><li>• A USB device that is connected using the USB extension cable may not be recognized.</li><li>• A USB device requiring a separate power source needs to be connected to the player with the separate power connection.</li></ul>
<b>Operational Limitations</b>	<ul style="list-style-type: none"><li>• If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected.</li><li>• A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device.</li></ul>

## USB Devices that can be used with the Home Cinema

1. USB Storage Device
2. MP3 Player
3. Digital Camera
4. Removable HDD
  - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
  - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The connector of the USB cable may differ, depending on the manufacturer of the USB device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
  - The USB card reader may not be supported, depending on the manufacturer.
  - If you install multiple memory devices into a multi card reader, you may experience problems.


## Supported file Formats

Format	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	JPG	JPG .JPEG	–	–	640x480	–
Music	MP3	.MP3	80~384kbps	–	–	44.1kHz

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.

## LISTENING TO RADIO

1. Press the **TUNER** button to select the FM band.
2. Tune in to the desired station.
  - Automatic Tuning 1 : When the **SKIP** (⏮ ⏭) button is pressed, a preset broadcast station is selected.
  - Automatic Tuning 2 : Press and hold the **TUNING/CH** (↶ ↷) button to automatically search for active broadcasting stations.
  - Manual Tuning : Briefly press the **TUNING/CH** (↶ ↷) button to increase or decrease the frequency incrementally.

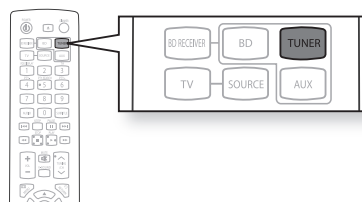


## Main Unit

1. Press the **FUNCTION** button to select the FM band.
2. Select a broadcast station.
  - Automatic Tuning 1 : Press the **STOP** (■) button to select **PRESET** and then press the **SKIP** (⏮ ⏭) button to select the preset station.
  - Automatic Tuning 2 : Press the **STOP** (■) button to select **MANUAL** and then press and hold the **SKIP** (⏮ ⏭) button to automatically search the band.
  - Manual Tuning : Press the **STOP** (■) button to select **MANUAL** and then briefly press the **SKIP** (⏮ ⏭) button to tune in to a lower or higher frequency.

## Mono/Stereo

Press the **MO/ST** button to listen in Mono/Stereo.


- Each time the button is pressed, the sound switches between **STEREO** and **MONO**.
- In a poor reception area, select **MONO** for a clear, interference-free broadcast.

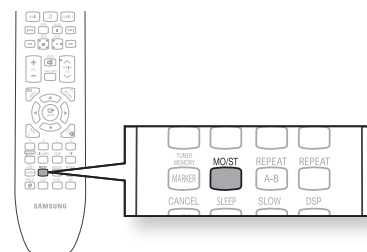

## PRESETTING STATIONS

Example : Presetting FM 89.10 in the memory

1. Press the **TUNER** button to select the FM band.
2. Press the **TUNING/CH** (↶ ↷) button to select <89.10>.
3. Press the **TUNER MEMORY** button.
  - **Number** flashes in the display.
4. Press the **SKIP** (⏮ ⏭) button to select preset number.
  - You can select between 1 and 15 presets.
5. Press the **TUNER MEMORY** button again.
  - Press the **TUNER MEMORY** button before Number disappears from the display.
  - Number disappears from the display and the station is stored in memory.
6. To preset another station, repeat steps 2 to 5.
  - To tune in to a preset station, press the **SKIP** (⏮ ⏭) button on the remote control to select a channel.

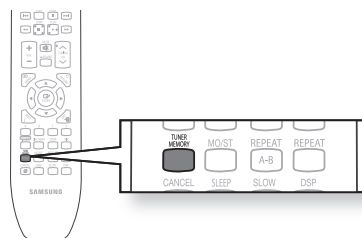


## ABOUT RDS BROADCASTING

### Using the RDS (Radio Data System) to receive FM stations

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

When tuned to an FM station which provides the RDS service, the RDS indicator lights up on the display.

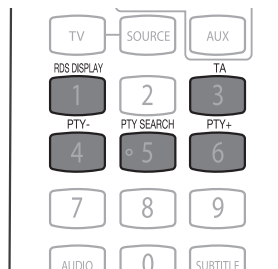

### Description on RDS function

- PTY (Program Type) : Displays the type of programme currently being broadcast
- PS NAME (Program Service Name) : Indicates the name of broadcasting station and is composed of 8 characters.
- RT (Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
- CT (Clock Time) : Decodes the real time clock from the FM frequency. Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
- TA (Traffic Announcement) : When this symbol flashes it shows that the traffic announcement is in progress.




- RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

### To show the RDS signals

You can see the RDS signals the station sends on the display.

#### Press the RDS DISPLAY while listening to an FM station.

- Each time you press the button, the display change to show you the following information : PS NAME → RT → CT → Frequency

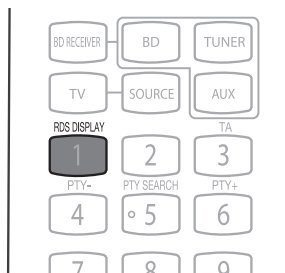

- PS (Program Service) : While searching, <PS> appears and then the station names will be displayed. <NO PS> appears if no signal is sent.
- RT(RadioText) : while searching, <RT> appears and then text messages the station sends will be displayed. <NO RT> appears if no signal is sent.
- Frequency : station frequency (non-RDS service)

### About characters shown in the display

When the display shows PS, or RT signals, the following characters are used.

- The display window cannot differentiate upper case and lower case letters and always uses upper case letters.
- The display window cannot show accented letters, <A,> for instance, may stands for accented <A's> like <À, Á, Â, Ã, Ä and Å.>

## PTY (Program Type) indication and PTY-SEARCH function

One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels by specifying the PTY codes

### To search for a program using the PTY codes

#### Before you start, remember...

- The PTY Search is only applicable to preset stations.
- To stop searching any time during the process, press PTY SEARCH while searching.
- There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 1 again.
- When pressing the buttons on the primary remote control, make sure that you have selected the FM station using the primary remote control.

1. Press the **PTY SEARCH** while listening to an FM station.
2. Press the **PTY-** or **PTY+** until the PTY code you want appears on the display.
  - The display gives you the PTY codes described to the right.
3. Press the **PTY SEARCH** again, while the PTY code selected in the previous step is still on the display.
  - The centre unit searches 15 preset FM stations, stops when it finds the one you have selected, and tunes in that station.



Display	Program Type
NEWS	News including an announced opinion and report
AFFAIRS	Several matters including a current incident, documentary, discussion and analysis.
INFO	Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	Sports
EDUCATE	Education
DRAMA	Drama-Radio serial, etc.
CULTURE	Culture-National or local culture including the religious problem, social science, language, cinema, etc.
SCIENCE	Natural science and technology
VARIED	Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	Pop music
ROCK M	Rock music
M.O.R.M	Current contemporary music considered to be "easy listening."

Display	Program Type
LIGHT M	Light classical music- Classical music and instrumental and chorus music
CLASSICS	Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	Other music - Jazz, R&B country music
WEATHER	Weather
FINANCE	Finance
CHILDREN	Children's programmes
SOCIAL A	Social affairs
RELIGION	Religion
PHONE IN	Phone in
TRAVEL	Travel
LEISURE	Leisure
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary

# Using Bluetooth

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

## WHAT IS BLUETOOTH?



**Bluetooth is a new technology that enables Bluetooth-compliant devices to easily interconnect with each other using a short wireless connection.**

- A Bluetooth device may cause a noise or malfunction, depending on usage.
  - When a part of the body is in contact with the receiving/transmitting system of the Bluetooth device or the Blu-ray Home Cinema.
  - Electrical variation from obstructions caused by a wall, corner or office partitioning.
  - Electrical interference from same frequency-band devices including medical equipment, microwave oven and wireless LAN.
- Pair the Blu-ray Home Cinema with the Bluetooth device while maintaining a close distance.
- The further the distance is between Blu-ray Home Cinema and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- The Blu-ray Home Cinema supports Middle Quality SBC data(237kbps@48kHz) and High Quality SBC data(328kbps@44.1kHz).
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Blu-ray Home Cinema has an effective reception range of up to 10 meters in all directions if there are no obstacles. The connection will be automatically cut off if the distance is out of this range. Even within this range, the sound quality may be deteriorated by obstacles such as walls or doors.

## TO CONNECT THE BLU-RAY HOME CINEMA TO A BLUETOOTH DEVICE

**Check if the Bluetooth device supports the Bluetooth-compliant stereo headset function.**

1. Press the **FUNCTION** button on the front panel of the Blu-ray Home Cinema repeatedly until "BT AUDIO" appears.
  - The mode switches as follows :  
**BD/DVD → D.IN → AUX → BT AUDIO → FM.**
  - "READY" appears on the front display.
2. Select the Bluetooth menu on Bluetooth device you want to connect.  
(refer to Bluetooth device's user manual)
3. Select the Stereo headset menu on the Bluetooth device.
  - You will see a list of scanned devices.
4. Select "**Samsung BD Theater**" from the searched list.
  - When the Blu-ray Home Cinema is connected to the Bluetooth device, the Blu-ray Home Cinema will display "**CONN..**" on the front display, followed by the device name of the connected Bluetooth device.
  - The Blu-ray Home Cinema connection is complete.
5. Play music on the connected device.
  - You can listen to the music playing on the connected Bluetooth device over the Blu-ray Home Cinema.

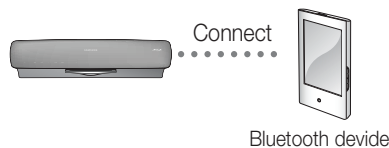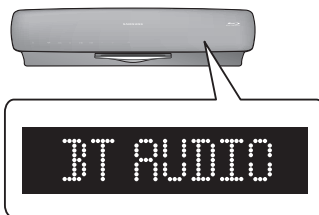


- You may be required to enter a PIN code(password) when connecting the Bluetooth device to the Blu-ray Home Cinema. If the PIN code input window appears, enter <0000>.
- The Blu-ray Home Cinema may control play related function only when connected device supports the function.
- The Blu-ray Home Cinema supports Middle Quality SBC data(237kbps@48kHz) and High Quality SBC data(328kbps@44.1kHz).

### To disconnect the Bluetooth device from the Blu-ray Home Cinema

You can disconnect the Blu-ray Home Cinema from the Bluetooth device. (refer to Bluetooth device's user's manual)

- The Blu-ray Home Cinema will be disconnected.
- When the Blu-ray Home Cinema is disconnected from the Bluetooth device, the Blu-ray Home Cinema will display "READY" on the front display.

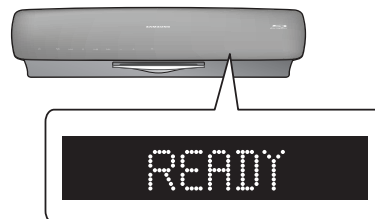

### To disconnect the Blu-ray Home Cinema from the Bluetooth device

Press the **FUNCTION** button on the front panel of the Blu-ray Home Cinema to switch from "BT AUDIO" to another mode.

- The connected Bluetooth device will wait a certain time for response from the Blu-ray Home Cinema before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)
- The currently connected device will be disconnected.



- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Blu-ray Home Cinema and the Bluetooth device exceeds (10 m). If the distance is returned to the effective range or you restart the Bluetooth device, the Bluetooth connection can be restored.
- With some Bluetooth devices, some functions may not work properly.
- Operational specifications for corresponding devices such as mobile phones and MP3 players may differ when pressing the buttons -play, pause, stop, ff, rew, next, back- on the remote controller.



# Using an iPod

You can enjoy playback of your iPod using the supplied remote control.


## LISTENING TO MUSIC

You can play music files stored in the iPod player by connecting it to the Blu-ray Home Cinema.

1. Connect the iPod dock connector to the iPod jack on the Blu-ray Home Cinema.
2. Place the iPod in the Dock.
  - Your iPod is automatically turned on.
  - "iPod Connected" message appears on the TV screen.
3. Press the **MENU** button on the remote control.
4. Press the **◀, ▼** buttons on the remote control to select iPod mode.
5. Press the **▶, ▲, ▼** buttons on the remote control to select **Music** and press the **ENTER** button.
  - The **Music** categories appear.
6. Press the **▲, ▼** buttons desired category and press the **ENTER** button.
  - The music list appears on your TV.
7. Press the **▲, ▼** buttons to select the music file to play and press the **ENTER** button.
  - The music will start with a new screen which shows the song title, time, artist, and progress bar.
8. You can use the remote control or main unit to control simple playback functions such as **PLAY, PAUSE, STOP, ⏮ / ⏭**, **⏪ / ⏩** and **REPEAT**.
  - Press the **RED(A)** button to select a desired play mode.

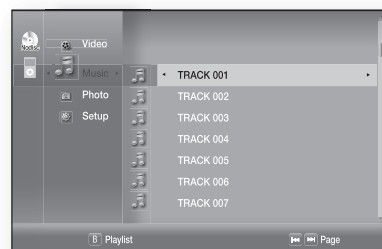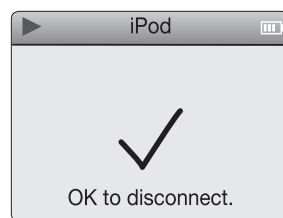

### ❖ iPod Playback Screen Elements

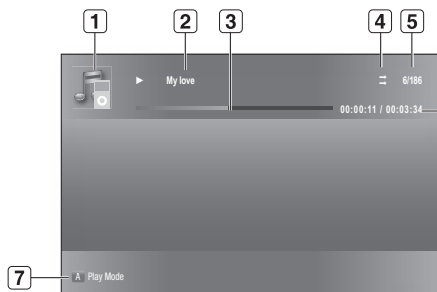

1	Displays the media type.
2	Current track (song)
3	Play Status Bar.
4	Displays the repeat status.
5	Displays the current play index, total track number.
6	Current /Total Play Time.
7	Displays available <b>COLOUR</b> buttons.

To move to the Music List and select a track:

1. Press the **MENU** or **STOP** button.
  - It stops playing and returns to the music list.
2. Press the **▲**, **▼** buttons to select the file you want to play and press the **ENTER** button.
  - Press the **RETURN** or **◀** button to return to the parent menu.

## iPod Music categories

File information including the artist name, album name, music title and genre will be displayed according to the ID3 Tag information on the appropriate music file.

**Now Playing** : Plays a recently played file or moves to the playback screen of the current file.

**Artists** : To play by artist.

**Songs** : To play in numeric or alphabetical order

**Playlists** : To play by Playlist.

**Albums** : To play by album.

**Genres** : To play by genre.

**Composer** : To play by composer.





- See page 25 for compatible iPods.  
Compatibility depends on the software version of your iPod.
- The category list may differ, depending on the iPod model.
- **What is an ID3 Tag?**  
This is what is attached to an MP3 to carry information relevant to the file such as the title, artist, album, year, genre and a comment field.
- When the iPod is put into the iPod Dock, the Shuffle function does not work.

# Using an iPod

## WATCHING A MOVIE


You can play video files stored in the iPod player by connecting it to the Blu-ray Home Cinema.

1. Connect the iPod dock connector to the iPod jack on the Blu-ray Home Cinema.
2. In the iPod screen, move to **Videos > Settings** and set the **TV Out** option to **On**.
3. Place the iPod in the Dock.
  - “iPod Connected” message appears on the TV screen.
4. Press the **◀, ▼** buttons on the remote control to select iPod mode.
5. Press the **▶, ▲, ▼** buttons on the remote control to select **Video** and press the **ENTER** button.
6. Press the **▲, ▼** buttons on the remote control to select **Movies** and press the **ENTER** button.
  - The video list appears on your TV.
7. Press the **▲, ▼** buttons to select the video file to play and press the **ENTER** button.
  - Video file of the iPod player will be played on the TV screen.
8. You can use the remote control or main unit to control simple playback functions such as **PLAY, PAUSE, STOP, ⏮ / ⏭** and **⏪ / ⏩**.
  - If you press the **PREV** button within 2 seconds after the playback, the player will play the previous file.
  - If you press the **PREV** button 2 seconds or later after the playback, the player will move to the start screen of the current file.
  - Press the **NEXT** button to play next file.

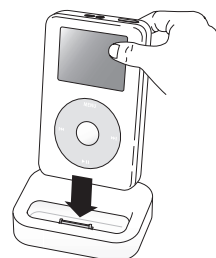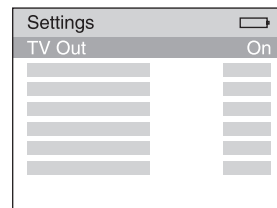

To move to the Video List and select a file:

1. Press the **MENU** or **STOP** button.
  - It stops playing and returns to the video list.
2. Press the **▲, ▼** buttons to select the file you want to play and press the **ENTER** button.
  - Press the **RETURN** or **◀** button to return to the parent menu.

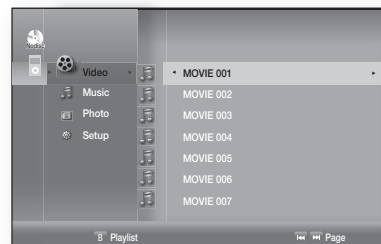

- See page 25 for compatible iPods. Compatibility depends on the software version of your iPod.
- You must have the VIDEO output connected to your TV to view iPod video (See page 23).
- If you want to iPod video via VIDEO output, if HDMI CEC is set to on, turn it off.
- No other screen than the playback one will appear on the TV screen. Check other screens on the iPod player.
- If connected iPod does not support video playback, “Cannot play video files saved on this iPod” message appears when you select the Video menu.

# PC streaming function

## CONNECTING TO A PC AND PLAYING MP3, JPEG OR DIVX CONTENT

The shared folder setup method may be different, depending on the PC operating system.

You can connect the Blu-ray Home Cinema to a PC and play mp3, jpeg or DivX file content in a shared folder. (Refer to pages 28~29 for the connection)

1. Use a router and LAN cable or wireless LAN adapter to connect between the PC and Blu-ray Home Cinema.
2. Create a shared folder in the PC and store desired mp3, jpeg or DivX files there.  
- For more detailed information about setting a shared folder, visit the Samsung website and download the "Setting the shared folder" manual from the Download centre.
3. Press the **MENU** button.
4. Press the **RED(A)** button.

You will see a window where you can select a network search type.






5. Use the ◀ ▶ button to select a network search type.  
A list of shared servers will appear.
  - **Auto** : Automatically searches for an available PC.
  - **Manual** : You must enter the IP address, folder name, windows user name and password before you can find a desired PC.

### 6. To search a shared folder

There are 2 methods to access shared folders on a PC. (If you search a folder in Auto mode, it must contain less than 12 characters. You must select manual to search for folders with 12 or more characters.)


#### • Auto Mode

1. Press the ▲ ▼ buttons to select a desired PC and press the **ENTER** button.  
(When first connected, you must enter the window user name and password to display the shared folder.)
2. Enter the PC's user name in the window.
3. Enter the PC's password in the window.  
The shared folder will be displayed.

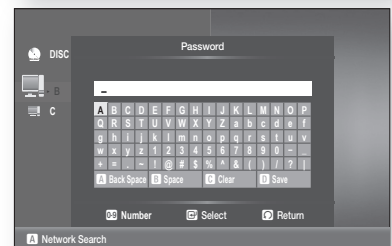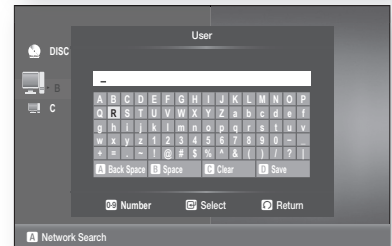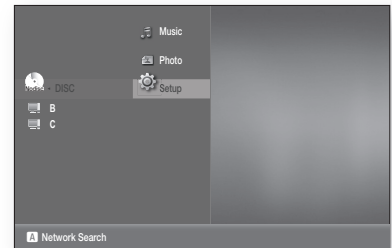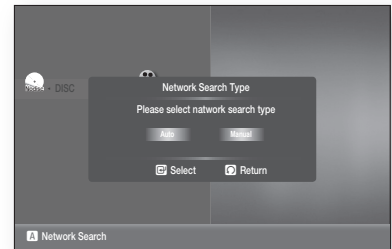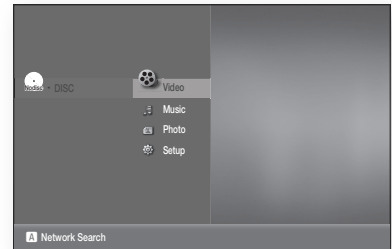


# PC streaming function

4. Press the ▲▼ button to select a desired folder.

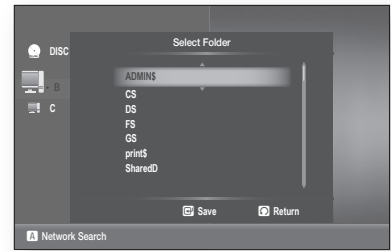


## • Manual Mode


1. Enter in the IP address of the PC that has the shared folders.

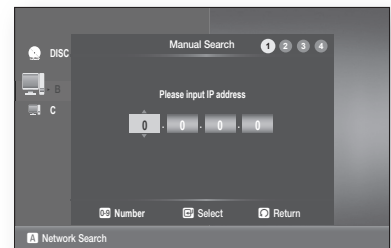

2. Type in the name of the shared folder in the window then press the **BLUE (D)** button to Save.

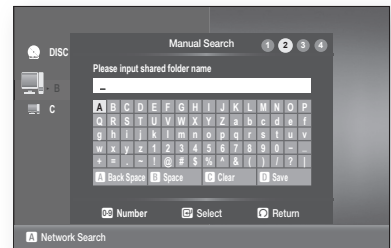

3. Type in the PC's password then press the **BLUE (D)** button to Save.

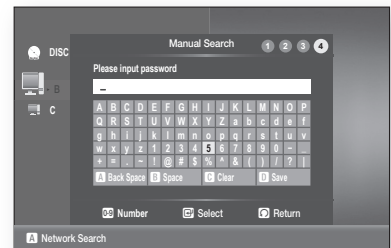

7. Press the ► button, then press the ▲▼ button to select Video, Music or Photo.  
(For playing a Video, Music or Photo, refer to pages 58~70)



- The PC name should be in English, excluding characters such as symbols.
- You can search up to 4 PCs connected to the network to play content over.
- You may experience connection problems depending on your PC environment.
  - If you encounter a problem with "Auto Mode", please try to "Manual Mode".
- If a conflict occurs between Windows XP simple file sharing and the PC streaming function of the Blu-ray Home Cinema, please disable the simple file sharing.
  - For more detailed information, visit the Samsung website and download the "Setting the shared folder" manual from the Download centre.
- If you experience PC streaming function problems when using a shared folder on the desktop of Windows Vista, visit the operating system's technical support site to change a setting or change the directory.

# Convenient function

## SLEEP TIMER FUNCTION


You can set the time that the Blu-ray Home Cinema will shut itself off.

Press the **SLEEP** button.

- Each time the button is pressed, the preset time changes as follows : SLP 10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.

To confirm the sleep timer setting, press the **SLEEP** button.

- The remaining time before the Blu-ray Home Cinema will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

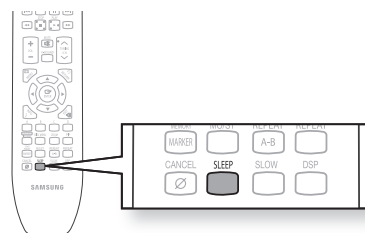


To cancel the sleep timer, press the **SLEEP** button until **OFF** appears on the display.

## ADJUSTING DISPLAY BRIGHTNESS

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press the **DIMMER** button.

- Each time the button is pressed, the brightness of front display will be adjusted.

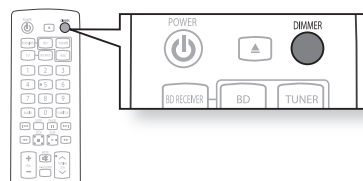


## MUTE FUNCTION

This is useful when answering a doorbell or telephone call.

Press the **MUTE** button.

- **MUTE** appears in the display.
- To restore the sound, press the **MUTE** button again.

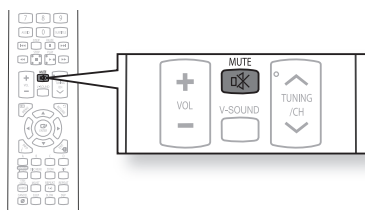

# Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Centre.

SYMPTOM	Check/Remedy
<b>I cannot eject the disc.</b>	<ul style="list-style-type: none"> <li>• Is the power cord plugged securely into the outlet?</li> <li>• Turn off the power and then turn it back on.</li> </ul>
<b>The iPod fails to connect.</b>	<ul style="list-style-type: none"> <li>• Check the condition of the iPod connector and Dock.</li> <li>• Keep the iPod S/W version up to date.</li> </ul>
<b>Playback does not start.</b>	<ul style="list-style-type: none"> <li>• Check the region number of the BD/DVD. BD/DVD discs purchased from abroad may not be playable.</li> <li>• CD-ROMs and DVD-ROMs cannot be played on this Blu-ray Home Cinema.</li> <li>• Make sure that the rating level is correct.</li> </ul>
<b>Playback does not start immediately when the Play/Pause button is pressed.</b>	<ul style="list-style-type: none"> <li>• Are you using a deformed disc or a disc with scratches on the surface?</li> <li>• Wipe the disc clean.</li> </ul>
<b>Sound is not produced.</b>	<ul style="list-style-type: none"> <li>• No sound is heard during fast playback, slow playback, and step motion playback.</li> <li>• Are the speakers connected properly? Is the speaker setup correctly customized?</li> <li>• Is the disc severely damaged?</li> </ul>
<b>Sound can be heard only from a few speakers and not all 3.</b>	<ul style="list-style-type: none"> <li>• On certain BD/DVD discs, sound is output from the front speakers only.</li> <li>• Check if the speakers are connected properly.</li> <li>• Adjust the volume.</li> <li>• When listening to a CD, radio or TV, sound is output to the front speakers only.</li> </ul>
<b>The remote control does not work.</b>	<ul style="list-style-type: none"> <li>• Is the remote control being operated within its operation range of angle and distance?</li> <li>• Are the batteries drained?</li> <li>• Have you selected the mode(TV/BD) functions of the remote control (TV or BD) correctly?</li> </ul>
<ul style="list-style-type: none"> <li>• Disc is rotating but no picture is produced.</li> <li>• Picture quality is poor and picture is shaking.</li> </ul>	<ul style="list-style-type: none"> <li>• Is the TV power on?</li> <li>• Are the video cables connected properly?</li> <li>• Is the disc dirty or damaged?</li> <li>• A poorly manufactured disc may not be playable.</li> </ul>
<b>Audio language and subtitles do not work.</b>	<ul style="list-style-type: none"> <li>• Audio language and subtitles will not work if the disc does not contain them.</li> </ul>
<b>Menu screen does not appear even when the menu function is selected.</b>	<ul style="list-style-type: none"> <li>• Are you using a disc that does not contain menus?</li> </ul>

SYMPTOM	Check/Remedy
Aspect ratio cannot be changed.	<ul style="list-style-type: none"> <li>You can play 16:9 BD/DVDs in 16:9 Wide mode, 4:3 Letter Box mode, or 4:3 Pan - Scan mode, but 4:3 BD/DVDs can be seen in 4:3 ratio only. Refer to the Blu-ray Disc jacket and then select the appropriate function.</li> </ul>
<ul style="list-style-type: none"> <li>The main unit is not working. (Example: The power goes out or a strange noise is heard.)</li> <li>The Blu-ray Home Cinema is not working normally.</li> </ul>	<ul style="list-style-type: none"> <li>Turn off the power, and press and hold the <b>STOP</b> (■) button on the main unit for longer than 5 seconds.</li> <li>- Using the RESET function will erase all stored settings. Do not use this unless necessary.</li> </ul>
The password for rating level has been forgotten.	<ul style="list-style-type: none"> <li>While (NO DISC) message appears on the display of main unit, press and hold the main unit's <b>STOP</b> (■) button for longer than 5 seconds. <b>INITIAL</b> appears on the display and all settings will return to the default values. And then press the <b>POWER</b> button.</li> <li>- Using the RESET function will erase all stored settings. Do not use this unless necessary.</li> </ul>
Can't receive radio broadcasts.	<ul style="list-style-type: none"> <li>Is the antenna connected properly?</li> <li>If the antenna's input signal is weak, install an external FM antenna in an area with good reception.</li> </ul>
While listening to TV audio through the Blu-ray Home Cinema, no sound is heard.	<ul style="list-style-type: none"> <li>If the <b>EJECT</b> (▲) button is pressed while listening to TV audio using the D.IN or AUX functions, the BD/DVD functions are turned on and this mutes the TV audio.</li> </ul>
The Ⓞ icon appears on screen.	<ul style="list-style-type: none"> <li>The features or action cannot be completed at this time because:             <ol style="list-style-type: none"> <li>The BD/DVD's software restricts it.</li> <li>The BD/DVD's software doesn't support the feature (e.g., angles)</li> <li>The feature is not available at the moment.</li> <li>You've requested a title or chapter number or search time that is out of range.</li> </ol> </li> </ul>
If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.	<ul style="list-style-type: none"> <li>Press the <b>STOP</b> (■) button (on the front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.</li> </ul>
No HDMI output.	<ul style="list-style-type: none"> <li>Check the connection between the TV and the HDMI jack of the Blu-ray Home Cinema.</li> <li>Check if your TV supports 576p/480p/720p/1080i/1080p HDMI input resolution.</li> </ul>
Abnormal HDMI output screen.	<ul style="list-style-type: none"> <li>If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).</li> </ul>
Cannot search for other access points using USB wireless.	<ul style="list-style-type: none"> <li>Check the Proxy is Off(Setup -&gt; Network Setup -&gt; Proxy)</li> </ul>

# Appendix


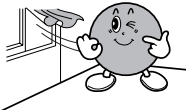

## CAUTIONS ON HANDLING AND STORING DISCS


Small scratches on the disc may reduce sound and picture quality or cause skipping.  
Be especially careful not to scratch discs when handling them.

### Handling discs

Do not touch the playback side of the disc.  
Hold the disc by the edges so that fingerprints will not get on the surface.  
Do not stick paper or tape on the disc.

### Disc Storage


Do not keep in direct sunlight	Keep in a cool ventilated area	Keep in a clean Protection jacket. Store vertically.
		

-  ■ Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

### Handling and Storing Discs

When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc

-  ■ Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

# SPECIFICATIONS

General	Power Consumption	100 W		
	Weight	3.2 Kg		
	Dimensions (W x H x D)	461 (W) x 109 (H) x 193 (D) mm		
	Operating Temperature Range	+5°C to +35°C		
	Operating Humidity Range	10 % to 75 %		
FM Tuner	FM Frequency Range	87.5 ~ 108.0 MHz		
	Signal / noise ratio	70 dB		
	Usable sensitivity	10 dB		
	Total harmonic distortion	0.5 %		
Disc	BD (Blu-ray Disc)	Reading Speed : 4.917m/sec		
	DVD (Digital Versatile Disc)	Reading Speed : 3.49 ~ 4.06 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.		
	CD : 12 cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min.		
	CD : 8 cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 20 min.		
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load) Blu-ray Disc : 576i/480i DVD : 576i/480i		
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load) Blu-ray Disc : 1080i, 720p, 576p/480p, 576i/480i DVD : 576p/480p, 576i/480i		
Video/Audio	HDMI	1080p, 1080i, 720p, 576p/480p PCM multichannel audio, Bitstream audio, PCM audio		
Amplifier	Front speaker output	133W x 2(3Ω)		
	Subwoofer speaker output	134W(3Ω)		
	Frequency response	Analogue input	20Hz~20kHz (±3dB)	
		Digital input	20Hz~44kHz (±3dB)	
	S/N Ratio	70dB		
	Channel separation	60dB		
Input sensitivity	(AUX)500mV			
Speaker	Speaker system	2.1CH speaker system		
		Front	Subwoofer	
	Impedance	3 Ω	3 Ω	
	Frequency range	140Hz~20kHz	40Hz~160Hz	
	Output sound pressure level	87dB/W/M	90dB/W/M	
	Rated input	133W	134W	
	Maximum input	200W	200W	
	Dimensions (W x H x D)	Front : 101 x 230 x 150 mm Subwoofer : 181 x 368 x 396 mm		
Weights	Front : 0.71 Kg Subwoofer : 5.6 Kg			

\*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.

- Weight and dimensions are approximate.

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country	Customer Care Centre ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
VENEZUELA	0-800-100-5303	www.samsung.com/latin	
COLOMBIA	01-8000112112	www.samsung.com.co	
Europe	BELGIUM	02 201 2418	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
	CZECH REPUBLIC	800-SAMSUNG(800-726786)	www.samsung.com/cz
	DENMARK	8-SAMSUNG(7267864)	www.samsung.com/dk
	FINLAND	30-6227 515	www.samsung.com/fin
	FRANCE	01 4863 0000	www.samsung.com/fr
	GERMANY	01805 - SAMSUNG(726-7864 € 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.com/lu
	NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	3-SAMSUNG(7267864)	www.samsung.com/no
	POLAND	0 801 1SAMSUNG(172678), 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	SWEDEN	075-SAMSUNG(726 78 64)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0810-SAMSUNG(7267864, € 0.07/min)	www.samsung.com/at
	SWITZERLAND	0848-SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch
CIS	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.com/lt
	LATVIA	8000-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.com/ee
	AUSTRALIA	1300 362 603	www.samsung.com/au
Asia Pacific	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	800-810-5858, 400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282, 1800 110011, 1-800-3000-8282	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864), 02-5805777	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
Middle East & Africa	TURKEY	444 77 11	www.samsung.com/tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864 )	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae



### **Correct disposal of batteries in this product**

---

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



### **Correct Disposal of This Product (Waste Electrical & Electronic Equipment)**

---

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

