



NZ64H57 Series

Induction Hob

user manual

**Planet
First** **100 %
Recycled Paper**

This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

contents

USING THIS MANUAL

4

- 04 Important safety symbols and precautions

SAFETY INSTRUCTIONS

5

- 05 Safety instructions

DISPOSAL INSTRUCTIONS

9

- 09 Disposing of the packaging material
- 09 Proper disposal of your old appliance
- 09 Correct disposal of this product
(Waste electrical & Electronic equipment)

INSTALLING THE HOB

10

- 10 Safety instructions for the installer
- 11 Connecting to the mains power supply
- 13 Installing into the countertop

PARTS AND FEATURES

16

- 16 Cooking zones
- 16 Control panel
- 17 Components
- 17 Induction heating
- 18 The key features of your appliance
- 19 Safety shutoff
- 20 Residual heat indicator
- 20 Temperature detection

BEFORE YOU BEGIN

21

- 21 Initial cleaning

English - 2

HOB USE

21

- 21 Cookware for induction cooking zones
- 22 Suitability test
- 22 Size of pans
- 22 Operating noises
- 23 Using suitable cookware
- 24 Using the touch control sensors
- 24 Switching the appliance on
- 24 Select cooking zone and heat setting
- 25 Switching the appliance off
- 25 Switching a cooking zone off
- 25 Using the child safety lock
- 26 Timer
- 28 Using ready pan
- 29 Power boost control
- 30 Power management
- 30 Pause
- 31 Bridge control
- 31 Sound On/Off
- 32 Suggested settings for cooking specific foods

CLEANING AND CARE

33

- 33 Hob
- 35 Hob frame (option)
- 35 To avoid damaging your appliance

WARRANTY AND SERVICE

36

- 36 FAQs and troubleshooting
- 38 Service

TECHNICAL DATA

39

- 39 Technical data
- 39 Cooking zones
- 40 Product information

English - 3

using this manual

Please take the time to read this owner's manual, paying particular attention to the safety information contained in the following section, before using your appliance. Keep this manual for future reference. If transferring ownership of the appliance, please remember to pass the manual on to the new owner.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

The following symbols are used in the text of this Owner's Manual :

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your hob, follow these basic safety precaution

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Important

safety instructions

The safety aspects of this appliance comply with all accepted technical and safety standards. However, as manufacturers we also believe it is our responsibility to familiarize you with the following safety instructions.

WARNING

- | | |
|---|---|
|  | This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. |
|  | Children should be supervised to ensure that they do not play with the appliance. |
|  | If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. |
|  | Appliance should allow the disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. |
|  | WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. |
|  | During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the hob. |
|  | WARNING: Accessible parts may become hot during use. Young children should be kept away. |
|  | A steam cleaner is not to be used to clean the product. |
|  | Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot. |
|  | After use, switch off the hob element by its control and do not rely on the pan detector. |

	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the hob glass since they can scratch the surface, which may result in shattering of the glass.
	Appliance is not intended to be operated by means of an external timer or separate remote-control system.
	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements inside the hob. Children less than 8 years of age shall be kept away unless continuously supervised.
	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
	WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
	WARNING: Danger of fire: do not store items on the cooking surfaces.
	The temperature of accessible surfaces may be high when the appliance is operating.
	Keep the appliance and its cord out of reach of children less than 8 years.
	WARNING: Use only hob guards designed by the manufacturer of the cooking appliance. The use of inappropriate guards can cause accidents.

⚠ CAUTION

	Be sure the appliance is properly installed and grounded by a qualified technician.
	The appliance should be serviced only by qualified service personnel. Repairs carried out by unqualified individuals may cause injury or serious malfunction. If your appliance is in need of repair, contact your local service centre. Failure to follow these instructions may result in damage and void the warranty.
	Flush - mounted appliances may be operated only after they have been installed in cabinets and workplaces that conform to the relevant standards. This ensures sufficient protection against contact for electrical units as required by the essential safety standards.
	If your appliance malfunctions or if fractures, cracks or splits appear: - switch off all cooking zones; - disconnect the hob from the mains supply; and - contact your local service centre.
	If the cooktop cracks, turn the appliance off to avoid the possibility of electric shock. Do not use your hob until the glass surface has been replaced.
	Do not use the hob to heat aluminium foil, products wrapped in aluminium foil or frozen foods packaged in aluminium cookware.
	Liquid between the bottom of the pan and the hob can produce steam pressure. Which may cause the pan to jump. Always ensure that the hotplate and the base of the pan are kept dry.
	The cooking zones will become hot when you cook. Always keep small children away from the appliance.
	Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

	This appliance is to be used only for normal cooking and frying in the home. It is not designed for commercial or industrial use.
	Never use the hob for heating the room.
	Take care when plugging electrical appliances into mains sockets near the hob. Mains leads must not come into contact with the cooktop.
	Overheated fat and oil can catch fire quickly. Never leave surface units unattended when preparing foods in fat or oil, for example, when cooking chips.
	Turn the cooking zones off after use.
	Always keep the control panels clean and dry.
	Never place combustible items on the hob, it may cause fire.
	There is the risk of burns from the appliance if used carelessly.
	Cables from electrical appliances must not touch the hot surface of the hob or hot cookware.
	Do not use the hob to dry clothes.
	WARNING : Users with Pacemakers and Active Heart Implants must keep their upper body at a minimum distance of 30 cm from induction cooking zones when turned on. If in doubt, you should consult the manufacturer of your device or your doctor. (Induction hob model only)
	Do not attempt to repair, disassemble, or modify the appliance yourself.
	Always turn the appliance off before cleaning.
	Clean the hob in accordance with the cleaning and care instructions contained in this manual.

disposal instructions



DISPOSING OF THE PACKAGING MATERIAL

All materials used to package the appliance are fully recyclable. Sheet and hard foam parts are appropriately marked. Please dispose of packaging materials and old appliances with due regard to safety and the environment.



PROPER DISPOSAL OF YOUR OLD APPLIANCE

WARNING : Before disposing of your old appliance, make it inoperable so that it cannot be a source of danger. To do this, have a qualified technician disconnect the appliance from the mains supply and remove the mains lead. The appliance may not be disposed of in the household rubbish. Information about collection dates and public refuse disposal sites is available from your local refuse department or council.



CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

installing the hob



Be sure the new appliance is installed and grounded only by qualified personnel.

Please observe this instruction. The warranty will not cover any damage that may occur as a result of improper installation.

Technical data is provided at the end of this manual.

SAFETY INSTRUCTIONS FOR THE INSTALLER

- A device must be provided in the electrical installation that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm. Suitable isolation devices include line protecting cut - outs, fuses (screw type fuses are to be removed from the holder), earth leakage trips and contactors.
- With respect to fire protection, this appliance corresponds to EN 60335 - 2 - 6. This type of appliance may be installed with a high cupboard or wall on one side.
- The installation must guarantee shock protection.
- The kitchen unit in which the appliance is fitted must satisfy the stability requirements of DIN 68930.
- For protection against moisture, all cut surfaces are to be sealed with a suitable sealant.
- On tiled work surfaces, the joints in the area where the hob sits must be completely filled with grout.
- On natural, artificial stone, or ceramic tops, the snap action springs must be bonded in place with a suitable artificial resin or mixed adhesive.
- Ensure that the seal is correctly seated against the work surface without any gaps. Additional silicon sealant must not be applied; this would make removal more difficult when servicing.
- The hob must be pressed out from below when removed.
- A board can be installed underneath the hob.
- The ventilation gap between the worktop and front of the unit underneath it must not be covered.

CONNECTING TO THE MAINS POWER SUPPLY

Before connecting, check that the nominal voltage of the appliance, that is, the voltage stated on the rating plate, corresponds to the available supply voltage. The rating plate is located on the lower casing of the hob.



WARNING

Shut off power to circuit before connecting wires to circuit.

The heating element voltage is AC 230 V~. The appliance also works perfectly on networks with AC 220 V~ or AC 240 V~. The hob is to be connected to the mains using a device that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm, eg. automatic line protecting cut - out, earth leakage trips or fuse.



WARNING

The cable connections must be made in accordance with regulations and the terminal screws tightened securely.



WARNING

Once the hob is connected to the mains supply, check that all cooking zones are ready for use by briefly switching each on in turn at the maximum setting with suitable cookware.



When the hob is powered on for the first time, all displays light and the child safety lock is activated.



WARNING

Pay attention (conformity) to phase and neutral allocation of house connection and appliance (connection schemes); otherwise, components can be damaged.


Warranty does not cover damage resulting from improper installation.




WARNING

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


• 1N ~

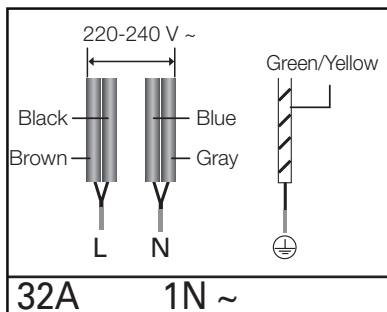

• 2N ~ : Separate the 2-phase wires (L1 and L2) before connection.

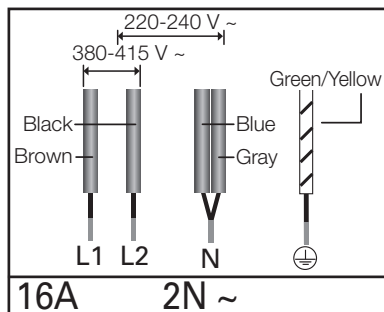


2 x 1N ~ : Separate the wires before connection.

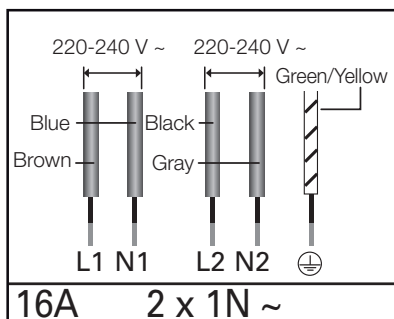



For correct supply connection, follow the wiring diagram attached near the terminals.



INSTALLING INTO THE COUNTERTOP




- Make a note of the serial number on the appliance rating plate prior to installation. This number will be required in the case of requests for service and is no longer accessible after installation, as it is on the original rating plate on the underside of the appliance.

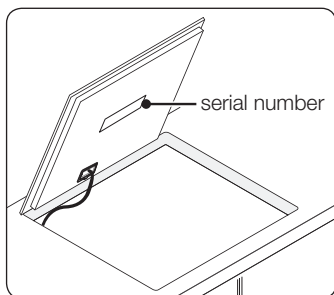

- Pay special attention to the minimum space and clearance requirements.
- The bottom of the hob is equipped with two fans. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

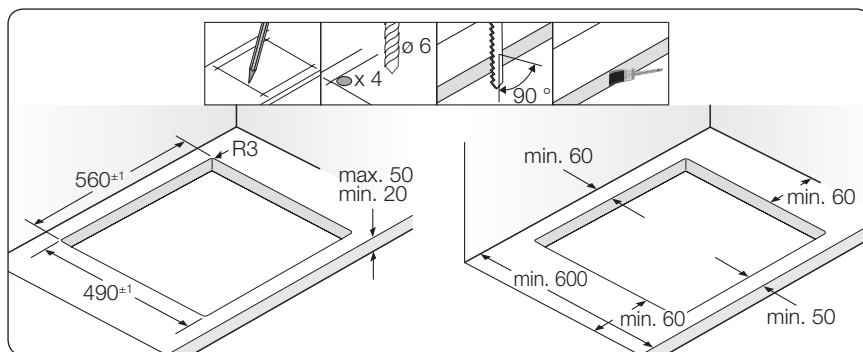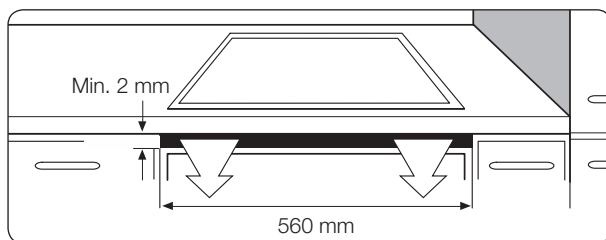


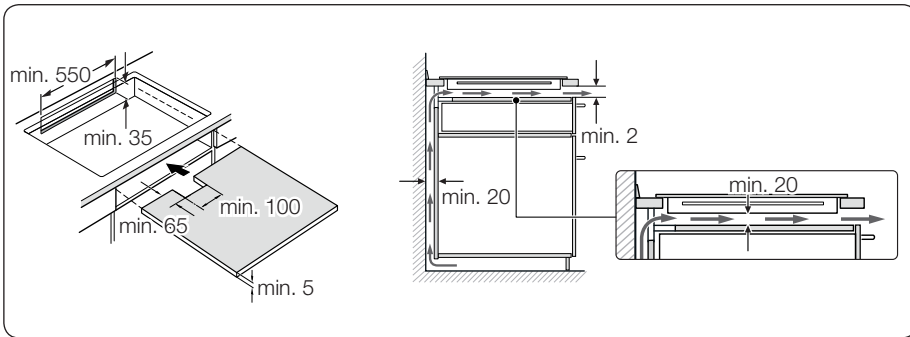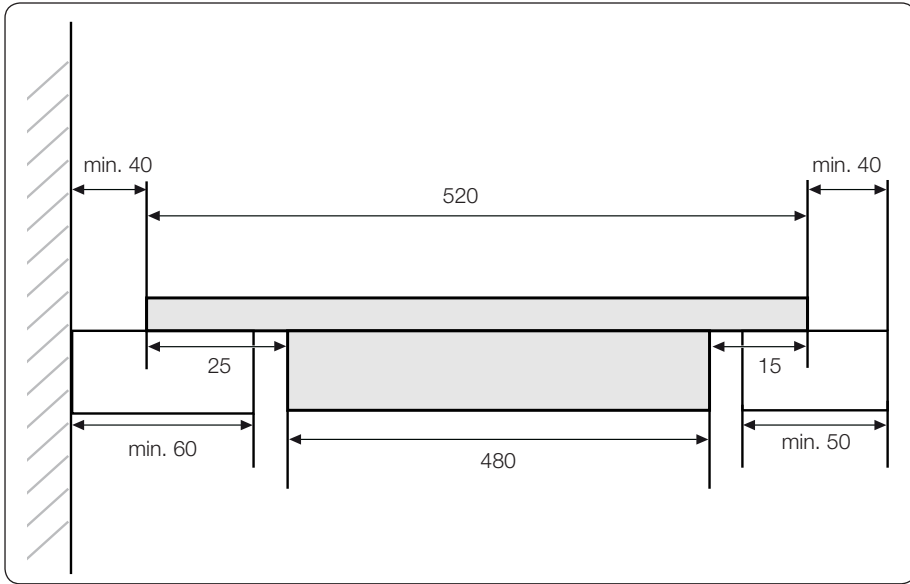

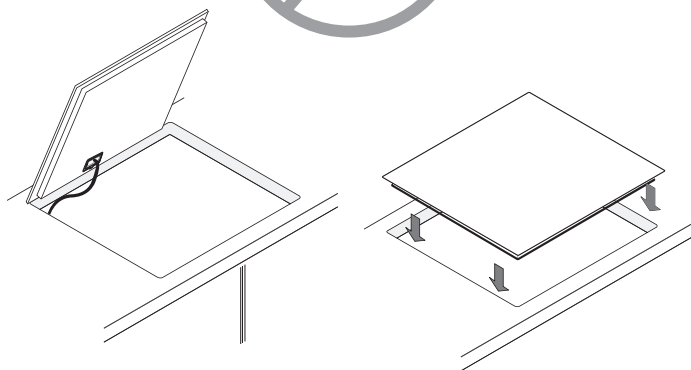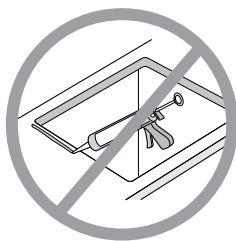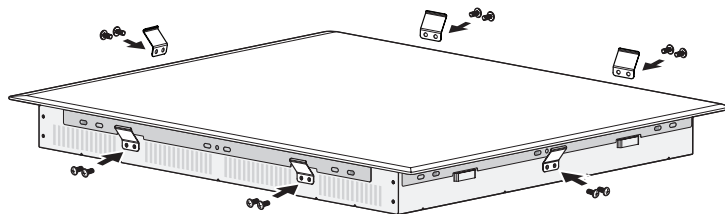


parts and features

COOKING ZONES

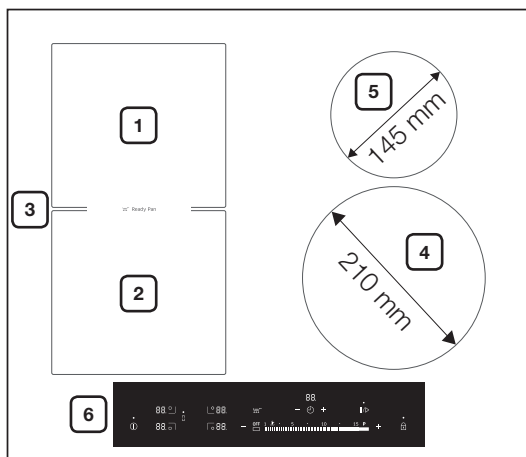

1. Induction rear Bridge zone 1800 W with Power Boost 2600 W
2. Induction front Bridge zone 1800 W with Power Boost 2600 W
3. Induction complete Bridge zone 3300 W with Power Boost 3600 W
4. Induction cooking zone 2200 W with Power Boost 3200 W
5. Induction cooking zone 1200 W with Power Boost 2000 W
6. Control panel


CONTROL PANEL

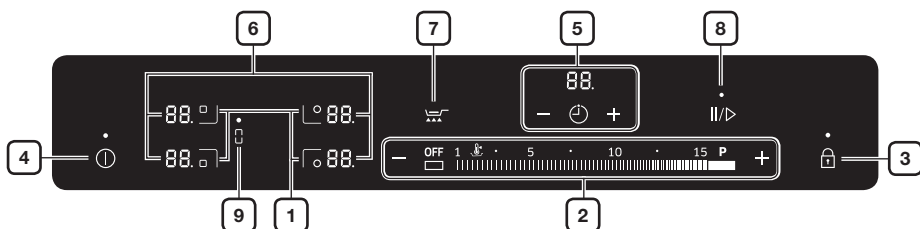

1. Cooking zone selectors
2. Heat setting selectors
3. Lock control sensor
4. On/Off control sensor

5. Timer control sensor and indicator
6. Indicators for heat settings and residual heat
7. Ready Pan
8. Pause
9. Complete Bridge zone selector


COMPONENTS

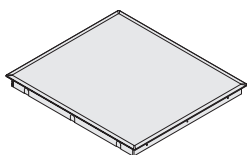

Induction hob



 
Bracket Spring



Screws

INDUCTION HEATING

- **The Principle of Induction Heating:** When you place your cookware on a cooking zone and you turn it on, the electronic circuits in your induction hob produce “induced currents” in the bottom of the cookware which instantly raise cookware’s temperature.

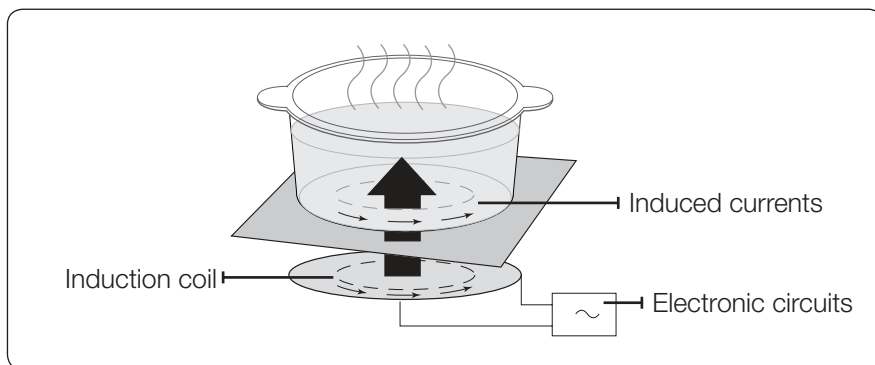

- **Greater speed in cooking and frying:** As the pan is heated directly and not the glass, the efficiency is greater than in other systems because no heat is lost. Most of the energy absorbed is transformed into heat.

THE KEY FEATURES OF YOUR APPLIANCE

- **Ceramic glass cooking surface** : The appliance has a ceramic glass cooking surface and four rapid - response cooking zones.
- **Touch control sensors** : Your appliance is operated using touch control sensors.
- **Easy cleaning** : One advantage of the ceramic glass cooking surface and the control sensors is their accessibility. The smooth, flat surface is easy to clean.
- **On/Off sensor** : The “On/Off” control sensor provides the appliance with a separate mains switch. Touching this sensor switches the power supply on or off completely.
- **Control and function indicators** : Digital displays and indicator lights provide information about settings and activated functions, as well as the presence of residual heat in the various cooking zones.
- **Safety shutoff** : A safety shutoff ensures that cooking zones switch off automatically after a period of time if the setting has not been changed.
- **Power Boost ** : Use this function to heat up the contents of the pan faster than maximum power level ''. (The display will show ''.)
- **Residual heat indicator** : An icon for residual heat appears in the display if the cooking zone is so hot that there is a risk of burning.
- **Auto Pan-Detection** : Each cooking zone incorporates an automatic pan-detection system, the system is calibrated in order to recognize pans of a diameter just slightly smaller than the cooking zone. Pans must always be placed centrally on each cooking zone. And you should use suitable cookware.
- **Digital displays** :
 -  the appliance has been switched on
 -  to ,  selected heat settings
 -  residual heat (Stay Hot)
 -  residual heat
 -  the child lock is activated
 -  error message, the touch sensor button has been touched for longer than 8 seconds.

- error message, when the hob is overheated because of abnormal operation. (example : operation with empty cookware)
- message, cookware is unsuitable or too small or no cookware has been placed on the cooking zone.
- **Pause** : Use this function to switch all cooking zones on to the low power setting. (example : to take a telephone call)
The display will show ''.
- **Complete Bridge zone selector** : Use this function to expand cooking zone into complete left side.
- **Ready Pan** : Use this function to preheat the pan.

SAFETY SHUTOFF

If one of the cooking zones is not switched off or the heat setting is not adjusted after an extended period of time, that particular cooking zone will automatically switch itself off.

Any residual warmth will be indicated with , (for “hot”) in the digital displays corresponding to the particular cooking zones.

The cooking zones switch themselves off at the following times.

Heat setting	Switch off
1-3	After 6 hours
4-6	After 5 hours
7-9	After 4 hours
10-15	After 1.5 hours

- If the Hob is overheated because of abnormal operation, will be displayed. And the Hob will be switched off.
- If cookware is unsuitable or too small or no cookware has been placed on the cooking zone, will be displayed.
And after 1 minute the corresponding cooking zone will be switched off.
- Should one or more of the cooking zones switch off before the indicated time has elapsed, see the section “Troubleshooting”.

Other reasons why a cooking zone will switch itself off

All cooking zones will switch themselves off if liquid boils over and lands on the control panel.

The automatic shutoff will also be activated if you place a damp cloth on the control panel. In both of these instances, the appliance will need to be switched on again using the main **On/Off control** ① sensor after the liquid or the cloth has been removed.

RESIDUAL HEAT INDICATOR

When an individual cooking zone or the hob is turned off, the presence of residual heat is shown with an **H**, **H** (for “hot”) in the digital display of the appropriate cooking zones. Even after the cooking zone has been switched off, the residual heat indicator goes out only after the cooking zone has cooled.

You can use the residual heat for thawing or keeping food warm.

 **WARNING** As long as the residual heat indicator is illuminated, there is a risk of burns.

 **WARNING** If the power supply is interrupted, the **H**, **H** symbol will go out and information about residual heat will no longer be available. However, it may still be possible to burn yourself. This can be avoided by always taking care when near the hob.

TEMPERATURE DETECTION

If for any reason the temperatures on any of the cooking zones were to exceed the safety levels, should this happen then the cooking zone will automatically reduce to a lower power level. When you have finished using the hob, the cooling fan will continue to run until the hob's electronics has cooled down. And the cooling fan switched itself off depending upon the temperature of the electronics.

before you begin

INITIAL CLEANING

Wipe the ceramic glass surface with a damp cloth and ceramic cooktop glass cleaner.

 **WARNING** Do not use caustic or abrasive cleaners. The surface could be damaged.

hob use

COOKWARE FOR INDUCTION COOKING ZONES

The induction hob can only be turned on when cookware with a magnetic base is placed on one of the cooking zones. You can use the following suitable cookware.


Cookware material

Cookware material	Suitable
Steel, Enamelled steel	Yes
Cast iron	Yes
Stainless steel	If appropriately labelled by the manufacturer
Aluminium, Copper, Brass	No
Glass, Ceramic, Porcelain	No

-  Cookware for induction hob is labelled as suitable by the manufacturer.
-  Certain cookware can make noise when being used on induction cooking zones. These noise are not a fault in the appliance and do not affect operation in any way.

SUITABILITY TEST

Cookware is suitable for induction cooking, if a magnet sticks to the bottom of the cookware and cookware is labelled as suitable by the cookware manufacturer.

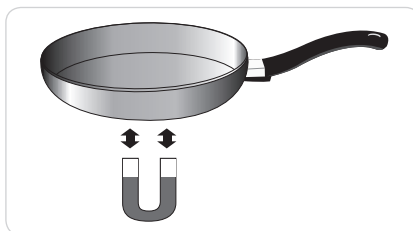

-  Induction cooking may not function properly on nonferrous cookware whose edge doesn't stick to the magnet, or on nonferrous cookware whose bottom is iron-coated.

SIZE OF PANS

Induction cooking zones adapt automatically to the size of the bottom of the cookware up to a certain limit. However the magnetic part of the bottom of the cookware must have a minimum diameter depending upon the size of the cooking zone.

Diameter of cooking zones	Minimum diameter of the bottom of the cookware
210 mm	140 mm
145 mm	100 mm
Front or Rear Bridge	120 mm
Complete Bridge	180 mm (long side dimension), oval, fish kettle

OPERATING NOISES

If you can hear.

- Cracking noise : cookware is made of different materials.
- Whistling : you use more than two cooking zones and the cookware is made of different materials.
- Humming : you use high power levels.
- Clicking : electric switching occurs.
- Hissing, Buzzing : the fan operates.

The noise are normal and do not refer to any defects.

USING SUITABLE COOKWARE

Better pans produce better results.

- You can recognise good pans by their bases. The base should be as thick and flat as possible.
- When buying new pans, pay particular attention to the diameter of the base. Manufacturers often give only the diameter of the upper rim.
- Do not use pans which have damaged bases with rough edges or burrs. Permanent scratching can occur if these pans are slid across the surface.
- When cold, pan bases are normally bowed slightly inwards (concave). They should never be bowed outwards (convex).
- If you wish to use a special type of pan, for example, a pressure cooker, a simmering pan, or a wok, please observe the manufacturer's instructions.


Energy saving tips

 You can save valuable energy by observing the following points.

- Always position pots and pans before switching on the cooking zone.
- Dirty cooking zones and pan bases increase power consumption.
- When possible, position the lids firmly on the pots and pans to cover completely.
- Switch the cooking zones off before the end of the cooking time to use the residual heat for keeping foods warm or for thawing.



Right!

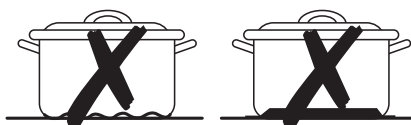

Wrong!



USING THE TOUCH CONTROL SENSORS

To operate the touch control sensors, touch the desired panel with the tip of your pointed finger until the relevant displays illuminate or go out, or until the desired function is activated.


Ensure that you are touching only one sensor panel when operating the appliance. If your finger is too flat on the panel, an adjacent sensor may be actuated as well.

SWITCHING THE APPLIANCE ON

1. The appliance is switched on using the **On/Off control** ① sensor.

Touch the **On/Off control** ① sensor for approximately 1~2 seconds.


The digital displays will show .

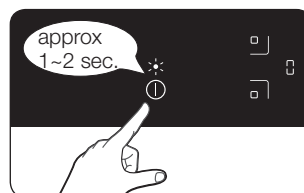


-  After the **On/Off control** ① sensor has been actuated to switch on your appliance, a heat setting must be selected within approximately 20 seconds. Otherwise, the appliance will switch itself off for safety reasons.

SELECT COOKING ZONE AND HEAT SETTING

1. For selecting the cooking zone, touch the corresponding cooking zone's sensor.

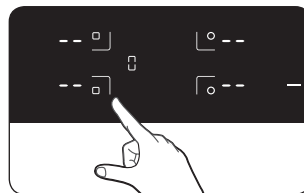

2. For setting and adjusting the power level, touch the **Heat setting selectors**.

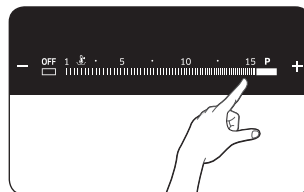


-  The default level is set to 15 when selecting the cooking zone.
-  To keep food warm, select an appropriate cooking zone and tap the slider bar under **Keep warm** .

- ✎ If more than one sensor is pressed for longer than 8 seconds, **SE** will show in the heat setting display. To reset, touch the **On/Off control** ① sensor.

SWITCHING THE APPLIANCE OFF

To completely switch off the appliance, use the **On/Off control** ① sensor.


Touch the **On/Off control** ① sensor for approximately 1~2 seconds.

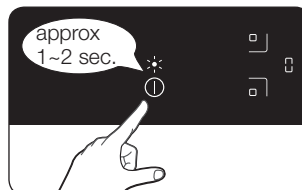

- ✎ After switching off a single cooking zone or the entire cooking surface, the presence of residual heat will be indicated in the digital displays of the corresponding cooking zones in the form of an **H** or **h** (for “hot”).

SWITCHING A COOKING ZONE OFF

1. Select the cooking zone and then touch **OFF** sensor.

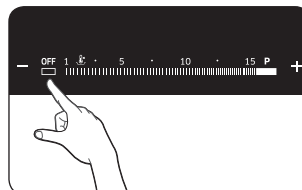


USING THE CHILD SAFETY LOCK

You can use the child safety lock to safeguard against unintentionally turning on a cooking zone and activating the cooking surface. Also the control panel, with the exception of the **On/Off control** ① sensor, can be locked in order to prevent the settings from being changed unintentionally, for example, by wiping over the panel with a cloth.

Switching the child safety lock on / off


1. Touch the **Lock control**  sensor for approximately 3 seconds.

An acoustic signal will sound as confirmation.

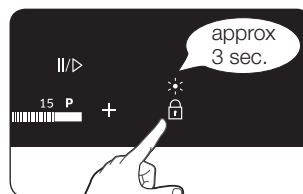

2. Touch **any control** sensor.

 will appear in the displays, indicating the child safety lock has been activated.

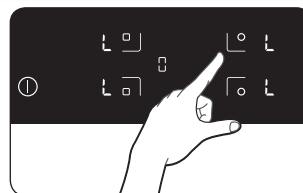

3. For switching the child safety lock off, touch the **Lock control**  sensor again for 3 seconds.

An acoustic signal will sound as confirmation.

TIMER

There are two ways to use the timer:

Using the timer as a safety shutoff:

If a specific time is set for a cooking zone, the cooking zone will shut itself off once this period of time has elapsed. This function can be used for multiple cooking zones simultaneously.


Using the timer to count up timer:

The count up timer cannot be used if a cooking zone use timer as a safety shutoff.

Setting the safety shutoff


The cooking zone(s) for which you want to apply the safety shutoff must be switched on.

1. After switched on, press the corresponding cooking zone to activate the flash signal for the corresponding cooking zone display.

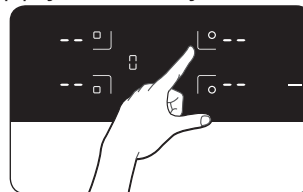

2. Press **Timer control**  sensor.

The number 10 will be displayed above the timer display.

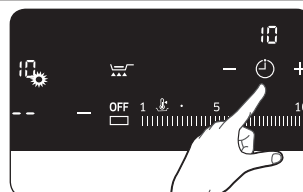

3. Use the **Timer setting selectors** (+ or -) to set the desired amount of time, for example, 15 minutes, after which the cooking zone will automatically switch itself off. The safety shutoff is now activated.



4. To cancel the timer settings, select the target burner and hold down the **Timer control** (⌚) sensor for 3 seconds. This will cancel the burner's timer settings with a beep.



If holding down the **Timer control** (⌚) sensor for 3 seconds without selecting a burner, this will cancel the timer settings of the last changed burner.

To display the time remaining for any of the cooking zones, use the **Timer control** (⌚) sensor.

The corresponding control indicator will begin to blink slowly. The settings are reset using the **Timer setting selectors** (+ or -). After the set period of time has elapsed, the cooking zone automatically switches itself off, an acoustic signal sounds as confirmation and the timer display indicates.


- ☞ If you tap the **Timer control** (⌚) sensor without selecting a cooking zone, the display turns on but no timer settings is applied.
- ☞ To change the settings quicker, touch and hold any of the (+ or -) **control** sensors until the desired value is reached.

Count up timer


For the count up timer to be used, the appliance must be switched on but all the cooking zones must do not use timer as a safety shutoff.

1. Touch the **Timer control** ⌚ sensor.


00 will appear in the timer display.

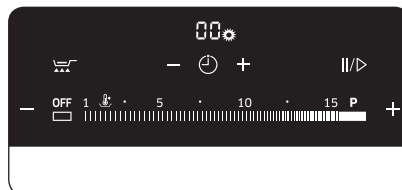

2. The count up timer function becomes active and the display numbers increase over time. To cancel the timer settings, hold down the **Timer control** ⌚ sensor for 3 seconds.

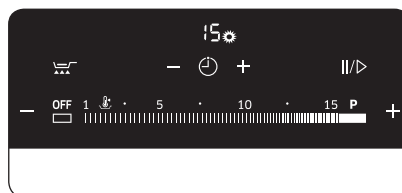

3. To stop the timer, touch the **Timer control** ⌚ sensor.

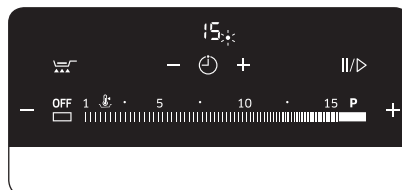


USING READY PAN


Use Ready Pan to preheat the pan.

Switching the Ready Pan for Complete Bridge zone

1. After switching the appliance on, touch the **Ready Pan** 🍳 sensor.

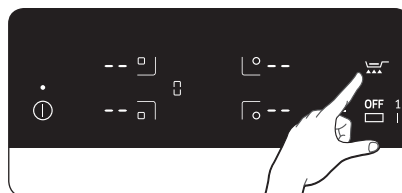


2. The **PA** indication appears in both Bridge zones. The product starts operating in boosted power for approximately 50 seconds, and then the power level automatically changes to 9.

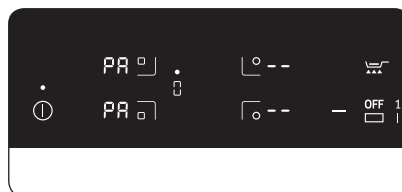


Switching the Ready Pan Front or Rear Bridge zone

1. Turn on the power and touch either the front or rear Bridge zone sensor.

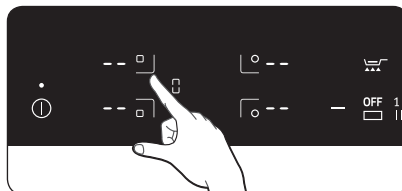

2. Touch **Ready Pan**  sensor to display the **PR** indication in the selected Bridge zone. The product starts operating in boosted power for approximately 50 seconds, and then the power level automatically changes to 9.

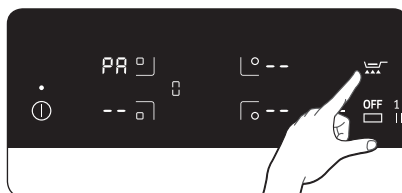

-  This function is available only in the Bridge zone.
-  The pan-bottom preheating temperature depends on the pan. If the preheating temperature is not satisfiable, adjust the power level to increase the temperature as appropriate.

POWER BOOST CONTROL

The power boost function **P** makes additional power available to the cooking zones. (example : bring a large volume of water to the boil)

Cooking zones	Max Boost time
210 mm	10 min
145 mm	10 min
Front or Rear Bridge	10 min
Complete Bridge	5 min

After these times, the cooking zones automatically return to power level .


-  In certain circumstances, the Power boost function may be deactivated automatically to protect the internal electronic components of the hob.

POWER MANAGEMENT

The cooking zones have a maximum power available to them.

If this power range is exceeded by switching on the power boost function, Power Management automatically reduced the heat setting of cooking zone.

- Left side : No.1 and No.2 is paired cooking zone
- Right side : No.3 and No.4 is paired cooking zone

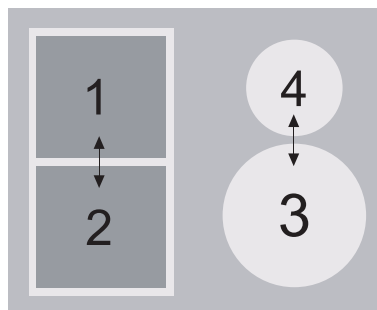

The indicator for this cooking zone alternates for some seconds between the set heat setting and the maximum possible heat setting. After then, the indicator changes from the set heat setting to maximum possible heat setting.

PAUSE

The **PAUSE** ||/> function simultaneously switches all cooking zones that are switched on to the low power setting and then back to the heat setting that was previously set. This function can be used to briefly interrupt and then continue the cooking process e.g. to take a telephone call.

When the **PAUSE** ||/> function is activated, all touch sensors except for the '**PAUSE**', '**Lock**' and the '**On/Off**' control sensors are disabled. To resume cooking, touch the **PAUSE** ||/> sensor again.


	Control Panel	Display
To Switch on	Touch PAUSE />	
To Switch off	Touch PAUSE />	Return to previous power level

Timer functions are not stopped by **PAUSE** ||/>.

BRIDGE CONTROL

The bridge function can operate complete left side cooking zone for using large size cookware. (example : oval cookware, fish kettle)

1. Touch the complete **Bridge** zone sensor.

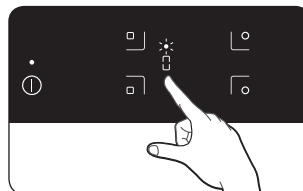


2. Touch the heat setting selectors (+ or -).
Heat setting display of left side (front, rear) will be changed together.




SOUND ON/OFF


1. Touch the **On/Off control** (ⓘ) sensor for approximately 1~2 seconds.
The digital displays will show **OF**.

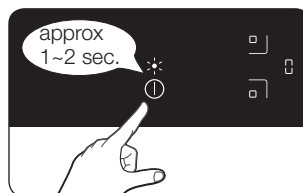


2. Touch the **PAUSE** (||>) sensor for 3 seconds within 20 seconds after Power On.

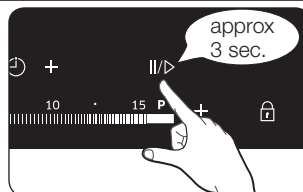

3. Sound will OFF and **OF** will show in the displays.

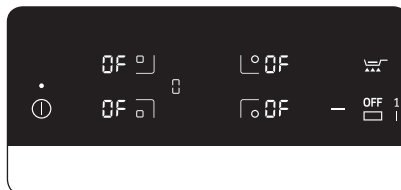

4. To change Sound setting, repeat No1 and No2 procedure.
Sound will ON and **ON** will show in the displays.

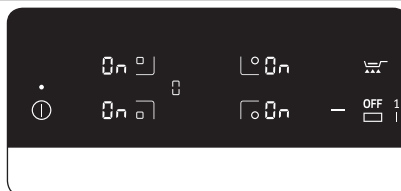

SUGGESTED SETTINGS FOR COOKING SPECIFIC FOODS

The figures in the table below are guidelines. The heat settings required for various cooking methods depend on a number of variables, including the quality of the cookware being used and the type and amount of food being cooked.

Switch Setting	Cooking method	Examples for Use
14-15	Warming Sautéing Frying	Warming large amounts of liquid, boiling noodles, searing meat, (browning goulash, braising meat)
10-13	Intensive Frying	Steak, sirloin, hash browns, sausages, pancakes / griddle cakes
8-9	Frying	Schnitzel / chops, liver, fish, rissoles, fried eggs
6-7	Boiling	Cooking up to 1.5 l liquid, potatoes, vegetables
3-5	Steaming Stewing Boiling	Steaming and stewing of small amounts of vegetables, boiling rice and milk dishes
1-2	Melting	Melting butter, dissolving gelatine, melting chocolate

-  The heat settings indicated in the table above are provided only as guidelines for your reference.
-  You will need to adjust the heat settings according to specific cookware and foods.

cleaning and care

HOB

 **WARNING** Cleaning agents must not come into contact with a heated ceramic glass surface: All cleaning agents must be removed with adequate amounts of clean water after cleaning because they can have a caustic effect when the surface becomes hot. Do not use any aggressive cleaners such as grill or oven sprays, scouring pads or abrasive pan cleaners.

 Clean the ceramic glass surface after each use when it is still warm to the touch. This will prevent spillage from becoming burnt onto the surface. Remove scales, watermarks, fat drippings and metallic discolouration with the use of a commercially available ceramic glass or stainless steel cleaner.


Light Soiling

1. Wipe the ceramic glass surface with a damp cloth.
2. Rub dry with a clean cloth. Remnants of cleaning agent must not be left on the surface.
3. Thoroughly clean the entire ceramic glass cooking surface once a week with a commercially available ceramic glass or stainless steel cleaner.
4. Wipe the ceramic glass surface using adequate amounts of clean water and rub dry with a clean lint - free cloth.

Stubborn Soiling

1. To remove food that has boiled over and stubborn splashes, use a glass scraper.
2. Place the glass scraper at an angle to the ceramic glass surface.
3. Remove soiling by scraping with the blade.

 Glass scrapers and ceramic glass cleaners are available from specialty retailers.

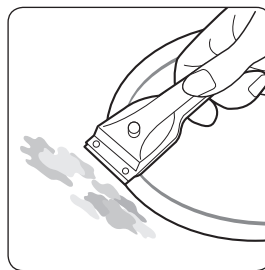

Problem Dirt


1. Remove burnt-on sugar, melted plastic, aluminium foil or other materials with a glass scraper immediately and while still hot.



There is a risk of burning yourself when the glass scraper is used on a hot cooking zone:

2. Clean the hob as normal when it has cooled down.
If the cooking zone on which something has melted has been allowed to cool, warm it up again for cleaning.

 Scratches or dark blemishes on the ceramic glass surface, caused, for example, by a pan with sharp edges, cannot be removed. However, they do not impair the function of the hob.

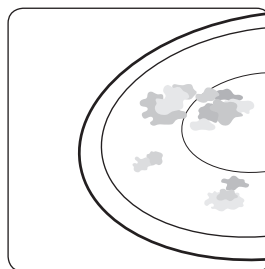

HOB FRAME (OPTION)

 **WARNING** Do not use vinegar, lemon juice or scale remover on the hob frame; otherwise dull blemishes will appear.

1. Wipe the frame with a damp cloth.
2. Moisten dried debris with a wet cloth. Wipe and rub dry.

TO AVOID DAMAGING YOUR APPLIANCE

- Do not use the hob as a work surface or for storage.
- Do not operate a cooking zone if there is no pan on the hob or if the pan is empty.
- Ceramic glass is very tough and resistant to temperature shock, but it is not unbreakable. It can be damaged by a particularly sharp or hard object dropping onto the hob.
- Do not place pans on the hob frame. Scratching and damage to the finish may occur.
- Avoid spilling acidic liquids, for example, vinegar, lemon juice and descaling agents, onto the hob frame, since such liquids can cause dull spots.
- If sugar or a preparation containing sugar comes into contact with a hot cooking zone and melts, it should be cleaned off immediately with a kitchen scraper while it is still hot. If allowed to cool, it may damage the surface when removed.
- Keep all items and materials that could melt, for example, plastics, aluminium foil and oven foils, away from the ceramic glass surface. If something of this nature melts onto the hob, it must be removed immediately with a scraper.

warranty and service

FAQS AND TROUBLESHOOTING

A fault may result from a minor error that you can correct yourself with the help of the following instructions. Do not attempt any further repairs if the following instructions do not help in each specific case.



WARNING

Repairs to the appliance are to be performed only by a qualified service technician. Improperly effected repairs may result in considerable risk to the user. If your appliance needs repair, please contact your customer service centre.

What should I do if the cooking zones are not functioning?

Check for the following possibilities:

- The fuse in the house wiring (fuse box) is intact. If the fuses trip a number of times, call an authorised electrician.
- The appliance is properly switched on.
- The control indicators in the control panel are illuminated.
- The cooking zone is switched on.
- The cooking zones are set at the desired heat settings.

What should I do if the cooking zones will not switch on?

Check for the following possibilities:

- A period of more than 20 seconds has elapsed between when the On/Off button was actuated and the desired cooking zone switches on (see the section "Switching the appliance on").
- The control panel is partially covered by a damp cloth or liquid.

What should I do if the display except for , the residual warmth indicator suddenly disappears?

This could be a result of one of two possibilities:

- The On/Off sensor was accidentally actuated.
- The control panel is partially covered by a damp cloth or liquid.

What should I do if, after the cooking zones have been switched off, residual warmth is not indicated in the display?

Check for the following possibility:

- The cooking zone was only briefly used and therefore did not become hot enough. If the cooking zone is hot, please call the customer service centre.

What should I do if the cooking zone will not switch on or off?

This could be due to one of the following possibilities:

- The control panel is partially covered by a damp cloth or liquid.
- The child safety lock is on.

What should I do if the   display is illuminated?

Check for the following:

- The control panel is partially covered by a damp cloth or liquid. To reset, press the “On/Off” control sensor.

What should I do if the   display is illuminated?

Check for the following:

- The hob is overheated because of abnormal operation.
- After hob is cooled down, press the “On/Off” control sensor for resetting.

What should I do if the  display is illuminated?

Check for the following:

- Cookware is unsuitable or too small or no cookware has been placed on the cooking zone.
- If you use suitable cookware, displayed message will automatically disappear.

What should I do if the cooling fan runs after the hob is turned off?

Check for the following:

- When you have finished using the hob, the cooling fan runs by itself for cooling down.
- After the hob's electronics has cooled down, the cooling fan will be turned off.

If you request a service call because of an error made in operating the appliance, the visit from the customer service technician may incur a charge even during the warranty period.

SERVICE

Before calling for assistance or service, please check the section “Troubleshooting”.

If you still need help, follow the instructions below.

Is it a technical fault?

If so, please contact your customer service centre.

Always prepare in advance for the discussion. This will ease the process of diagnosing the problem and also make it easier to decide if a customer service visit is necessary.

Please take note of the following information.

- What form does the problem take?
- Under what circumstances does the problem occur?

When calling, please know the model and serial number of your appliance. This information is provided on the rating plate as follows:

- Model description
- S/N code (15 digits)

We recommend that you record the information here for easy reference.

Model: _____

Serial number: _____

When do you incur costs even during the warranty period?

- If you could have remedied the problem yourself by applying one of the solutions provided in the section “Troubleshooting”.
- If the customer service technician has to make several service calls because he was not provided with all of the relevant information before his visit and as a result, for example, has to make additional trips for parts. Preparing for your phone call as described above will save you the cost of these trips.

technical data

TECHNICAL DATA

Appliance dimensions	Width	600 mm
	Depth	520 mm
	Height	56 mm
Worktop cut - out dimensions	Width	560 mm
	Depth	490 mm
	Corner radius	3 mm
Connection voltage		220 - 240 V ~ 50 / 60 Hz
Maximum connected load power		7.2 kW
Weight	Net	13.3 kg
	Gross	15.5 kg

08 TECHNICAL DATA

COOKING ZONES

Position	Diameter	Power
Rear Right	145 mm	1200 W / Boost 2000 W
Right Front	210 mm	2200 W / Boost 3200 W
Front Bridge	-	1800 W / Boost 2600 W
Rear Bridge	-	1800 W / Boost 2600 W
Complete Bridge	-	3300 W / Boost 3600 W

PRODUCT INFORMATION

Supplier's name	Samsung Electronics co. Ltd.
Model identification	NZ64H57479K NZ64H57477K
Type of hob	Built-In
Heating technology	Induction cooking zones and cooking area
Number of cooking zones and/or area	3
For circular cooking zones or area: diameter of useful surface area per electric heated cooking zone (Ø)	14.5 cm, 21.0 cm
For non-circular cooking zones or area: length and width of useful surface area per electric heated cooking zone or area (L x W)	38.0 x 20.0 cm
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	Ø 14.5 cm : 186.4 Wh/kg Ø 21.0 cm : 179.4 Wh/kg 38.0 x 20.0 cm : 194.7 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	186.8 Wh/kg

* Data determined according to standard EN 60350-2 and Commission Regulations (EU) No 66/2014.

Energy saving tips

- Always position pots and pans before switching on the cooking zone.
- Dirty cooking zones and pan bases increase power consumption.
- Using a pressure cooker reduces cooking time.

English - 40

memo

08 TECHNICAL DATA

memo

memo



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0800 - SAMSUNG (0800 - 7267864)	www.samsung.com/at/support
BELGIUM	02-201-24-18	www.samsung.com/be/support (Dutch) www.samsung.com/be_fr/support (French)
DENMARK	70 70 19 70	www.samsung.com/dk/support
FINLAND	030-6227 515	www.samsung.com/fi/support
FRANCE	01 48 63 00 00	www.samsung.com/fr/support
GERMANY	0180 6 SAMSUNG bzw. 0180 6 7267864* (*0,20 €/Anruf aus dem dt. Festnetz, aus dem Mobilfunk max. 0,60 €/Anruf)	www.samsung.com/de/support
ITALIA	800-SAMSUNG (800.7267864)	www.samsung.com/it/support
CYPRUS	8009 4000 only from landline, toll free	www.samsung.com/gr/support
GREECE	80111-SAMSUNG (80111 726 7864) only from land line (+30) 210 6897691 from mobile and land line	
LUXEMBURG	261 03 710	www.samsung.com/support
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl/support
NORWAY	815 56480	www.samsung.com/no/support
PORTUGAL	808 20 7267	www.samsung.com/pt/support
SPAIN	0034902172678	www.samsung.com/es/support
SWEDEN	0771 726 7864 (SAMSUNG)	www.samsung.com/se/support
SWITZERLAND	0800 726 78 64 (0800-SAMSUNG)	www.samsung.com/ch/support (German) www.samsung.com/ch_fr/support (French)
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support
EIRE	0818 717100	www.samsung.com/ie/support

DG68-00559A-01